


# INSTRUCTION MANUAL

## SH SERIES

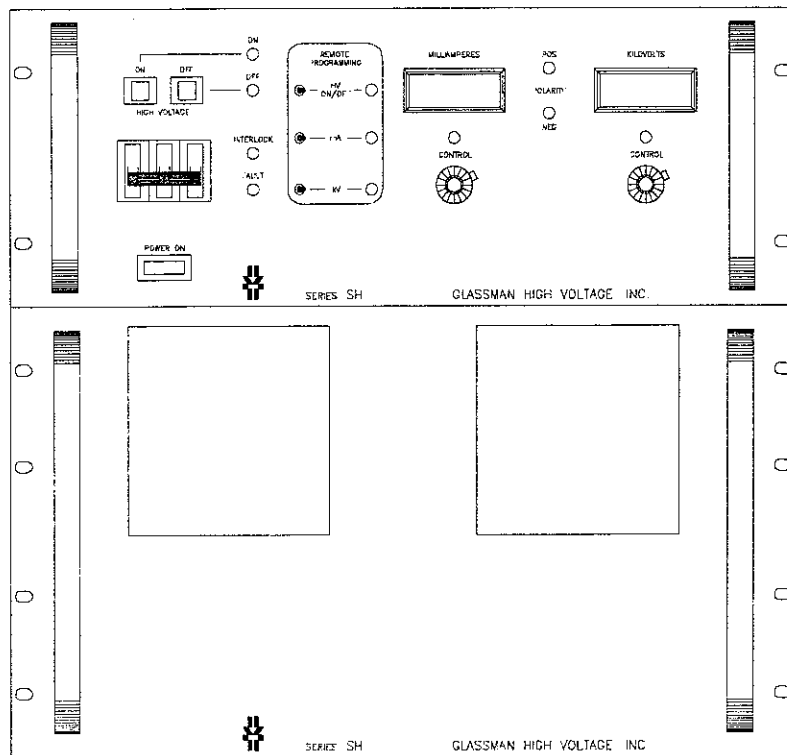

SERIAL #: **N144732-01**  
MODEL: **PS/SH001R16.0**  
DATE: **2/14/06**



*Innovations in high voltage power supply technology*


**GLASSMAN HIGH VOLTAGE INC.**

124 West Main Street P O Box 317

High Bridge N.J. 08829


(908) 638-3800 \* FAX (908) 638-3700 \* [www.GlassmanHV.com](http://www.GlassmanHV.com)

## 8 kW Models

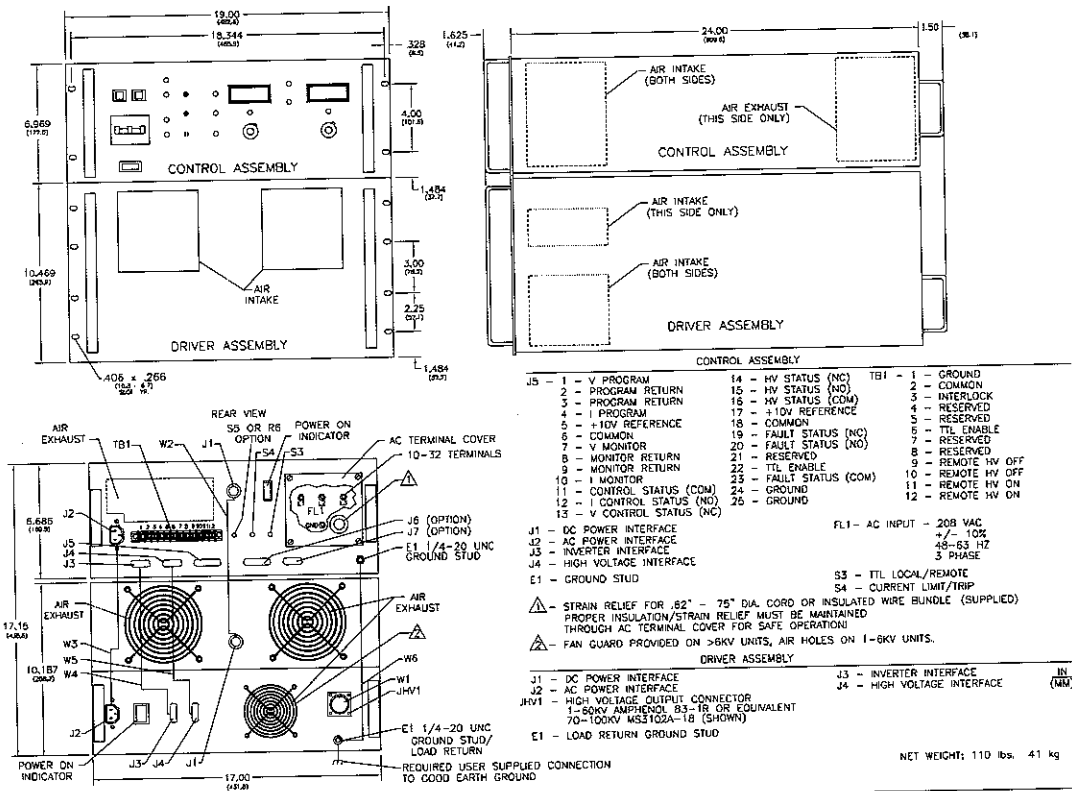

## 16 kW Models

SEE MAIN OUTLINE DRAWING FOR ALL OTHER CONNECTIONS

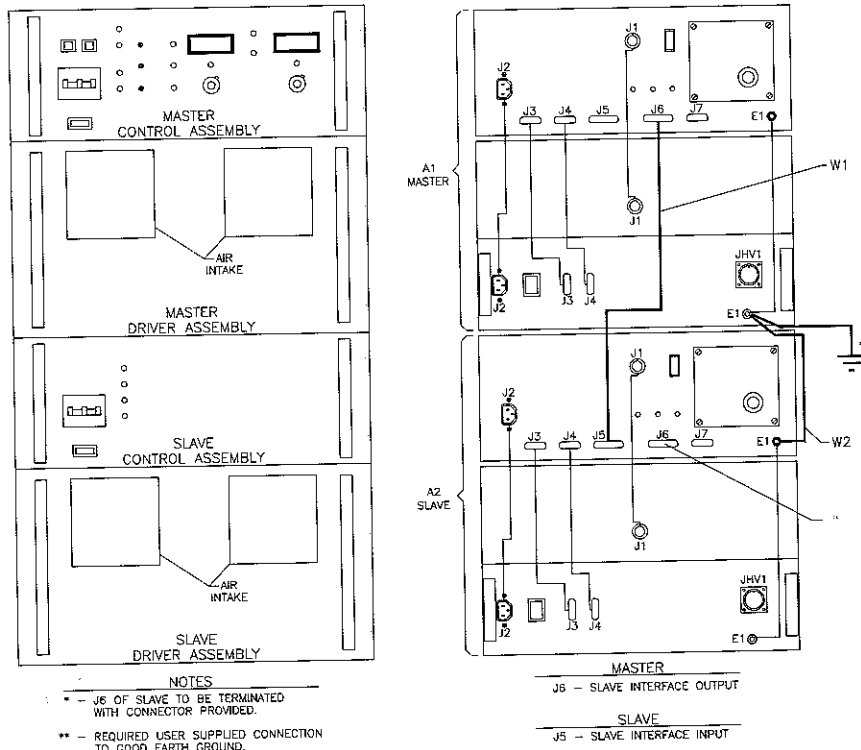

SH16KW.DWG



## Designing Solutions for High Voltage Power Supply Applications

**GLASSMAN HIGH VOLTAGE INC.**

124 West Main Street, PO Box 317, High Bridge, NJ 08829-0317  
(908) 638-3800 • Fax (908) 638-3700 • [www.glassmanhv.com](http://www.glassmanhv.com)

# Specifications

## Specifications for 8 kW Power Supplies

(Specifications apply from 5% to 100% of rated voltage. Operation is guaranteed down to zero with a slight degradation of performance.)

(For 16 kW power supplies, unless otherwise indicated, the performance specification limits could be increased by a factor of up to 30%. For power supplies over 16 kW, consult the factory.)

Input: 187-228 V rms, three-phase, 48-63 Hz, 11,500 VA maximum at full load (less than 35 A per phase). Inrush current is less than 45 A with a nominal decay time constant of 60 ms. Four 10-32 studs for AC line connection with a safety cover and strain relief are provided. For systems 16 kW and greater, a separate AC input connection is required for each additional slave chassis.

Mains service must be protected with fuses or circuit breakers with a maximum rating of 125 A and a minimum interrupting capacity of 50,000 A.

Efficiency: Typically 85% at full load.

Output: Continuous, stable adjustment from 0 to rated voltage/current by means of panel-mounted 10-turn potentiometers (0.05% resolution), or external 0 to +10 V signals. Repeatability better than 0.1% of setting.

Voltage programming accuracy: 0.5% of setting + 0.2% of rated output.

Resolution is a function of the programming method used.

Voltage and current external programming are differentially coupled with a maximum common mode voltage of  $\pm 3$  VDC.

Voltage Regulation: Better than  $\pm 0.005\%$  for specified line variations and 0.01% + 10 mV/A for no load to full load variations.

Current Regulation: From short circuit to rated voltage at any load condition:

- 1 kV to 6 kV: Better than 0.5%
- 8 kV to 100 kV: Better than 0.2%

Voltage Monitor: 0 to +10 V equivalent to 0 to rated voltage. Accuracy 0.5% of reading + 0.2% of rating. Output impedance is 10 k $\Omega$ , differentially coupled.

Current Monitor: 0 to +10 V equivalent to 0 to rated current. Accuracy:

- 1 kV to 6 kV: 1.5% of reading plus 0.5% of rated output
- 8 kV to 100 kV: 1% of reading plus 0.2% of rated output

Output impedance is 10 k $\Omega$ , differentially coupled.

Ripple: Better than 0.025% of rated voltage + 1 V RMS at full load.

Stored Energy: See Models chart.

Stability: 0.01% per hour after 1/2 hour warm-up; 0.05% per 8 hours.

Voltage Rise Time Constant: 200 ms for 8 kV to 100 kV models and 50 ms for 1 kV to 6 kV models, typical, using either HV enable or remote programming control.

Voltage Decay time constant: Decay time constant is a function of the applied load. The decay time constant will be equal to the rise time constant with a minimum load of 5% of rated maximum.

Temperature Coefficient: 0.01%/°C.

Ambient Temperature: -20 to +40°C operating; -40 to +85°C storage.

Polarity: Available with either Positive Negative or Reversible polarity with respect to chassis ground.

Protection: Automatic current regulation protects against all overloads, including arcs and short circuits. Thermal switches and rpm sensing fans protect against thermal overload. Circuit breaker fuses, surge-limiting resistors, and low energy components provide ultimate protection.

Arc Quench: Optional on models 1 kV through 6 kV; standard on models 8 kV through 100 kV. An arc quench feature provides sensing of each load arc and quickly inhibits the HV output for approximately 20 ms after each arc.

Arc Sensing: Optional on models 1 kV through 6 kV; standard on models 8 kV through 100 kV. Internal circuitry senses the number of arcs caused by external load discharges. If the rate of consecutive arcs exceeds approximately one arc per second for five arcs, the supply will turn off for approximately five seconds to allow clearance of the fault. After this period, the supply will return automatically to the programmed output voltage value with the voltage rise time constant indicated. If the load fault still exists, the above cycle will be repeated.

Current Limit: In current limit mode, the power supply will regulate the load current at the programmed current level with automatic crossover between voltage and current regulating modes.

Current Trip: A switch located on the rear of the control panel assembly allows the selection of current limit or current trip operation. When the switch is set to current trip mode, the HV output will disable and latch off when the load current reaches the programmed current level. Reset is accomplished by either cycling the AC power, toggling the HV enable signal, or by pushing the HV off/reset and then the HV on switches.

Front Panel Elements: The front panel contains all local control functions and remote/local selector switches. These control functions are: AC power on/off, circuit breaker and indicator light, separate 10-turn controls with locking vernier dials used to set voltage and current levels, high voltage on switch, and high voltage off/reset switch. LEDs indicate: when high voltage is on, output polarity, interlock fault status, and whether the supply is operating in a voltage or current regulating mode. Output levels are indicated by voltage and current digital meters. Remote/local switches are provided for voltage and current programming and HV on/off functions.

Slave Front Panel Elements: (When applicable) AC power breaker/switch, and indicator. Bias tracking (overvoltage) and thermal overload/low fan speed indicators. Slave current and voltage service test points.

Remote Control Interface: All standard SH family power supplies provide a user's remote interface. The signals provided are:

Inputs:  
Safety interlock, output voltage and current, program signals, high voltage enable and connections for remote HV on and off pushbuttons.

Outputs:

Output voltage and current monitor signals, HV enable status, I/V regulation mode status, fault status, and a +10 V reference source.

Signal common and ground reference terminals are also provided.

Toggle switches on the rear of the control chassis select either current limit or current trip operation and local or remote HV enable.

External Interlock: Open = off, closed = on. Normally latching except for NC option supplies where it is non-latching. The interlock indicator LED is lit when the interlock is open.

HV Enable:

Remote Mode: 0 - 15 V = OFF;  
2.5 - 15 V = ON.

Local Mode: The HV output is permanently enabled.

HV Enable, Fault and I/V Regulation Status: Each are a set of form C relay contacts.

Accessories: Detachable 8 foot shielded high voltage coaxial cable provided. Models 16 kW and above are provided with an additional HV cable per slave module. A 25 pin D-subminiature connector for customer interface is provided. All chassis interconnection cables are provided.

## TABLE OF CONTENTS

### SH SERIES

	Page
Warranty/User Registration Card . . . . .	ii
 <b>SECTION I - DATA</b>	
Specifications & Models . . . . .	
CE Declaration of Conformity (if applicable) . . . . .	
EMC Directive Addendum (if applicable) . . . . .	
Specification Control(s) (if applicable) . . . . .	
 <b>SECTION II - GENERAL INFORMATION</b>	
Unpacking & Inspection . . . . .	2
Correspondence . . . . .	2
Safety . . . . .	3
Preparation For Use . . . . .	4
Connectors, Controls, and Indicators	
Front Panel, Control Chassis . . . . .	6
Rear Panel, Control Chassis . . . . .	9
Rear Panel, Driver Chassis . . . . .	10
Installation and Operation . . . . .	10
Remote Control and Monitor . . . . .	13
 <b>SECTION III - ILLUSTRATIONS</b>	
 <b>SECTION IV - SCHEMATICS AND MECHANICAL DRAWINGS</b>	

## WARRANTY

Glassman High Voltage, Inc (Glassman) warrants standard power supplies it manufactures to be free from defect in materials and factory workmanship, and agrees to repair or replace any standard power supply that fails to perform as specified within three years after date of shipment. OEM and modified standard power supplies are warranted, as stated above, for one year from date of shipment. This Warranty shall not apply to any power supply that has been:

- i) repaired, worked on or altered by persons unauthorized by Glassman in such a manner as to injure, in Glassman's sole judgment the performance, stability or reliability of the power supply;
- ii) subjected to misuse, negligence, or accident; or
- iii) connected, installed, adjusted, or used otherwise than in accordance with instructions furnished by Glassman.

Glassman reserves the right to make any changes in the design or construction of its power supply at any time without incurring any obligation to make any change whatever in units previously delivered.

Glassman's sole liabilities, and buyer's sole remedies, under this agreement shall be limited to a refund of the purchase price, or at Glassman's sole discretion, to the repair or replacement of any power supply that proves, to Glassman's satisfaction, to be defective when returned to the Glassman factory, transportation prepaid by the buyer, within the warranty period. Glassman shall in no way be liable for damages consequential or incidental to defects in any power supply for failure of delivery in whole or in part, for injuries resulting from its use or for any other cause.

THIS WARRANTY IS EXCLUSIVE AND IS GIVEN AND ACCEPTED IN LIEU OF (1) ANY AND ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND (2) ANY OBLIGATION, LIABILITY, RIGHT, CLAIM OR REMEDY IN CONTRACT OR TORT.

This Warranty and the writing attached constitute the full understanding of the manufacturer and buyer, and no terms, conditions, understanding, or agreement purporting to modify or vary the terms hereof shall be binding unless hereafter made in writing and signed by an authorized official of Glassman High Voltage Inc.


# SH Series 8 kW to 40 kW Regulated High Voltage DC Power Supplies

## 1 kV to 100 kV Rack Mount

## CE and Semi S2-93 Compliant

The SH family of power supplies are sophisticated 8 kW through 40 kW high voltage power supplies with low ripple and noise. They are air insulated fast response units with tight regulation and extremely low arc discharge currents.

Fully Compliant With The European harmonized EMI directive and with the low voltage directive 73/23/EEC

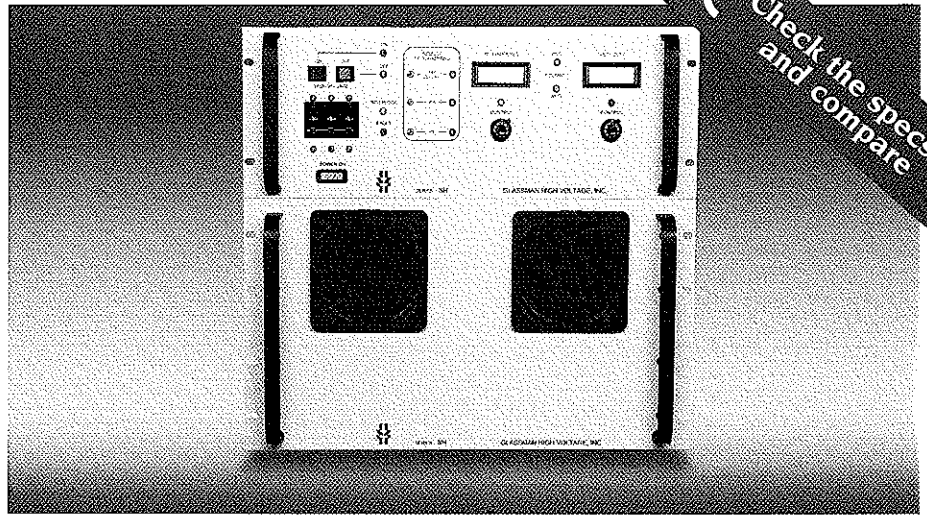

Models from 0 to 1 kV through 0 to 100 kV  
8kW models are 17.5 H x 24.0" D Weight is only 110 lbs

### Features:

**Arc Quench** The HV output is inhibited for a short period after each load arc to quickly extinguish the arc

**Arc Sensing** Internal circuitry constantly senses and integrates arcs that occur over a given time. In the event a system or load arcing problem develops and exceeds factory-set parameters, the power supply will cycle off in an attempt to clear the fault and then automatically restart after a preset off dwell time.

**Pulse-Width Modulation** Off-the-line pulse-width modulation provides high efficiency and a reduced parts count for improved reliability.

**Air Insulated** The SH Series features air as the primary dielectric medium. No oil or encapsulation is used to impede serviceability or increase weight.

**Constant Voltage/Constant Current Operation** Automatic crossover from constant-voltage to constant-current regulation provides protection against overloads, arcs, and short circuits.

**Current Trip** This feature may be substituted for constant-current operation by a rear panel selector switch.

**Redundant Thermal Overload Protection** Thermostats and tachometer fan RPM sensing shut down the power supply due to over temperature or reduced fan speeds.

**Low Ripple** Typically ripple is less than 0.025% rms of rated voltage at full load.

**Tight Regulation** Voltage regulation is typically better than 0.01% for allowable line and load variations. Current regulation is better than 0.1% from short circuit to rated voltage.

**Higher Power Capability** Power supply modules can be paralleled up to 40 kW output power utilizing one master control module and up to four slave modules.

**Differentially Coupled Analog Control Signals** All voltage and current programming and monitoring signals are coupled to the user interface by true differential amplifiers. This provides for the ability to return the program and monitor commons to ground or system common at the source. This arrangement isolates the return wires and eliminates errors due to unwanted return currents flowing in these connections.

**Warranty** Standard power supplies are warranted for three years; OEM and modified power supplies are warranted for one year. A formal warranty statement is available.



*Designing Solutions for High Voltage Power Supply Applications*

**GLASSMAN HIGH VOLTAGE INC.**

124 West Main Street, PO Box 317, High Bridge, NJ 08829-0317  
(908) 638-3800 • Fax (908) 638-3700 • [www.glassmanhv.com](http://www.glassmanhv.com)

**GLASSMAN EUROPE Limited (UK)**  
+44 1256 883007 FAX +44 1256 883017  
E-mail: [Glassman\\_europe@glassmanhv.com](mailto:Glassman_europe@glassmanhv.com)

**GLASSMAN JAPAN High Voltage Limited**  
+81 45 902 9988 FAX +81 45 902 2268  
E-mail: [Glassman\\_japan@glassmanhv.com](mailto:Glassman_japan@glassmanhv.com)

## Options

### Symbol Description

- ZR Zero start interlock Voltage control local or remote must be at zero before HV will enable
- SS Slow start ramp Specify standard times of 5 10 15 20 or 30 seconds  $\pm$  20%
- 5VC 0-5 V voltage and current program/monitor
- NC Blank front panel Panel contains AC power breaker/switch and indicator HV ON HV OFF interlock and fault indicators and output current and voltage service test points
- ARC For 1 to 6 kV models Arc quench and arc sensing are provided as described in specifications for 8 to 100 kV models
- GE9 RS-232 control and monitor

Please consult factory for special requirements

## 8 kW Models

Positive Polarity	Negative Polarity	Reversible Polarity	Output Voltage	Output Current	Stored Energy (J)	Output Cable
Reversible Polarity Only		SH1R8.0	0 – 1kV	0 – 8.0A	8	RG-8U
		SH1.5R5.3	0 – 1.5kV	0 – 5.3A	7.8	RG-8U
		SH2R4.0	0 – 2kV	0 – 4.0A	7.5	RG-8U
		SH3R2.7	0 – 3kV	0 – 2.7A	8	RG-8U
		SH5R1.6	0 – 5kV	0 – 1.6A	7	RG-8U
		SH6R1.3	0 – 6kV	0 – 1.3A	8	RG-8U
SH8P1.0	SH8N1.0	SH8R1.0	0 – 8kV	0 – 1000mA	10	RG-8U
SH10P800	SH10N800	SH10R800	0 – 10kV	0 – 800mA	12	RG-8U
SH12P670	SH12N670	SH12R670	0 – 12kV	0 – 670mA	12	RG-8U
SH15P530	SH15N530	SH15R530	0 – 15kV	0 – 530mA	10	RG-8U
SH20P400	SH20N400	SH20R400	0 – 20kV	0 – 400mA	18	RG-8U
SH25P320	SH25N320	SH25R320	0 – 25kV	0 – 320mA	13	RG-8U
SH30P270	SH30N270	SH30R270	0 – 30kV	0 – 270mA	18	RG-8U
SH40P200	SH40N200	SH40R200	0 – 40kV	0 – 200mA	16	RG-8U
SH50P160	SH50N160	SH50R160	0 – 50kV	0 – 160mA	20	RG-8U
SH60P130	SH60N130	SH60R130	0 – 60kV	0 – 130mA	24	RG-8U
SH70P110	SH70N110	SH70R110	0 – 70kV	0 – 110mA	28	DS2121
SH80P100	SH80N100	SH80R100	0 – 80kV	0 – 100mA	32	DS2121
SH100P80	SH100N80	SH100R80	0 – 100kV	0 – 80mA	40	DS2121

## 16 kW Models

Positive Polarity	Negative Polarity	Reversible Polarity	Output Voltage	Output Current	Stored Energy (J)	Output Cable
Reversible Polarity Only		SH1R16.0	0 – 1kV	0 – 16.0A	16	2X RG-8U
		SH1.5R10.6	0 – 1.5kV	0 – 10.6A	15.6	2X RG-8U
		SH2R8.0	0 – 2kV	0 – 8.0A	15	2X RG-8U
		SH3R5.4	0 – 3kV	0 – 5.4A	16	2X RG-8U
		SH5R3.2	0 – 5kV	0 – 3.2A	14	2X RG-8U
		SH6R2.6	0 – 6kV	0 – 2.6A	16	2X RG-8U
SH8P2.0	SH8N2.0	SH8R2.0	0 – 8kV	0 – 2.0A	20	2X RG-8U
SH10P1.6	SH10N1.6	SH10R1.6	0 – 10kV	0 – 1.6A	24	2X RG-8U
SH12P1.3	SH12N1.3	SH12R1.3	0 – 12kV	0 – 1.3A	24	2X RG-8U
SH15P1.06	SH15N1.06	SH15R1.06	0 – 15kV	0 – 1060mA	20	2X RG-8U
SH20P800	SH20N800	SH20R800	0 – 20kV	0 – 800mA	36	2X RG-8U
SH25P640	SH25N640	SH25R640	0 – 25kV	0 – 640mA	26	2X RG-8U
SH30P540	SH30N540	SH30R540	0 – 30kV	0 – 540mA	36	2X RG-8U
SH40P400	SH40N400	SH40R400	0 – 40kV	0 – 400mA	32	2X RG-8U
SH50P320	SH50N320	SH50R320	0 – 50kV	0 – 320mA	40	2X RG-8U
SH60P260	SH60N260	SH60R260	0 – 60kV	0 – 260mA	48	2X RG-8U
SH70P220	SH70N220	SH70R220	0 – 70kV	0 – 220mA	56	2X DS2121
SH80P200	SH80N200	SH80R200	0 – 80kV	0 – 200mA	64	2X DS2121
SH100P160	SH100N160	SH100R160	0 – 100kV	0 – 160mA	80	2X DS2121

**For Models Greater Than 16 kW, Please Consult Factory.**



# Declaration of Conformity

Declaration of Conformity  
according to EMC Directive 89/336/EEC  
and Low Voltage Directive 73/23/EEC

**Manufacturers Name:** Glassman High Voltage, Inc  
**Manufacturers Address:** PO Box 317  
124 West Main Street  
High Bridge, NJ 08829-0317  
USA

Manufacturer declares that the **SH Series** Power Supplies  
conform to the following Product Specifications:

<b>EMC:</b>	EN 55011 class A	EN 61000-4-2 - 4kV CD, 8kV AD
	EN 61000-4-3 - 10V/m	ENV 50204 - 10V/m
	EN 61000-4-6 - 10V RMS	EN 61000-4-4 - 1kV Signal Cable, 2kV AC Mains

**LV Directive:** EN 61010-1:

**Environmental conditions:** Indoor use  
Altitude up to 2000 meters  
Temperature 5 deg C to 40 deg C  
Humidity 80% maximum  
Input Mains Fluctuations +/-10%  
Installation Category II per IEC1010-1, paragraph 1 4 & annex J  
Pollution Degree 2 per IEC1010-1, paragraph 3.7.3

**Means Of Conformity:**

The product herewith complies with the requirements of the EMC Directive 89/336/EEC based on the use of a Technical Construction File (TCF) in accordance with Article 10.2 of the Directive.  
The product herewith also complies with the requirements of the Low Voltage Directive 73/23/EEC based on design analysis and testing in accordance with Article 13, Annex IV of Directive 93/68/EEC, amending Directive 73/23/EEC.





**Technical**

**Construction File:**

Prepared by: Steven De Clario  
Function: Electrical Engineer  
Company: Glassman High Voltage, Inc.  
PO Box 317  
124 West Main Street  
High Bridge, NJ 08829-0317  
USA  
TCF number: 40122SH.TCF  
Date: April, 2000

Competent Body: NMI Certin B.V.  
P.O. Box 15  
9822 ZG Niekerk  
The Netherlands

Signature:

Function: Staff Engineer  
Date: April 10, 2000

**EC Representative:**

Glassman Europe Limited, 21 Campbell Court, Campbell Road, Bramley,  
Tadley, Hampshire RG265EG, England.



## EMC Directive Addendum

### For SH models with CE option.

Your high voltage power supply has been designed and tested to ensure compliance with the European Community's EMC directives when used as described in the instruction manual. However, as we do not supply as standard remote interface cables, the following precautions must be followed in order to ensure continued compliance with EMC directive radiated emissions requirements as specified in the harmonized standard EN55011:1991 Group 1, Class A.


1. The remote interface cables must be of a shielded type with the shields and connector housings terminated to an adequate ground source at both ends of the cable. At the power supply end, Pin 1 of TB1 provides a ground connection for the terminal block interface cable shield, and Pin 24 or 25 of J5 or the "D" connector housing provides a ground connection for the "D" connector interface cable shield.
2. A ferrite suppressor must be placed at both ends of the TB1 cable and at the customer end of the "D" connector cable over the shields. These suppressors must be located within 3" of the terminations of each end of the cables (see drawing below). The ferrite suppressors should have the following properties:

Impedance should be greater than 200 ohms at 100MHz.

For your convenience, we have made available kits that contain the required ferrite suppressors for each cable. Contact your Glassman representative for further information.

If your power supply is a modified standard and contains any additional interface connectors, each additional interface cable must follow the same precautions as stated above.

Please note that if the digital panel meters are subjected to radiated EMC fields in excess of 3V/m the display value may read incorrectly. However, the actual HV output remains stable and the true HV output level can be read from the voltage monitor.

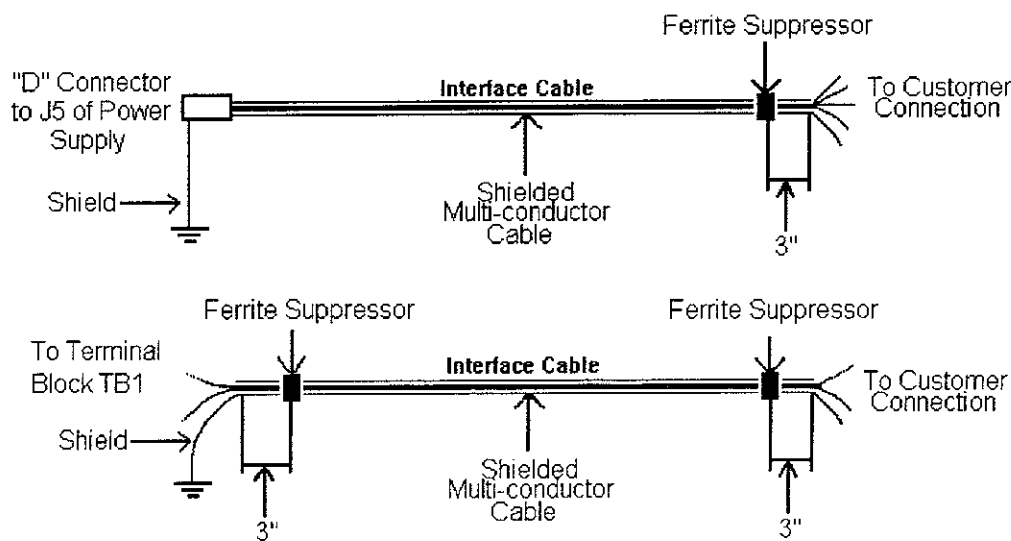

## UNPACKING AND INSPECTION

First inspect package exterior(s) for evidence of rough handling in transit. If none, proceed to unpack . . . carefully. After removing the supply from its shipping container, inspect it thoroughly for damage.

**IMPORTANT!** In cases of damage due to rough handling in transit, notify the carrier immediately if damage is evident from appearance of package. Do not destroy or remove any of the packing material used in a damaged shipment. Carrier companies will usually not accept claims for damaged material unless they can inspect the damaged item and its associated packing material. Claims must be made promptly - certainly within five days of receipt of shipment.

## CORRESPONDENCE

Each Glassman power supply has an identification label on the chassis that bears its model and serial number. When requesting engineering or applications information, reference should be made to this model and serial number. If specific components or circuit sections are involved in the inquiry, also indicate the component symbol number(s) shown on the applicable schematic diagram.

GLASSMAN HIGH VOLTAGE, INC  
PO Box 317  
124 West Main Street  
High Bridge, N.J. 08829

TEL. 908-638-3800  
FAX 908-638-3700  
E-MAIL [Support@GlassmanHV.com](mailto:Support@GlassmanHV.com)  
[www.GlassmanHV.com](http://www.GlassmanHV.com)

**SAFETY**

This symbol, wherever it appears on the supply, alerts you to the presence of uninsulated dangerous voltages - voltages that may be sufficient to constitute a risk of electrical shock



This symbol, wherever it appears on the supply, alerts you to important operating and maintenance instructions in the accompanying literature. Read the manual.

**TERMS IN THIS MANUAL**

**CAUTION** statements identify conditions or practices that could result in damage to the equipment or other property.

**WARNING!** statements identify conditions or practices that could result in injury or loss of life

**WARNING!**

To avoid the risk of shock or fire do not attempt to service the supply beyond that described in these instructions.

To avoid the risk of shock and personal injury, do not remove the product covers while the unit is operating or connected to the AC mains. Wait at least 2 minutes after disconnecting the AC mains power before removing any covers or panels. Wait at least 15 seconds before disconnecting the HV cable.

Upon loss of protective ground connection(s), all accessible conductive parts can render an electric shock.

Use only a power cord rated greater than the input current rating of the unit.  
Use only a cord in good condition.

To avoid fire hazard, use only fuses of the correct type, voltage rating, and current rating as specified.

To avoid explosion, do not operate this product in an explosive atmosphere.

If liquid is spilled on the supply, shut it off immediately and disconnect it from the AC mains.

Always maintain adequate supply ventilation. All ventilation openings must remain free from obstruction.

## PREPARATION FOR USE

The power Supply consists of two chassis assemblies, the control chassis and the driver chassis. All input and interface connections are made to the control assembly. The HV output is provided on the driver assembly (Refer to the Outline and Installation Drawing included with this manual)

**CAUTION:** All interconnections between the driver and control chassis must be installed with the cables provided before AC line power is applied.

### LINE VOLTAGE

This supply is capable of continuous operation using input voltages of 208 VAC +/-10 %, 3 phase, 48-63 Hz

### INPUT POWER

Four 10-32 terminals (L1, L2, L3 & GND) located on the line filter FL1 are provided at the rear of the control module, behind a removable cover plate, for connection to three phase AC power. The power cord employed should contain wires capable of supplying at least 40 amperes RMS each. A compression strain relief bushing is provided for securing a round AC input cord with an outside diameter of from 62" to 75". This bushing is installed in a 3/4 NPT hole provided in the cover plate. If a cord is employed that differs from the above style and diameter, the user must replace the bushing provided with one appropriate for the application. Master/Slave supplies have one additional set of AC input terminals per slave control chassis. A separate line cord must be provided for each control module

**MAINS SERVICE MUST BE PROTECTED WITH FUSES OR CIRCUIT BREAKERS WITH A MAXIMUM RATING OF 125 A AND A MINIMUM INTERRUPTING CAPACITY OF 5,000 A**

**Note:** When installing, thread the power cord through the strain relief bushing before making connections to FL1. After making the connections move the cover into position and secure with the 4 captive screws. Then tighten the compression strain relief. It is recommended that some means be provided for disconnecting the unit(s) from the mains, such as an appropriate plug/jack combination or a distribution box with safety switch or circuit breaker.

**Caution:** The protective cover plate must be installed and the terminal marked "GND" must be connected to a good earth ground for electrical shock protection. In Europe, this ground wire must be green/yellow in color

**For CE compliant supplies used in Europe:**

Please refer to the Declaration of Conformity located elsewhere in this manual for installation environment conditions required to conform to 73/23/EEC (Low Voltage Directive).

## AC POWER BREAKER/SWITCH

The breaker/switch is located on the front panel of the control chassis. In addition, on master/slave systems, there is one breaker on each slave control chassis.

## INSTRUMENT COOLING

Always maintain adequate supply cooling. All ventilation holes must remain free from obstruction.

## REVERSE POLARITY

### Reverse Polarity Supplies $\leq 6\text{kV}$ (standard):

A polarity card is provided, internal to the unit, to reverse the output polarity of the supply. If it is desired to determine the present setting of the polarity or to change the polarity, follow the procedure below (refer to the AM10-SH parts placement drawing):

#### **WARNING!**

**TO AVOID THE RISK OF SHOCK AND PERSONAL INJURY, WAIT AT LEAST 2 MINUTES AFTER DISCONNECTING THE AC MAINS POWER BEFORE REMOVING ANY COVERS OR PANELS.**

1. Remove the bottom cover from the driver chassis.  
**BE SURE AC POWER IS DISCONNECTED AND HV IS DISCHARGED!**
2. Locate the high voltage board A4-1 mounted towards the rear section of the chassis (as viewed from the front).
3. Locate the polarity card (A4-2) plugged into the high voltage board and observe that the card is labeled to indicate the installed polarity.
4. If it is desired to change the polarity of the supply, simply unplug the card, flip it over and reinstall it carefully. Make sure the card is fully inserted (seated).
5. Replace the bottom cover.
6. Repeat the above procedure (if applicable) for all slaves in master/slave systems.

**CAUTION:** All polarity cards in master/slave systems must be installed for the same polarity. The supplies will not operate if this is not the case.

### Reverse Polarity Supplies $> 6\text{kV}$ (optional):

Two high voltage assemblies are provided with each supply (and slave where applicable): one is mounted in the supply (normally the positive one), the other one is shipped separately. To verify the polarity of the assembly installed, the bottom cover may be removed from the driver assembly of the supply. **BE SURE AC POWER IS DISCONNECTED AND HV IS DISCHARGED!** The large white enclosure (the high voltage assembly) will have a label affixed to the top which indicates its polarity.

It is required that the two high voltage assemblies be exchanged to reverse the output polarity. This

may be done in the following manner (refer to the AM10-SH parts placement drawing):

**WARNING!:**

**TO AVOID THE RISK OF SHOCK AND PERSONAL INJURY, WAIT AT LEAST 2 MINUTES AFTER DISCONNECTING THE AC MAINS POWER BEFORE REMOVING ANY COVERS OR PANELS.**

- 1 If the supply has been running, the output must be discharged or allowed to bleed down for a few minutes
- 2 Disconnect the AC power from the supply
- 3 Remove the high voltage cable from the supply
- 4 Remove the top & bottom covers from the driver chassis
- 5 Position the unit with the top facing up. Unplug the HV AC cables from A2-J3 & A3-J2.
- 6 Turn the chassis over so that the bottom is facing up. Unplug and disconnect the cable harness from A4-J1 and A4-J2. Unplug and disconnect the fastons from A4-E22 and A4-E23. Remove the nut and hardware securing the ground wire to EG3. Dress all loose wires away from the HV assembly
- 7 Remove the screws holding the rear panel behind A4 and let the panel hinge back
- 8 Carefully pull the HV AC silicone wires up through their guide tubes and let them hang free
- 9 A4 is secured to the chassis by means of an angle bracket. Remove the three nuts and associated hardware holding the bracket to the chassis.
- 10 Remove A4 by lifting straight up. Install the high voltage assembly of opposite polarity in its place.
- 11 Reassemble the supply in reverse order of disassembly
- 12 Repeat the above procedure (if applicable) for all slaves in master/slave systems

**CAUTION:**

- Nuts holding the brackets to the chassis must be installed and must be tight to provide proper grounding for A4.
- Be careful when reinstalling J1 & J2. Be sure that plugs and jacks are properly aligned and mated
- All high voltage assemblies installed in master/slave systems must be of the same polarity. The supplies will not operate if this is not the case.

## **CONTROLS, CONNECTORS, AND INDICATORS**

### **CONTROL CHASSIS FRONT PANEL (Refer to Outline and interface Drawings)**

**POWER Circuit Breaker/Switch** - Turns the supply power on and off (1 / ON, 0 / OFF).

**POWER ON indicator** - Illuminates when the POWER Switch/Circuit Breaker is ON and the AC

input power is present

**REMOTE PROGRAMMING Switches and Indicators** - These switches provide a means to select certain functions as designated for remote operation (e.g. when signals for these functions are to be applied to the customer interface connectors, J5 & TB1). The associated indicators will light when the switches are in the remote position (toggled to the right). The three selectable functions are:

- **REMOTE PROGRAMMING mA** - Allows the output current to be controlled with an external analog signal (front panel control is disabled)
- **REMOTE PROGRAMMING kV** - Allows the output voltage to be controlled with an external analog signal (front panel control is disabled).
- **REMOTE HV ON/OFF** - Allows for two separate external momentary switches to control the high voltage enable function (front panel HV ON & OFF switches are disabled).

**INTERLOCK Indicator** - Shows that an open is/was present in the customer interlock circuit. High voltage output is disabled and cannot be enabled until the open interlock is corrected (closed) and the system is re-enabled.

**FAULT Indicator** - Illuminates when one or more of the following fault conditions are present:

- One or more cooling fans are slow or inoperative
- Insufficient AC line voltage is present
- The power supply temperature is too high
- The main DC buss is shorted (circuit failure)
- An internal bias voltage is low or missing (circuit failure)
- There is a fault in the slave module or open master/slave interconnect cable (master/slave systems only)

**HIGH VOLTAGE OFF Indicator** - Illuminates when the high voltage is off. The HIGH VOLTAGE OFF indicator will remain illuminated after an attempt is made to enable the HV if one or more of the following conditions is present:

- A signal or power interconnect cable is open or disconnected
- The REMOTE HV ON/OFF switch is set for remote operation and a remote contact closure is not present at TB1-9 to TB1-10 or TB1-11 to TB1-12
- One or more cooling fans are slow or inoperative.
- The main DC buss is shorted (circuit failure)
- An internal bias voltage is low or missing (circuit failure)
- There is a FAULT or OVERVOLTAGE indication in a slave module or open master/slave interconnect cable (master/slave systems only)

**HIGH VOLTAGE ON Indicator** - Illuminates when the high voltage is on.

**HIGH VOLTAGE ON Push-button** - Enables the high voltage output when actuated. This push-button will NOT activate when one or more of the following conditions are present:



- The FAULT indicator is illuminated
- The REMOTE HV ON/OFF switch is set to the remote position
- There is an open interlock (INTERLOCK indicator is illuminated)

**HIGH VOLTAGE OFF Push-button** - Turns off the high voltage output and resets the following latching faults:

- CURRENT TRIP (if enabled by rear panel switch)
- ARC TRIP (if ARC TRIP option is factory installed)

**KILOVOLT CONTROL** - Sets the output voltage regulation point

0 00 = 0 00 kV

10 00 = Maximum rated output voltage

**KILOVOLT CONTROL Indicator** - Illuminates when supply is in the voltage regulation mode

**KILOVOLT Digital panel meter** - Displays output voltage in kilovolts (unless otherwise specified)

**MILLIAMPERE/AMPERE CONTROL** - Sets the output current regulation point

0 00 = 0 00 mA or A

10 00 = Maximum rated output current

**MILLIAMPERE/AMPERE CONTROL Indicator** - Illuminates when the supply is in the current regulation mode or a MILLIAMPERE FAULT has occurred

**MILLIAMPERE/AMPERE Digital Panel Meter** - Displays output current in milliamperes or amperes (unless otherwise specified)

**POLARITY Indicators (POS, NEG)** - Displays the polarity with respect to ground of the high voltage output

### **Slave Modules (Master/Slave Supplies Only):**

**POWER Indicator** - Will light when the AC POWER circuit breaker on the slave module is in the ON / 1 position, if AC power is applied to the modules

**BIAS Indicator** - Is normally not illuminated when the AC power is applied. Will light if any of the following conditions are present:

- An internal bias voltage is missing
- The input AC line voltage is insufficient
- An over-temperature condition has occurred

**FAN Indicator** - Will illuminate when one or more cooling fans are slow or inoperative

**TRACKING Indicator** - This indicator will illuminate if the slave module is not tracking the master. The tracking circuit will latch and shutdown the supply if the condition persists for

more than approximately 500 mS TRACKING shutdown can only be reset by AC power-down, either by the master module power switch or by disconnecting the supply from the AC mains. It is normal for this indicator to momentarily illuminate during load or programming transients.

**SYSTEM Indicator** - Will illuminate if the master and slave high voltage polarities do not match (This applies only to reversible polarity supplies.)

**TP-I Testpoint** - A 0 to 10 V service testpoint for measuring the relative output current of a slave module.

**TP-V Testpoint** - A 0 to 10 V service testpoint for measuring the relative output voltage of a slave module.

**TP-C Testpoint** - The common return point for the instrument(s) measuring the TP-V and/or TP-I testpoints.

### **CONTROL CHASSIS REAR PANEL (Refer to Outline and Interface Drawings)**

**FL1 AC Input Filter** - Input power connections are made directly to the line filter, FL1 as follows (with one additional set of connections per slave on master/slave supplies):

L1	Phase 1
L2	Phase 2
L3	Phase 3
GND	Earth Ground

**For CE compliant supplies used in Europe:**

Please refer to the Declaration of Conformity located elsewhere in this manual for installation environment conditions required to conform to 73/23/EEC (Low Voltage Directive).

**TB1 Connector** - Customer interface. Provides connections for COMMON, GROUND, INTER-LOCK, TTL ENABLE and HV ON/OFF control signals.

(explained in greater detail later)

**J1, J2 J3 & J4 Connectors** - Provides connections for chassis interconnect cables between control and driver chassis.

**J5 Connector** - Customer interface. Provides connections for remote control and monitor signals.

(explained in greater detail later)

**J6 Connector** - This connector provides the interface signals needed for parallel operation to J5 of the first slave chassis (only used on master/slave supplies).

**J7 Connector** - Unused

**POWER ON Indicator** - Illuminates when AC power is ON

**E1 Terminal** - This terminal should be connected to E1 on the driver chassis using the ground cable provided. E1 on the driver chassis should be solidly connected to a good earth ground.

### **Slave Modules (Master/Slave Supplies Only):**

**J5 Connector** - This connector provides the interface signals needed for parallel operation from J6 of the master chassis or J6 of the nearest upstream slave chassis.

**J6 Connector** - This connector provides the interface signals needed for parallel operation to J5 of the nearest downstream slave chassis. In the case of the last slave chassis, a terminator plug is installed on J6.

**E1 Terminal - Chassis GROUND** - This is the ground connection for the slave module and **MUST** be connected back to E1 of the master module, either directly or via the E1 ground terminal of the next upstream slave modules.

### **DRIVER CHASSIS REAR PANEL (Refer to Outline and Interface Drawings)**

**J1, J2 J3 & J4 Connectors** - Provides connections for chassis interconnect cables between control and driver chassis.

**E1 Terminal - WARNING!! E1 MUST be grounded.** This is the main ground connection for the power supply system. The E1 terminal on both chassis should be connected together using the ground cable provided. E1 on the driver chassis should be solidly connected to a good earth ground.

**JHV1 Connector** - High voltage output (one additional output per slave for master/slave supplies)

### **WARNING!**

**DO NOT HANDLE EXPOSED HIGH VOLTAGE TERMINATIONS OR ATTEMPT TO MAKE OR REMOVE ANY CONNECTIONS TO THE SUPPLY UNTIL THE LOAD AND/OR SUPPLY HAS BEEN DISCHARGED (GROUNDED). AN UNLOADED SUPPLY MAY TAKE UP TO 60 SECONDS TO FULLY DISCHARGE.**

## **INSTALLATION AND OPERATION**

The following procedure should be followed to connect and operate the equipment after it has been placed or mounted in position.

**WARNING!**

**NEVER ATTEMPT TO OPERATE THIS UNIT WITHOUT A GOOD EARTH GROUND CONNECTED TO THE MAIN GROUND STUD E1 ON DRIVER CHASSIS (E1 OF MASTER DRIVER CHASSIS ON MASTER SLAVE SUPPLIES).**

**THE LOAD RETURN SHALL ALSO BE CONNECTED TO THE MAIN GROUND STUD.**

**ALWAYS MAKE CERTAIN THAT MULTI-CHASSIS SUPPLIES HAVE THEIR INTER-CHASSIS GROUNDING STRAPS AND/OR BUSSBARS INSTALLED AS SHOWN IN THE INSTALLATION DRAWING(S) AND SCHEMATIC(S) SUPPLIED.**

**THE GROUND WIRE OF THE AC LINE CORD SHALL BE GROUNDED FROM THE AC GROUND TO FL1 GROUND (ON ALL FL1 GROUNDS FOR MASTER/SLAVE SUPPLIES)**

**READ AND FULLY UNDERSTAND THE OPERATING INSTRUCTIONS BEFORE APPLYING POWER TO THIS UNIT.**

**THIS EQUIPMENT EMPLOYS VOLTAGES THAT ARE DANGEROUS. EXTREME CAUTION MUST BE EXERCISED WHEN WORKING WITH THIS EQUIPMENT.**

**DO NOT HANDLE THE LOAD OR EXPOSED HIGH VOLTAGE TERMINATIONS, OR ATTEMPT TO MAKE OR REMOVE ANY CONNECTIONS TO THE SUPPLY UNTIL THE LOAD AND/OR SUPPLY HAS BEEN DISCHARGED (GROUNDED). AN UNLOADED SUPPLY MAY TAKE UP TO 60 SECONDS TO FULLY DISCHARGE.**

**INITIAL TURN ON**

It is suggested that the operator become familiar with the operation of the unit under local (front panel) control and then add the remote functions as desired. Thus, the initial turn on sequence described below assumes that there are no signals applied to the customer interface connectors J5 & TB1 and that the common and interlock terminals are strapped together (TB1-2 TO TB1-3)

**Please verify the following:**

- 1 That the AC power is disconnected from the unit, either by the disconnecting of an appropriate three phase plug/jack combination or, if the supply is wired directly to the mains, by setting the power breaker or safety switch to OFF
- 2 That there are no signals applied to J5 or TB1
- 3 That a good earth ground is connected the main ground stud, E1, as described in the WARNING! statement above
- 4 That the proper grounding straps and/or bussbars have been installed between chassis as shown in the installation drawing

5. That all inter-chassis wires and cables have been installed in accordance with the schematic/interface drawings supplied
6. That the front panel switches and controls are set as follows:

POWER ON Breaker	Off / 0
REMOTE PROGRAM Switches	LOCAL (left)
KILOVOLT CONTROL	Counterclockwise
MILLIAMPERE/AMPERE CONTROL	As required for load. 1.00 = 10 % of rating 5.00 = 50 % of rating, etc.

7. That the rear panel switches are set as follows:

TTL	LOCAL (up)
CURRENT	LIMIT (up)

**Attach load as follows (optional):**

1. Connect the load return to the main ground stud on the driver chassis.

**WARNING!**

**NEVER ATTEMPT TO OPERATE THIS UNIT WITHOUT A GOOD EARTH GROUND CONNECTED TO THE MAIN GROUND STUD E1 ON THE DRIVER CHASSIS (E1 OF MASTER DRIVER CHASSIS ON MASTER/SLAVE SUPPLIES).**

2. Connect the HV end of the load to the high voltage output cable (stripped and tinned end) provided.
3. Insert the plug end of the high voltage cable(s) into the high voltage receptacle(s). Screw the threaded barrel onto the receptacle JHV1 on the rear panel of the driver chassis. Spring action should be felt as the probe reaches the bottom. Hold the cable pressed down against the spring as the threaded barrel is screwed onto the receptacle.

**Power up sequence:**

1. Make appropriate line cord connections to the power source
2. Set the POWER switch on the front panel to the ON / 1 position. The following indicators should be illuminated:
  - POWER
  - HIGH VOLTAGE OFF
  - KILOVOLT CONTROL
  - POS or NEG POLARITY

3. Activate the high voltage output by depressing HIGH VOLTAGE ON button. The HIGH VOLTAGE OFF lamp will extinguish and the HIGH VOLTAGE ON lamp will illuminate
4. Rotate KILOVOLT CONTROL clockwise until the KILOVOLT digital panel meter indicates the desired voltage. If the MILLIAMPERE/AMPERE CONTROL indicator illuminates before the desired voltage is achieved, the supply has gone into constant current mode (current limit) and the setting of the MILLIAMPERE/AMPERE CONTROL will have to be increased to supply the required current to the load, at the desired kV level
5. The high voltage can be turned off by depressing the HIGH VOLTAGE OFF push-button. The supply will go into the standby mode: HIGH VOLTAGE OFF lamp on, HIGH VOLTAGE ON lamp off. The high voltage can also be turned off by shutting down the supply with the POWER breaker. When the supply is again powered up, the unit will go into the standby mode

**NOTE:** When the high voltage ON/OFF function is under local (front panel) control, the supply will always power-up in standby mode regardless of whether the high voltage was enabled or disabled at power-down.

#### **WARNING!**

**DO NOT HANDLE THE LOAD OR EXPOSED HIGH VOLTAGE TERMINATIONS OR ATTEMPT TO MAKE OR REMOVE ANY CONNECTIONS TO THE SUPPLY UNTIL THE LOAD AND/OR SUPPLY HAS BEEN DISCHARGED (GROUNDED). AN UNLOADED SUPPLY MAY TAKE UP TO 60 SECONDS TO FULLY DISCHARGE.**

## **REMOTE CONTROL AND MONITOR SIGNALS** **(Refer to customer interface drawing)**

**NOTE:** It is recommended that shielded cable(s) be used for these connections and that the shield be terminated to ground.

#### **For CE compliant supplies used in Europe:**

Please refer to the EMC addendum located elsewhere in this manual for shielding, terminating filtering conditions required to conform to 89/336/EEC.

### **CONTROL CHASSIS TB1 CONNECTIONS:**

#### **TB1-1 GROUND**

This terminal is connected directly to the chassis and is provided for cable shield termination

#### **TB1-2 COMMON**

This terminal establishes the main reference point for the supply. COMMON is connected internally to GROUND. This terminal provides a convenient return connection for INTERLOCK and TTL signals

**TB1-3 INTERLOCK**

This terminal must be connected to COMMON for the high voltage to be enabled. The supply is shipped with this terminal tied to the adjacent COMMON terminal by means of a terminal jumper. This jumper may be removed and a pair of wires may be installed in its place, which then may be connected to a switching device, such as a door interlock switch.

When the unit is in the standby mode (HIGH VOLTAGE OFF indicator illuminated), an open circuit at the INTERLOCK terminal will cause the INTERLOCK lamp to light. The interlock circuit will not allow the high voltage to be activated either by the front panel HIGH VOLTAGE ON button or by the REMOTE HV ON contact closure. When the INTERLOCK terminal is again connected to COMMON, the system will revert back to the normal standby condition.

If the high voltage is already enabled, an open circuit at the INTERLOCK terminal will disable the high voltage. Even if the open interlock is reconnected, the high voltage will remain off until a HIGH VOLTAGE ON command is received either by the front panel HIGH VOLTAGE ON button or by the REMOTE HV ON contact closure.

**TB1-5 TTL ENABLE**

This terminal is connected in parallel with J5-22. Refer to J5-22 description.

**TB1-9 REMOTE HV OFF****TB1-10 REMOTE HV OFF****TB1-11 REMOTE HV ON****TB1-12 REMOTE HV ON**

These terminals provide for control of the HIGH VOLTAGE ON and HIGH VOLTAGE OFF functions remotely when the front panel REMOTE HV ON/OFF switch is set to the REMOTE position. Under remote control, the front panel ON and OFF indicators will function normally, but the ON and OFF push-buttons are disabled. For remote operation, the user must provide one normally open momentary switch connected across the REMOTE HV ON terminals and one normally closed momentary switch connected across the REMOTE HV OFF terminals. Actuating the remote HV ON switch for > 50 ms turns the HV on. Actuating the remote HV OFF switch for > 50 ms turns the HV off.

**Note:**

- Installing a permanent connection across the REMOTE HV ON terminals will cause the supply to generate HV immediately upon the application of AC power (assuming there are no faults). In addition, if the interlock is opened disabling the HV, closure of the interlock will cause the HV to turn on immediately.
- Installing a permanent connection across the REMOTE HV OFF terminals will not allow the HV to be shut off except by the removal of AC power or the introduction of a fault or open interlock.



TB1-4 RESERVED  
TB1-5 RESERVED  
TB1-7 RESERVED  
TB1-8 RESERVED

These terminals are reserved for special options or expansion of features

### CONTROL CHASSIS J5 CONNECTIONS

J5-2 PROGRAM RETURN  
J5-3 PROGRAM RETURN  
J5-8 MONITOR RETURN  
J5-9 MONITOR RETURN

These pins are the analog programming and monitoring returns. The PROGRAM RETURNS are connected together as one floating return, and the MONITOR RETURNS are connected together as a separate independent floating return. When instruments are attached to these returns they will "float" to the level of the ground or common potential at the measuring or programming instrument. The differential amplifier circuitry employed automatically adjusts the program and monitor signals to compensate for the difference between COMMON and the ground or common potential at the instrument. This results in a reduction of AC noise and DC offset components between the power supply and the measuring and/or programming instrument.

**Caution:** Do not allow PROGRAM RETURN or MONITOR RETURN to exceed more than a  $\pm 3$  V difference with respect to supply COMMON. RETURNS MUST BE CONNECTED TO A LOW IMPEDANCE SOURCE TO INSURE ACCURATE READINGS.

J5-6 COMMON  
J5-18 COMMON

These signal commons are provided as a return for TTL HV ENABLE and if desired, a connection point to reference any of the following signals:

- PROGRAM RETURN
- MONITOR RETURN
- CONTROL STATUS (COM)
- HV STATUS (COM)
- FAULT STATUS (COM)

J5-24 GROUND  
J5-25 GROUND

These connections are for instrumentation grounding. These connections can be used to ground the shield of the CUSTOMER INTERFACE cable. These connections should NOT be used as the main



connection to earth ground. Use the main ground terminal, E1 on the driver chassis, for that purpose.

**J5-5     +10 V REFERENCE**  
**J5-17    +10 V REFERENCE**

This output is an ultra-stable, positive 10 V reference that is supplied for user programming applications. Maximum current drain should be limited to 4 mA.

It is suggested that if this output is to be used for programming, that the PROGRAM RETURN be connected to COMMON. This reference is regulated to COMMON not the PROGRAM RETURN and may cause an error in programming level equal to the differential between the commons. An external reference regulated to PROGRAM COMMON may be used if required.

**J5-22    TTL ENABLE**

For this input to function, the rear panel TTL switch must be in the REMOTE (down) position. When the switch is in the REMOTE position, actuating the HIGH VOLTAGE ON switch (either front panel or external) will not generate HV unless there is a "HIGH" (+2.5 V to +5 V) signal present at this connection. (Since the input is clamped to a zener diode through a 10 k ohm impedance, any voltage from 5 to 15 V is acceptable for enabling this input.) A "LOW" (V = 0 to 2.0 V) or disconnect will turn the high voltage off. (This will also reset CURRENT TRIP if enabled.)

Unlike the front panel push-buttons, the signal applied to the TTL ENABLE input must be a constant, not momentary signal. An example of how the TTL ENABLE signal operates the high voltage follows:

- 1 AC power is applied to the supply with TTL ENABLE "LOW". Supply is now in standby mode.
- 2 The HIGH VOLTAGE ON switch is actuated (either front panel or external). The supply is no longer in standby, but the HV generation is inhibited by the TTL ENABLE signal.
- 3 A "HIGH" signal is sent to the TTL ENABLE input, turning on the high voltage.
- 4 Sometime later, with the supply set for current trip (rear panel CURRENT switch in TRIP position), an overcurrent occurs and the HV latches off. The supply is now in current trip mode as indicated by the illumination of the MILLIAMPERE/AMPERE CONTROL lamp.
- 5 The "HIGH" signal at the TTL ENABLE input is brought "LOW", resetting the current trip circuit as indicated by the MILLIAMPERE/AMPERE CONTROL lamp extinguishing and the KILOVOLT CONTROL lamp illuminating. The HV remains off due to the TTL ENABLE "LOW".
- 6 A high signal is again applied to the TTL ENABLE input and the high voltage output returns.

**J5-1     V PROGRAM**

This input becomes active when the front panel REMOTE PROGRAMMING kV switch is in the REMOTE position; the front panel KILOVOLT CONTROL is then disabled. A 0 to +10 V signal with respect to PROGRAM RETURN at this input will program the output voltage proportionally from zero

to full output. There are several ways to program this input:

- A user supplied 0 to +10 V signal (such as a D to A converter)
- A user supplied potentiometer (5 to 50 k ohms, 10 k nominal) can be connected between the +10 V REFERENCE and PROGRAM RETURN with the wiper connected to V PROGRAM and the PROGRAM RETURN connected to COMMON.
- The V PROGRAM input may be jumpered to the +10 V REFERENCE and the PROGRAM RETURN connected to COMMON for a fixed output at the maximum voltage. A resistor divider could also be used to program any fixed voltage.

**Note:** The PROGRAM RETURN should always be terminated by a low impedance source to within  $\pm 3$  V of ground at the programming source. Leaving the PROGRAM RETURN "floating" will introduce noise and offsets on the programming signal.

#### J5-4 I PROGRAM

This input becomes active when the front panel REMOTE PROGRAMMING mA switch is in the REMOTE position; the front panel MILLIAMPERE/AMPERE CONTROL is then disabled. A 0 to +10 V signal with respect to PROGRAM RETURN, at this input will program the output voltage proportionally from zero to full output. There are several ways to program this input:

- A user supplied 0 to +10 V signal (such as a D to A converter).
- A user supplied potentiometer (5 to 50 k ohms, 10 k nominal) can be connected between the +10 V REFERENCE and PROGRAM RETURN with the wiper connected to I PROGRAM and the PROGRAM RETURN connected to COMMON.
- The I PROGRAM input may be jumpered to the +10 V REFERENCE and the PROGRAM RETURN connected to COMMON for a fixed output at the maximum voltage. A resistor divider could also be used to program any fixed voltage.

**Note:** The PROGRAM RETURN should always be terminated by a low impedance source to within  $\pm 3$  V of ground at the programming source. Leaving the PROGRAM RETURN "floating" will introduce noise and offsets on the programming signal.

#### J5-7 V MONITOR

This output is a 0 to 10 V signal, positive with respect to MONITOR RETURN, and in direct proportion to the output voltage. A 10 k ohm limiting impedance protects the internal circuitry. Thus, the instrument monitoring this output should have an input impedance greater than 10 megohms; otherwise, the accuracy of the measurement will be degraded. It is also acceptable to use a 1 mA full scale analog meter for monitoring purposes.

**Note:** The MONITOR RETURN should always be terminated by a low impedance source to within  $\pm 3$  V of ground at the monitoring instrument. Leaving the MONITOR RETURN "floating" will introduce noise and offsets on the monitor signal. It is suggested when a high impedance instrument is employed, that a

small bypass capacitor (such as 0.01  $\mu$ F) be added at the instrument between the V MONITOR line and MONITOR RETURN, to reduce any high frequency noise that may be picked up on the line.

#### **J5-10 I MONITOR**

This output is a 0 to 10 V signal, positive with respect to MONITOR RETURN, and in direct proportion to the output current. A 10 k ohm limiting impedance protects the internal circuitry. Thus, the instrument monitoring this output should have an input impedance greater than 10 megohms, otherwise, the accuracy of the measurement will be degraded. It is also acceptable to use a 1 mA full scale analog meter for monitoring purposes.

**Note:** The MONITOR RETURN should always be terminated by a low impedance source to within  $\pm 3$  V of ground at the monitoring instrument. Leaving the MONITOR RETURN "floating" will introduce noise and offsets on the monitor signal. It is suggested when a high impedance instrument is employed, that a small bypass capacitor (such as 0.01  $\mu$ F) be added at the instrument between the V MONITOR line and MONITOR RETURN, to reduce any high frequency noise that may be picked up on the line.

#### **STATUS MONITOR SIGNALS**

Three status monitor signals are provided for logic or computer interface. These signals are supplied by means of "Form C" (SPDT) relay contacts. The contact ratings are 24 V @ 1 A max and are isolated from ground by 60 VDC maximum. The three sets of status monitor relay connections are as follows:

- J5-13 V CONTROL STATUS (NC)**
- J5-12 I CONTROL STATUS (NO)**
- J5-11 CONTROL STATUS (COM)**

When the supply goes into current regulation or CURRENT TRIP mode (as determined by the rear panel CURRENT switch), the CONTROL STATUS relay energizes and the CONTROL STATUS (COM) contact transfers from V CONTROL (NC) to I CONTROL (NO).

- J5-14 HV STATUS (NC)**
- J5-15 HV STATUS (NO)**
- J5-16 HV STATUS (COM)**

When the supply begins generating HV, the HV STATUS relay energizes and the HV STATUS (COM) contact transfers from HV STATUS (NC) to HV STATUS (NO).

- J5-19    FAULT STATUS (NC)**
- J5-20    FAULT STATUS (NO)**
- J5-23    FAULT STATUS (COM)**

When an internal fault occurs, the FAULT STATUS relay energizes and the FAULT STATUS (COM) contact transfers from FAULT STATUS (NC) to FAULT STATUS (NO).


As an illustration of how FAULT STATUS and HV STATUS signals differ, consider the following scenario:

- 1 Initially, there is no AC power applied and all status relays are de-energized
- 2 AC power is applied with a "HIGH" on the TTL ENABLE (with TTL switch set to REMOTE) There is no change to the status relays (assuming there are no faults)
- 3 The HIGH VOLTAGE ON push-button is pressed causing the generation of HV and the HV STATUS relay to energize
- 4 Sometime later, a fan fails inside the unit causing a fault and shutting off the high voltage The FAULT STATUS relay energizes to indicate the presence of a fault and the HV STATUS relay de-energizes indicating the absence of HV at the output
- 5 An attempt is made to restart the HV by depressing the HV on switch and toggling the TTL ENABLE signal, but the fault prevents the HV from being enabled and there is no effect on the HV STATUS relay
- 6 The supply is powered down and the defective fan is replaced
- 7 AC power is applied with a "LOW" TTL ENABLE signal The FAULT STATUS relay is de-energized because there is no longer a fan fault
- 8 The HIGH VOLTAGE ON button is pressed causing the HIGH VOLTAGE ON lamp to illuminate However, the HV STATUS relay does not energize and no HV is generated because the TTL ENABLE is still low
- 9 Upon bringing the TTL ENABLE signal "HIGH", HV is generated and the HV status relay energizes

#### **J5-21    RESERVED**

This connection is reserved for special options or future expansion of features

REV	BY	DESCRIPTION	DATE	APPROVED
A	TJM	ECN 6365: REF TO NEXT SLAVE REMOVED, FIXED P5 & P6 GENDER	110999	SD
B	TJM	ECN 6454: ADDED NOTES 2 & 3	011900	J.M.

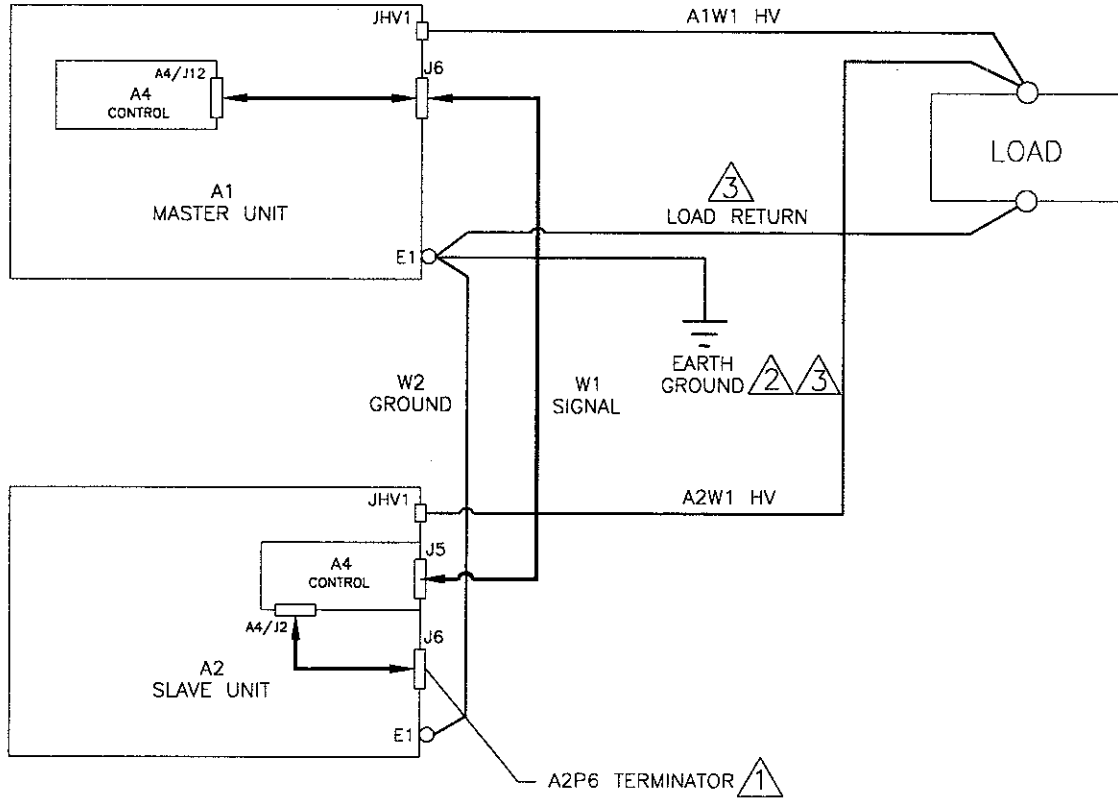



# NOTES:

1. TERMINATOR IS A MALE PLUG WITH PINS 2 AND 3 WIRED TOGETHER & PINS 4 AND 5 WIRED TOGETHER, TO BE CONNECTED TO J6 OF SLAVE UNIT


2. **WARNING!!** NEVER OPERATE THIS SYSTEM WITHOUT A GOOD EARTH GROUND CONNECTED AS SHOWN.

3. PROVIDED BY USER.

 SIGNAL	MODULE INTERCONNECT CABLE	
	M P6 MASTER	F P5 SLAVE 1
SLAVE HV ON	1	1
SLAVE FAULT +	2	2
SLAVE FAULT -	3	3
SLAVE TTL	6	6
COMMON	7	7
POLARITY	8	8
RESERVED	9	9
V PROGRAM	11	11
IFB	12	12
I PROGRAM	13	13
SIGNAL COMMON	14	14
SHIELD GROUND	NC	15

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE : DEC XXX ± XX ± DEG ±  THIRD ANGLE PROJECTION DO NOT SCALE DRAWING	FILE NO. EXTENSION \1000\66001B.DWG		 GLASSMAN HIGH VOLTAGE, INC. P.O. BOX 551, WHITEHOUSE STATION, N.J. 08889 (908) 534-9007 FAX (908) 534-5672	
	APPROVALS DRAWN TJM CHECKED SD RELEASED		DATE 100199 100199	
	TITLE SYSTEM SCHEMATIC SH MASTER/SLAVE		DWG. NO. 100066-001 REV. B	
	SCALE NONE		SHEET 1 OF 1	


REV. BY: DATE: APPROVED:

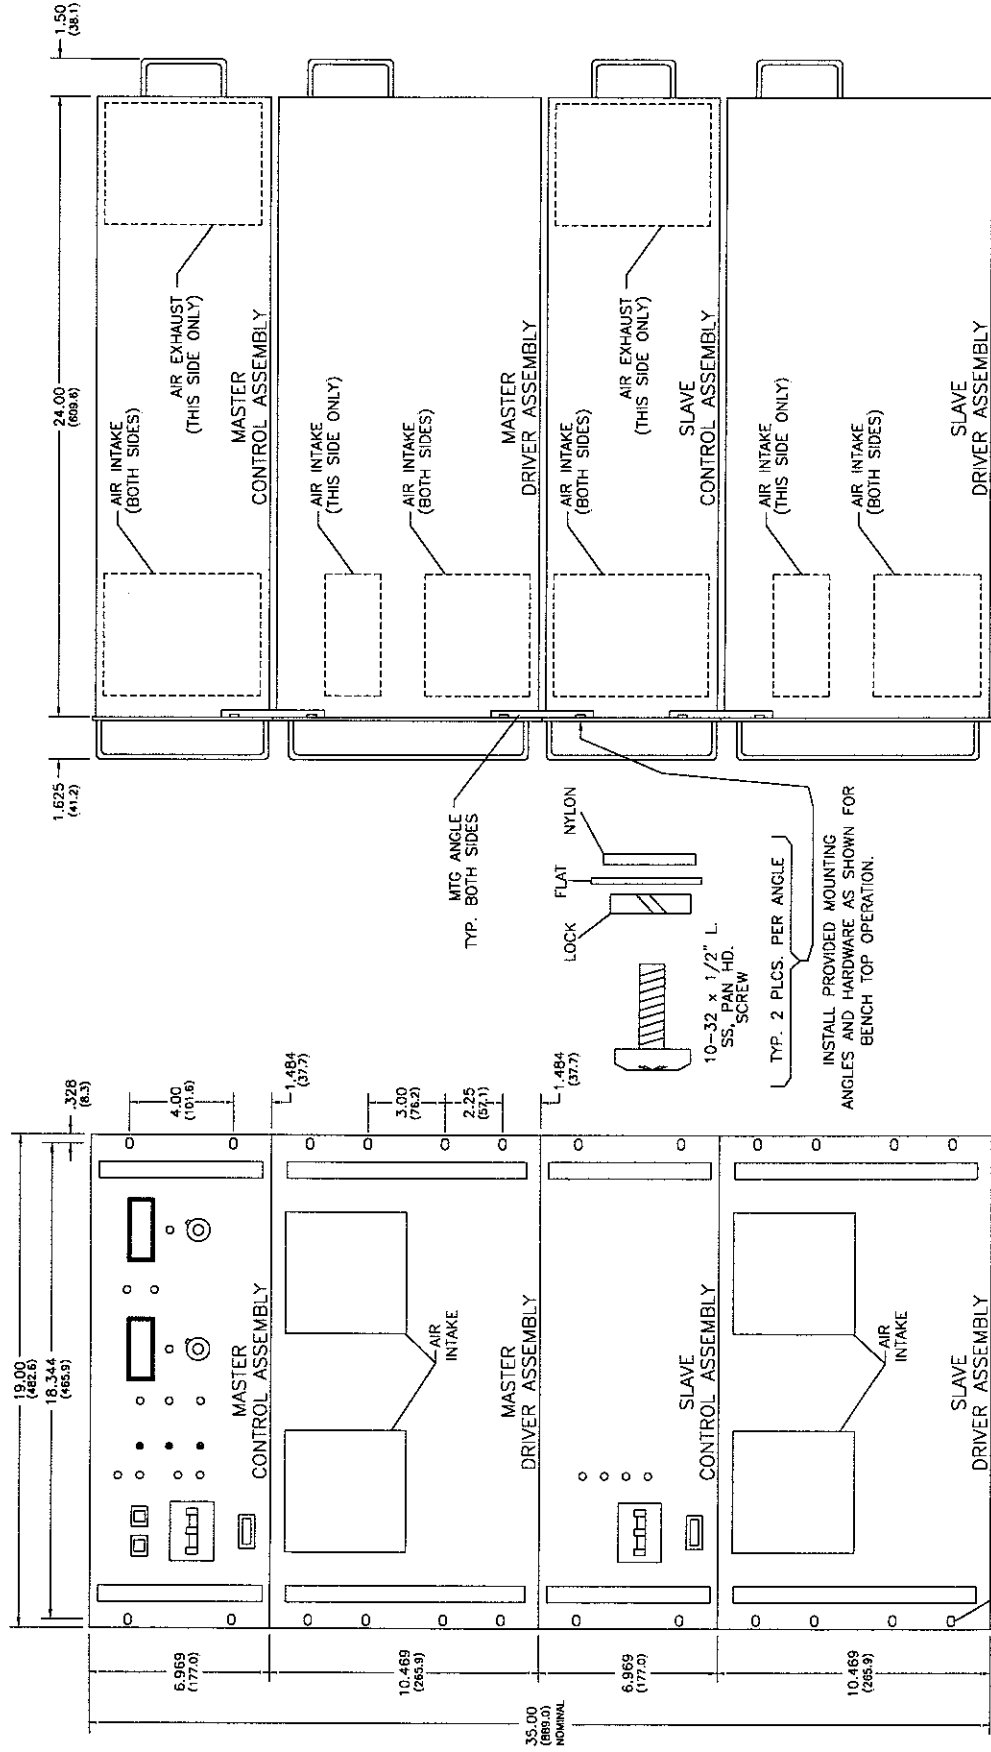

FILE NO.	EXTENSION	DATE	SCALE	SHEET
2014-04019-019	019	08/28/14	1:1	1 OF 2
DESIGNED BY	CHKD BY	APP'D BY	DATE	
08/28/14	08/28/14	08/28/14	08/28/14	
GASSMAN HIGH VOLTAGE, INC.				
P.O. BOX 371, NEW IRON, IL 60069				
TEL: 815-331-3000 FAX: 815-331-3005				
E-MAIL: GHI@GHI.COM				
PROJECT: 201404-019				
DESCRIPTION: MASTER/SLAVE				
REV. NR.				
0				

FOR PROPER INSTALLATION, IT IS RECOMMENDED TO MOUNT EQUIPMENT IN A RACK CABINET OR BENCH TOP ENCLOSURE.



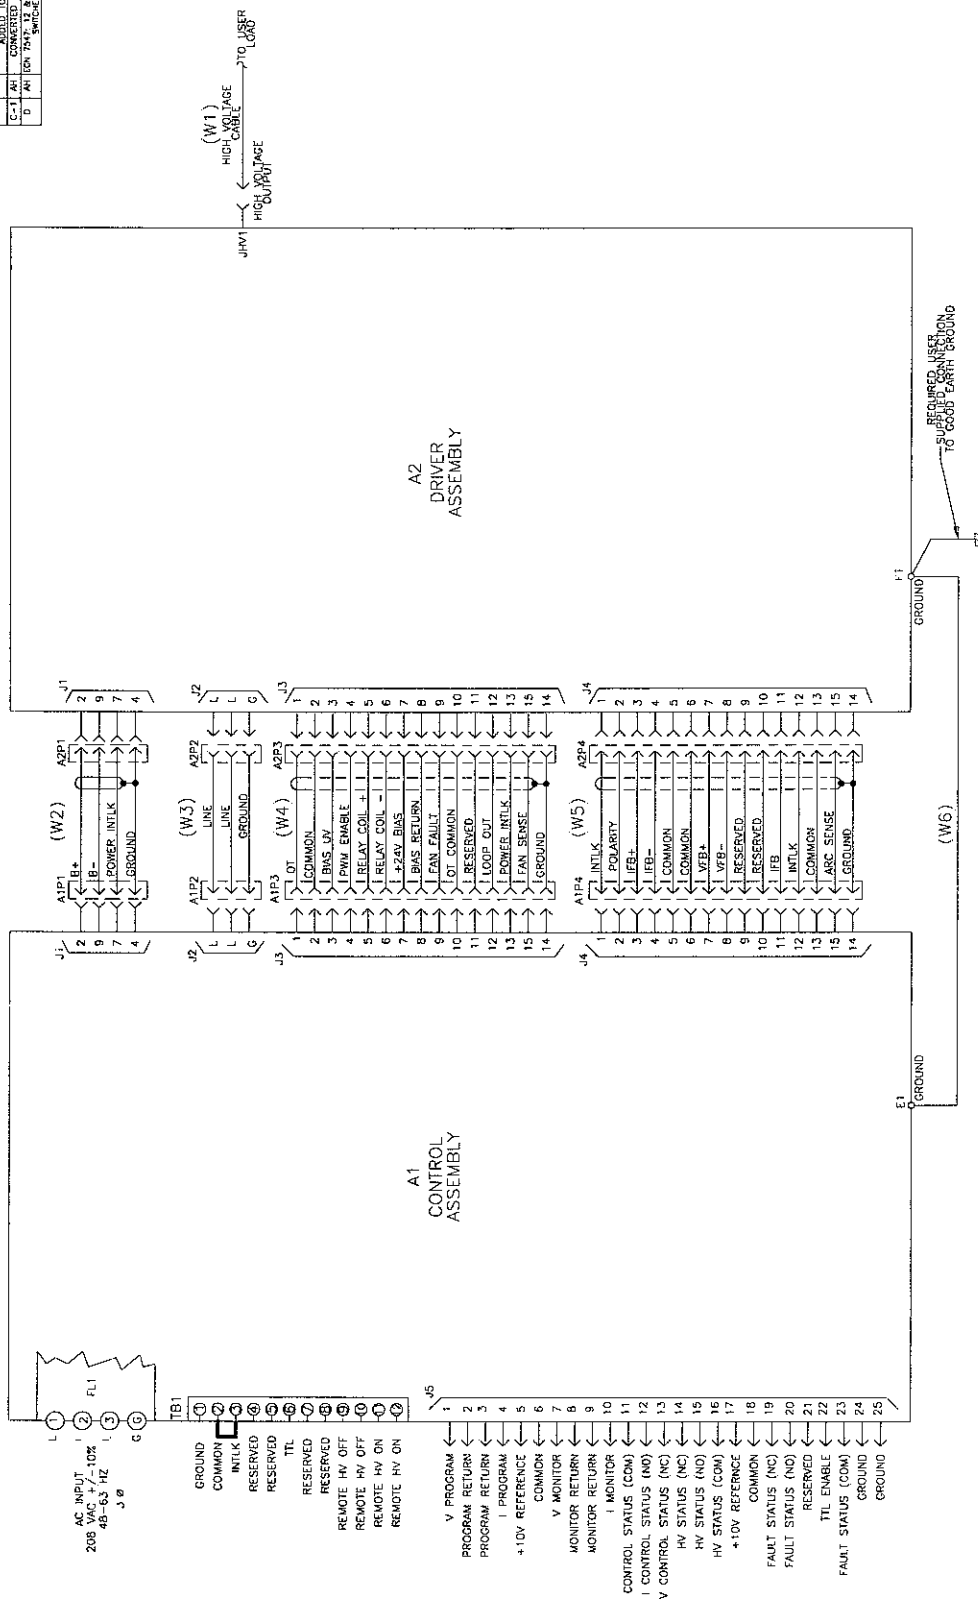


		DIMENSIONS 2001 1/4" x 10 1/2" x 1/4"		FILE NO. 2001 1/4" x 10 1/2" x 1/4"		TITLE SCHEMATIC DIAGRAM OF THE P-505 SERIES		REV. D	
APPROVALS DRAWN DATE CHECKED RELEASED		APPROVALS DRAWN DATE CHECKED RELEASED		APPROVALS DRAWN DATE CHECKED RELEASED		APPROVALS DRAWN DATE CHECKED RELEASED		APPROVALS DRAWN DATE CHECKED RELEASED	
DEC. 1991 LATED WITH NO NET SCALE DRAWING		DEC. 1991 LATED WITH NO NET SCALE DRAWING		DEC. 1991 LATED WITH NO NET SCALE DRAWING		DEC. 1991 LATED WITH NO NET SCALE DRAWING		DEC. 1991 LATED WITH NO NET SCALE DRAWING	



FIGURE 4  
GRAM

REMOTE INTERLOCK



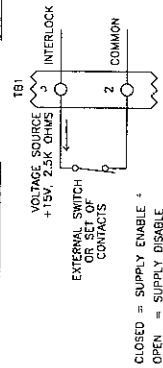



Figure 2

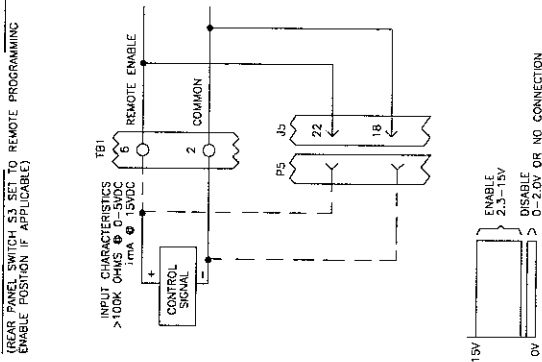


ENCLOSURE 2

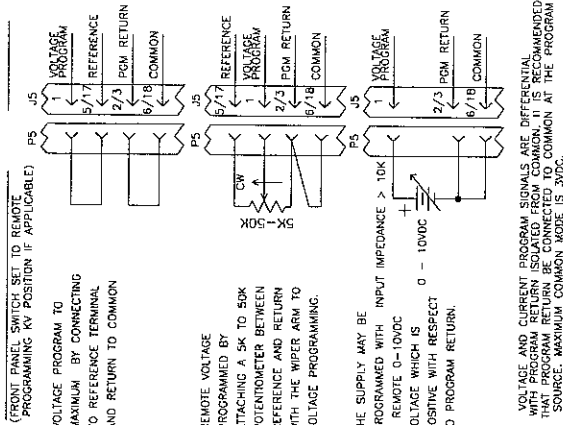


2000

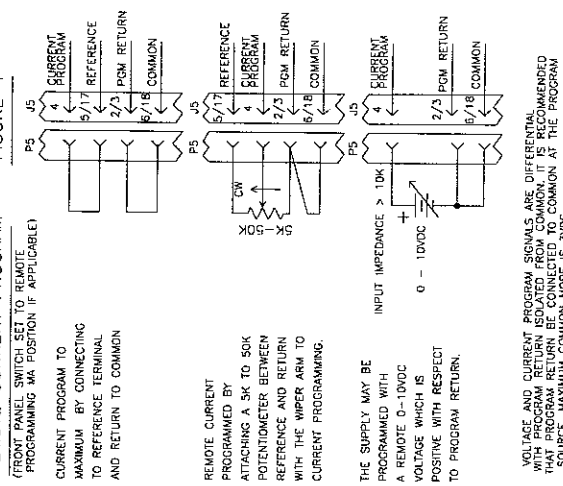


## CURRENT MONITOR

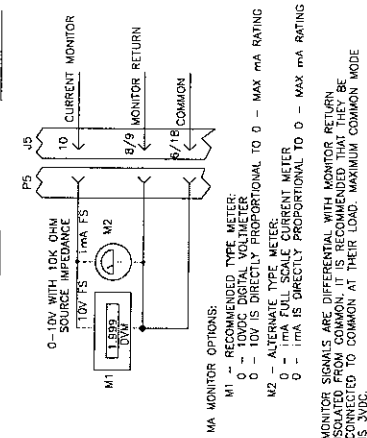


# STATIC CINCINNATI

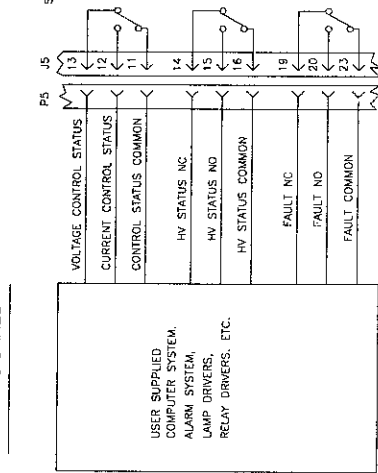

1000

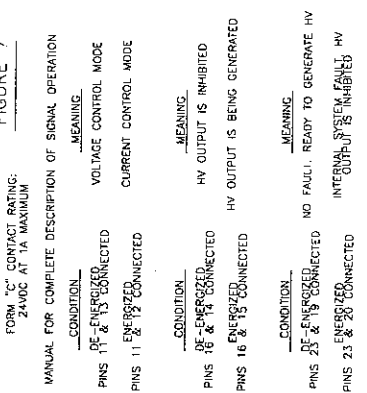

SOURCE: INFORMATION COMMUNITY

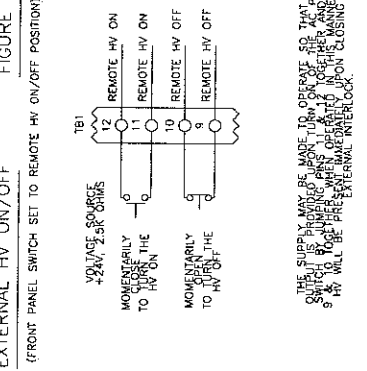


THE SUPPLY MAY BE MADE TO OPERATE SO THAT THE OUTPUT IS PROVIDED UPON TURN ON OF THE AC POWER SWITCH BY JUMPING PINS 11 & 12 TOGETHER AND PINS 13 & 14 TOGETHER WHEN OPERATED IN THIS MANNER THE HW WILL BE PRESENT IMMEDIATELY UPON CLOSING THE EXTERNAL INTERLOCK.

NOTES:

1. THESE DIAGRAMS ARE PROVIDED AS A SUPPLEMENT TO THE INSTRUCTION MANUAL TEXT, NOT AS A SUBSTITUTE. READ INSTRUCTION MANUAL TEXT CAREFULLY BEFORE MAKING CONNECTIONS.
2. TERMINAL NUMBERS SEPARATED BY A "/", SUCH AS 9/72, MEANS EITHER TERMINAL MAY BE USED FOR THE CONNECTION.

PLANS: DIMENSIONS ARE IN INCHES DIMENSIONS ARE IN METERS DIMENSIONS ARE IN FEET		FILE NO. EXTENSION TYPED/REVISION/DWG. NO.	GLASSMAN HIGH VOLTAGE, INC. 10000 10TH AVE. S.W. (908) 538-3800 FAX (908) 538-3700
Dwg. No. 200169-001	SHEET OF 1	DATE 08/17/99	REMOTE CONTROL INTERFACE SH SERIES
Dwg. No. 200169-001	SCALE NONE	CHECKED BY 08/17/99	REV. A
DO NOT SCALE DRAWING	MATERIAL FINISH	APPROVAL INCHES METERS FEET	TITLE REMOTE CONTROL INTERFACE SH SERIES

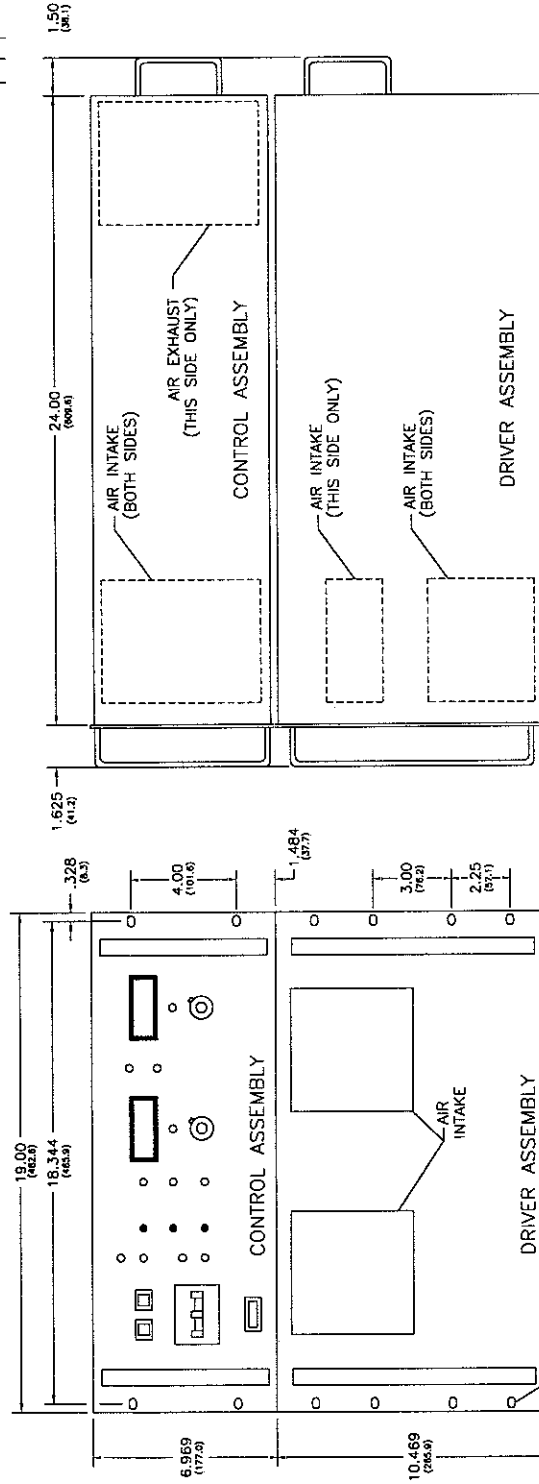

### CONTROL ASSEMBLY


- J5 - 1 - V PROGRAM RETURN
- 2 - HV STATUS (NO)
- 3 - HV STATUS (COM)
- 4 - I PROGRAM RETURN
- 5 - +10V REFERENCE
- 6 - COMMON
- 7 - V MONITOR RETURN
- 8 - MONITOR RETURN
- 9 - I MONITOR RETURN
- 10 - I MONITOR STATUS (COM)
- 11 - CONTROL STATUS (NO)
- 12 - I CONTROL STATUS (NO)
- 13 - V CONTROL STATUS (NC)
- 14 - HV STATUS (NC)
- 15 - HV STATUS (NO)
- 16 - HV STATUS (COM)
- 17 - +10V REFERENCE
- 18 - COMMON
- 19 - FAULT STATUS (NC)
- 20 - FAULT STATUS (NO)
- 21 - RESERVED
- 22 - TTL ENABLE
- 23 - FAULT STATUS (COM)
- 24 - GROUND
- 25 - GROUND
- TB1 - 1 - GROUND
- 2 - COMMON
- 3 - INTERLOCK
- 4 - RESERVED
- 5 - TTL ENABLE
- 6 - TTL ENABLE
- 7 - RESERVED
- 8 - RESERVED
- 9 - REMOTE HV OFF
- 10 - REMOTE HV OFF
- 11 - REMOTE HV ON
- 12 - REMOTE HV ON

- J1 - DC POWER INTERFACE
- J2 - AC POWER INTERFACE
- J3 - AC POWER INTERFACE
- J4 - HIGH VOLTAGE INTERFACE
- E1 - GROUND STUD
- FL1 - AC INPUT - 208 VAC +/- 10% 48-63 HZ 3 PHASE
- S3 - TTL LOCAL/REMOTE
- S4 - CURRENT LIMIT/TRIP

STRAIN RELIEF FOR .70" - .98" DIA. CORD OR INSULATED WIRE BUNDLE. (SUPPLIED)  
 PROPER INSULATION/STRAIN RELIEF MUST BE MAINTAINED THROUGH AC TERMINAL COVER FOR SAFE OPERATION!  
 FAN GUARD PROVIDED ON >6KV UNITS. AIR HOLES ON 1-6KV UNITS.

### DRIVER ASSEMBLY

- J1 - DC POWER INTERFACE
- J2 - AC POWER INTERFACE
- JHV1 - HIGH VOLTAGE OUTPUT CONNECTOR
- E1 - LOAD RETURN GROUND STUD

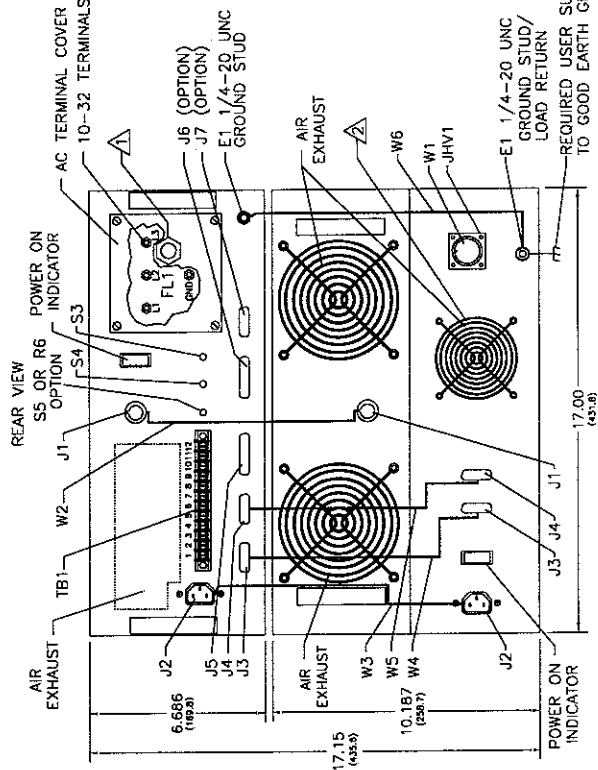


REQUIRED USER SUPPLIED CONNECTION TO GOOD EARTH GROUND

NET WEIGHT: 110 lbs. 41 kg.

FILE NO. 101A-0417-200		DATE 10/20/74		APPROVED	
DESIGNED BY		CHECKED BY		DRAWN BY	
TYPED BY		DATE		TITL	
REV. 1		REV. 2		REV. 3	
REV. 4		REV. 5		REV. 6	
REV. 7		REV. 8		REV. 9	
REV. 10		REV. 11		REV. 12	
REV. 13		REV. 14		REV. 15	
REV. 16		REV. 17		REV. 18	
REV. 19		REV. 20		REV. 21	
REV. 22		REV. 23		REV. 24	
REV. 25		REV. 26		REV. 27	
REV. 28		REV. 29		REV. 30	
REV. 31		REV. 32		REV. 33	
REV. 34		REV. 35		REV. 36	
REV. 37		REV. 38		REV. 39	
REV. 40		REV. 41		REV. 42	
REV. 43		REV. 44		REV. 45	
REV. 46		REV. 47		REV. 48	
REV. 49		REV. 50		REV. 51	
REV. 52		REV. 53		REV. 54	
REV. 55		REV. 56		REV. 57	
REV. 58		REV. 59		REV. 60	
REV. 61		REV. 62		REV. 63	
REV. 64		REV. 65		REV. 66	
REV. 67		REV. 68		REV. 69	
REV. 70		REV. 71		REV. 72	
REV. 73		REV. 74		REV. 75	
REV. 76		REV. 77		REV. 78	
REV. 79		REV. 80		REV. 81	
REV. 82		REV. 83		REV. 84	
REV. 85		REV. 86		REV. 87	
REV. 88		REV. 89		REV. 90	
REV. 91		REV. 92		REV. 93	
REV. 94		REV. 95		REV. 96	
REV. 97		REV. 98		REV. 99	
REV. 100		REV. 101		REV. 102	
REV. 103		REV. 104		REV. 105	
REV. 106		REV. 107		REV. 108	
REV. 109		REV. 110		REV. 111	
REV. 112		REV. 113		REV. 114	
REV. 115		REV. 116		REV. 117	
REV. 118		REV. 119		REV. 120	
REV. 121		REV. 122		REV. 123	
REV. 124		REV. 125		REV. 126	
REV. 127		REV. 128		REV. 129	
REV. 130		REV. 131		REV. 132	
REV. 133		REV. 134		REV. 135	
REV. 136		REV. 137		REV. 138	
REV. 139		REV. 140		REV. 141	
REV. 142		REV. 143		REV. 144	
REV. 145		REV. 146		REV. 147	
REV. 148		REV. 149		REV. 150	
REV. 151		REV. 152		REV. 153	
REV. 154		REV. 155		REV. 156	
REV. 157		REV. 158		REV. 159	
REV. 160		REV. 161		REV. 162	
REV. 163		REV. 164		REV. 165	
REV. 166		REV. 167		REV. 168	
REV. 169		REV. 170		REV. 171	
REV. 172		REV. 173		REV. 174	
REV. 175		REV. 176		REV. 177	
REV. 178		REV. 179		REV. 180	
REV. 181		REV. 182		REV. 183	
REV. 184		REV. 185		REV. 186	
REV. 187		REV. 188		REV. 189	
REV. 190		REV. 191		REV. 192	
REV. 193		REV. 194		REV. 195	
REV. 196		REV. 197		REV. 198	
REV. 199		REV. 200		REV. 201	
REV. 202		REV. 203		REV. 204	
REV. 205		REV. 206		REV. 207	
REV. 208		REV. 209		REV. 210	
REV. 211		REV. 212		REV. 213	
REV. 214		REV. 215		REV. 216	
REV. 217		REV. 218		REV. 219	
REV. 220		REV. 221		REV. 222	
REV. 223		REV. 224		REV. 225	
REV. 226		REV. 227		REV. 228	
REV. 229		REV. 230		REV. 231	
REV. 232		REV. 233		REV. 234	
REV. 235		REV. 236		REV. 237	
REV. 238		REV. 239		REV. 240	
REV. 241		REV. 242		REV. 243	
REV. 244		REV. 245		REV. 246	
REV. 247		REV. 248		REV. 249	
REV. 250		REV. 251		REV. 252	
REV. 253		REV. 254		REV. 255	
REV. 256		REV. 257		REV. 258	
REV. 259		REV. 260		REV. 261	
REV. 262		REV. 263		REV. 264	
REV. 265		REV. 266		REV. 267	
REV. 268		REV. 269		REV. 270	
REV. 271		REV. 272		REV. 273	
REV. 274		REV. 275		REV. 276	
REV. 277		REV. 278		REV. 279	
REV. 280		REV. 281		REV. 282	
REV. 283		REV. 284		REV. 285	
REV. 286		REV. 287		REV. 288	
REV. 289		REV. 290		REV. 291	
REV. 292		REV. 293		REV. 294	
REV. 295		REV. 296		REV. 297	
REV. 298		REV. 299		REV. 300	
REV. 301		REV. 302		REV. 303	
REV. 304		REV. 305		REV. 306	
REV. 307		REV. 308		REV. 309	
REV. 310		REV. 311		REV. 312	
REV. 313		REV. 314		REV. 315	
REV. 316		REV. 317		REV. 318	
REV. 319		REV. 320		REV. 321	
REV. 322		REV. 323		REV. 324	
REV. 325		REV. 326		REV. 327	
REV. 328		REV. 329		REV. 330	
REV. 331		REV. 332		REV. 333	
REV. 334		REV. 335		REV. 336	
REV. 337		REV. 338		REV. 339	
REV. 340		REV. 341		REV. 342	
REV. 343		REV. 344		REV. 345	
REV. 346		REV. 347		REV. 348	
REV. 349		REV. 350		REV. 351	
REV. 352		REV. 353		REV. 354	
REV. 355		REV. 356		REV. 357	
REV. 358		REV. 359		REV. 360	
REV. 361		REV. 362		REV. 363	
REV. 364		REV. 365		REV. 366	
REV. 367		REV. 368		REV. 369	
REV. 370		REV. 371		REV. 372	
REV. 373		REV. 374		REV. 375	
REV. 376		REV. 377		REV. 378	
REV. 379		REV. 380		REV. 381	
REV. 382		REV. 383		REV. 384	
REV. 385		REV. 386		REV. 387	
REV. 388		REV. 389		REV. 390	
REV. 391		REV. 392		REV. 393	
REV. 394		REV. 395		REV. 396	
REV. 397		REV. 398		REV. 399	
REV. 400		REV. 401		REV. 402	
REV. 403		REV. 404		REV. 405	
REV. 406		REV. 407		REV. 408	
REV. 409		REV. 410		REV. 411	
REV. 412		REV. 413		REV. 414	
REV. 415		REV. 416		REV. 417	
REV. 418		REV. 419		REV. 420	
REV. 421		REV. 422		REV. 423	
REV. 424		REV. 425		REV. 426	
REV. 427		REV. 428		REV. 429	
REV. 430		REV. 431		REV. 432	
REV. 433		REV. 434		REV. 435	
REV. 436		REV. 437		REV. 438	
REV. 439		REV. 440		REV. 441	
REV. 442		REV. 443		REV. 444	
REV. 445		REV. 446		REV. 447	
REV. 448		REV. 449		REV. 450	
REV. 451		REV. 452		REV. 453	
REV. 454		REV. 455		REV. 456	
REV. 457		REV. 458		REV. 459	
REV. 460		REV. 461		REV. 462	
REV. 463		REV. 464		REV. 465	
REV. 466		REV. 467		REV. 468	
REV. 469		REV. 470		REV. 471	
REV. 472		REV. 473		REV. 474	
REV. 475		REV. 476		REV. 477	
REV. 478		REV. 479		REV. 480	
REV. 481		REV. 482		REV. 483	
REV. 484		REV. 485		REV. 486	
REV. 487		REV. 488		REV. 489	
REV. 490		REV. 491		REV. 492	
REV. 493		REV. 494		REV. 495	
REV. 496		REV. 497		REV. 498	
REV. 499		REV. 500		REV. 501	
REV. 502		REV. 503		REV. 504	
REV. 505		REV. 506		REV. 507	
REV. 508		REV. 509		REV. 510	
REV. 511		REV. 512		REV. 513	
REV. 514		REV. 515		REV. 516	
REV. 517		REV. 518		REV. 519	
REV. 520		REV. 521		REV. 522	
REV. 523		REV. 524		REV. 525	
REV. 526		REV. 527		REV. 528	
REV. 529		REV. 530		REV. 531	
REV. 532		REV. 533		REV. 534	
REV. 535		REV. 536		REV. 537	
REV. 538		REV. 539		REV. 540	
REV. 541		REV. 542		REV. 543	
REV. 544		REV. 545		REV. 546	
REV. 547		REV. 548		REV. 549	
REV. 550		REV. 551		REV. 552	
REV. 553		REV. 554		REV. 555	
REV. 556		REV. 557		REV. 558	
REV. 559		REV. 560		REV. 561	
REV. 562		REV. 563		REV. 564	
REV. 565		REV. 566		REV. 567	
REV. 568		REV. 569		REV. 570	
REV. 571		REV. 572		REV. 573	
REV. 574		REV. 575		REV. 576	
REV. 577		REV. 578		REV. 579	
REV. 580		REV. 581		REV. 582	
REV. 583		REV. 584		REV. 585	
REV. 586		REV. 587		REV. 588	
REV. 589		REV. 590		REV. 591	
REV. 592		REV. 593		REV. 594	
REV. 595		REV. 596		REV. 597	
REV. 598		REV. 599		REV. 600	
REV. 601		REV. 602		REV. 603	
REV. 604		REV. 605		REV. 606	
REV. 607		REV. 608		REV. 609	
REV. 610		REV. 611		REV. 612	
REV. 613		REV. 614		REV. 615	
REV. 616		REV. 617		REV. 618	
REV. 619		REV. 620		REV. 621	
REV. 622		REV. 623		REV. 624	


REV	BY	DESCRIPTION	DATE	APPROVED

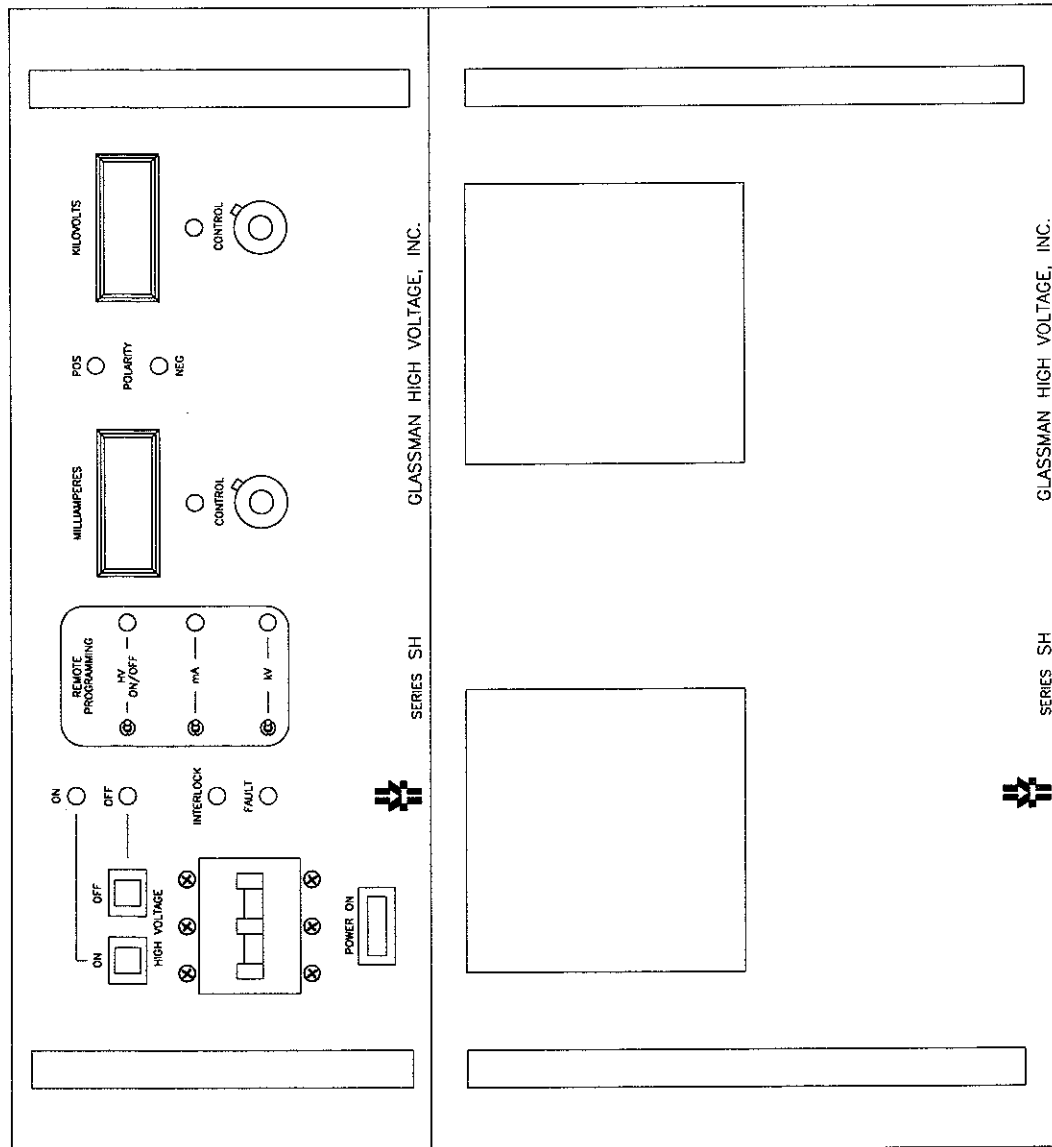

GLASSMAN HIGH VOLTAGE, INC. P.O. BOX 310, NEW BRIDGE, N.J. 08053 TEL: (609) 326-5500 FAX: (609) 326-5505		TITLE OUTLINE & INSTALLATION SH SERIES		REV
FILE NO.	DESCRIPTION	DATE	DATE	
V2014\04017-JWG		06/20/14		
APPROVALS	DATE			
DESIGNED	DATE			
CHECKED	DATE			
RELEASED	DATE			
Dwg No. 201404-017 Scale: NONE		SHEET 2 OF 3		

IN  
(MM)

REV	BY	DESCRIPTION	DATE	APPROVED


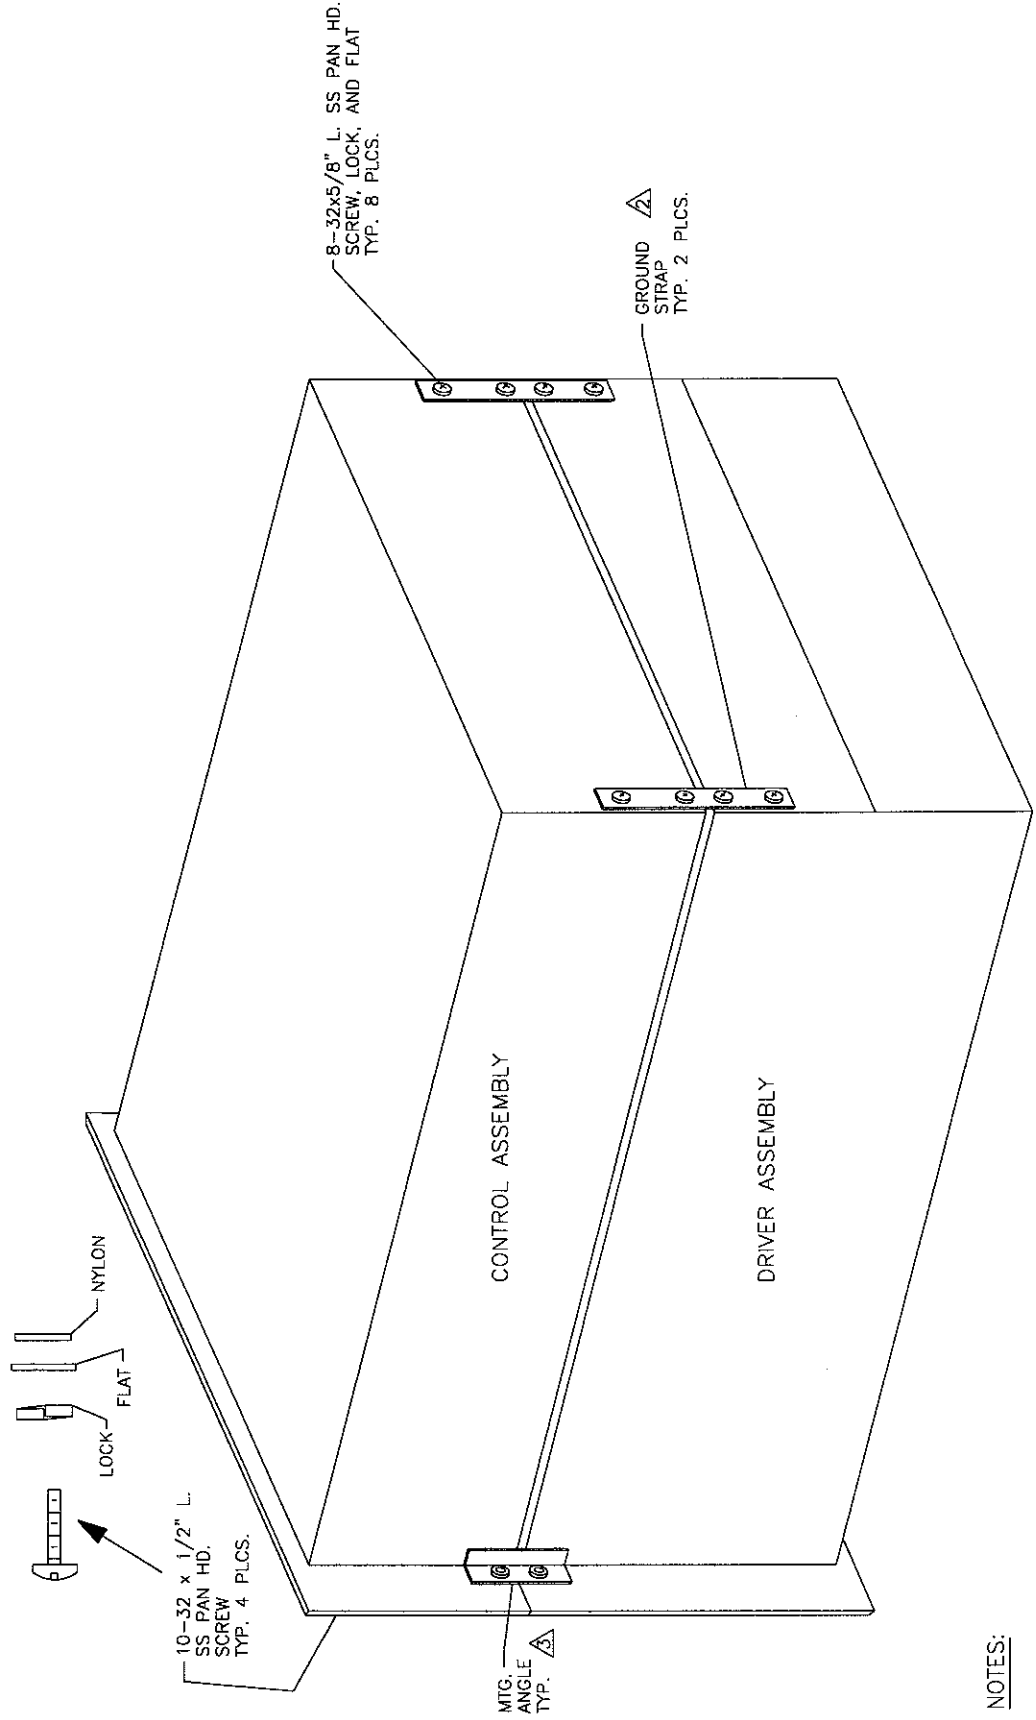


**NOTES:**

- i - FOR PROPER INSTALLATION IT IS RECOMMENDED TO MOUNT EQUIPMENT IN A RACK CABINET OR BENCH TOP ENCLOSURE.
- Δ - ATTACH GROUND STRAPS AS SHOWN AND SECURE WITH HARDWARE PROVIDED.
- Δ - FOR BENCH TOP OPERATION WITHOUT AN ENCLOSURE, ATTACH MOUNTING ANGLES AS SHOWN.



UNLESS OTHERWISE SPECIFIED, DIMENSIONS ARE IN INCHES (MM)		FILE NO.		EXTENSION		GLASSMAN HIGH VOLTAGE, INC.	
REV	NO	DATE	BY	CHKD	DATE	BY	DATE
1	1	10/17/01	1	1	10/17/01	1	10/17/01
TITLE		SUBJECT		SHEET NO.		SHEET TOTAL	
OUTLINE & INSTALLATION		SH SERIES		D		201404-017	
DRAWN		CHKD		SCALE		NONE	
TWO ANGLE INDICATION		RELEASED		BY		DATE	
DO NOT SCALE DRAWING		BY		DATE		DATE	

REV	BY	DESCRIPTION	DATE	APPROVED
REV-1	JMC	ISSUED INT'L & TYPED	03/28/99	JMC
REV-2	JMC	ISSUED FOR PRODUCTION	03/28/99	JMC

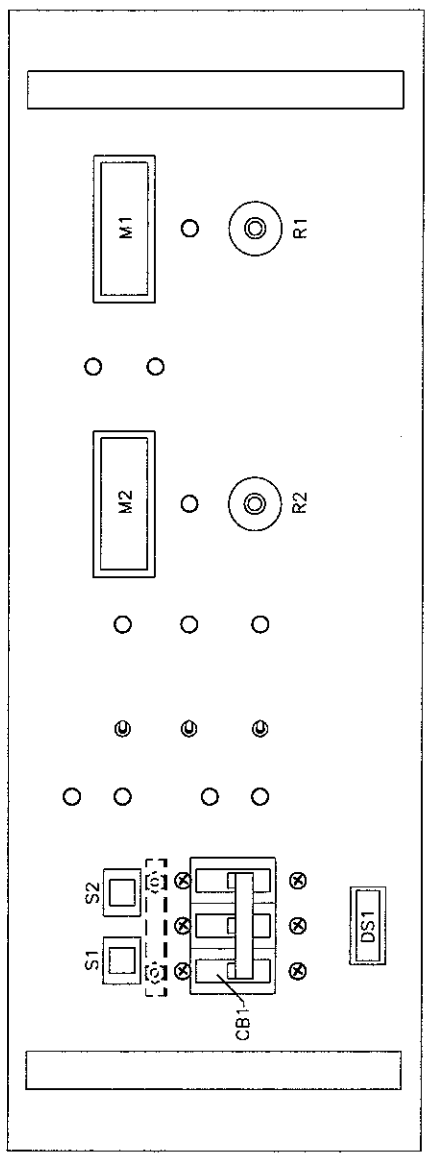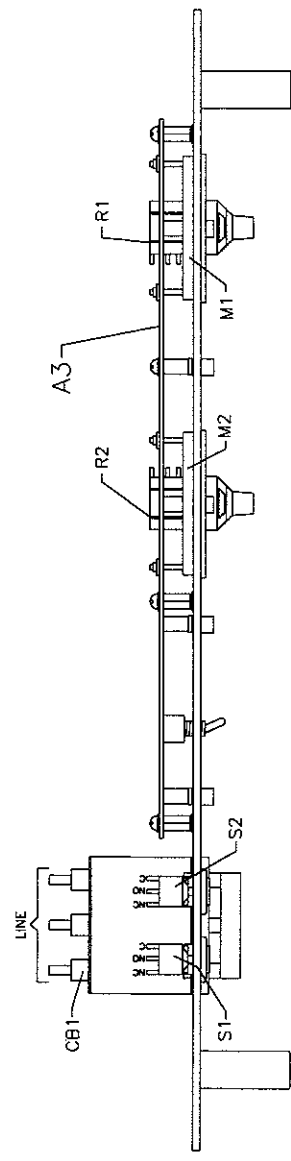

NOTES:  
 1 -- ALL ITEMS SHOWN ARE PREFIXED BY "1".  
 EXAMPLE: 1M1.

PARTS PLACEMENT APP-SH DIGITAL 201408-002 REV. 2		FILE NO. 032899 DATE 03/28/99 APPROVED JMC 032899 CHECKED JMC 032899 RELEASED		GLASSMAN HIGH VOLTAGE, INC. P.O. BOX 317, 800 W. 10TH ST. CHICAGO, IL 60607-0317 TEL: (312) 321-1111 FAX: (312) 321-1112	
PARTS PLACEMENT APP-SH DIGITAL 201408-002 REV. 2		SCALE NONE SHEET 1 OF 1		DO NOT SCALE DRAWING	

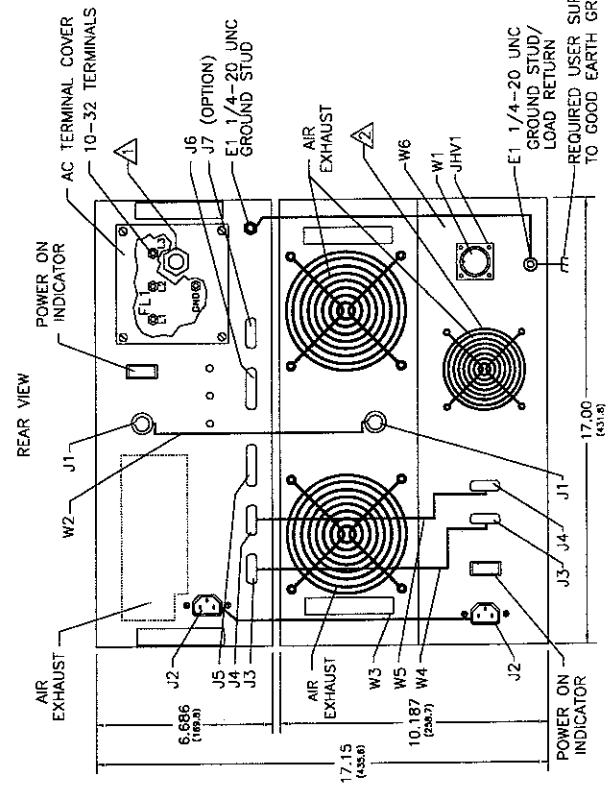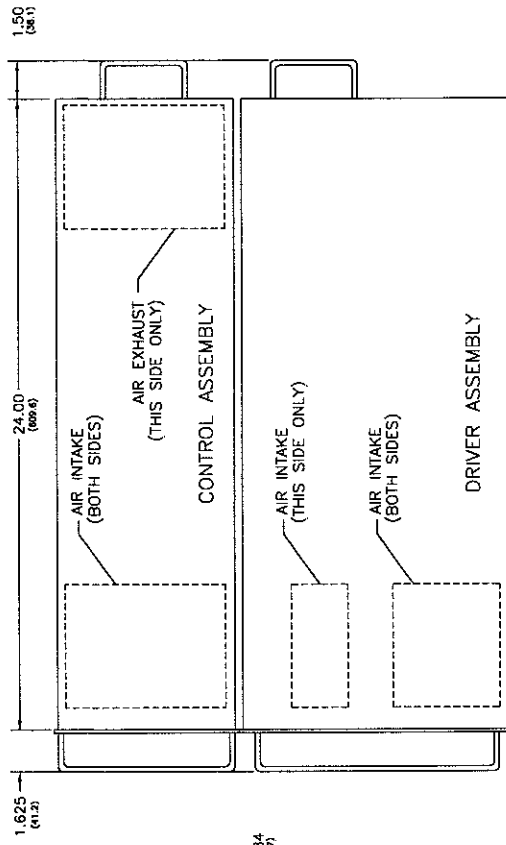

## CONTROL ASSEMBLY Y



- J1 - DC POWER INTERFACE  
 J2 - AC POWER INTERFACE  
 J3 - INVERTER INTERFACE  
 J4 - HIGH VOLTAGE INTERFACE  
 J5 - SLAVE INTERFACE INPUT  
 J6 - SLAVE INTERFACE OUTPUT  
 E1 - GROUND STUD  
 FL1 - AC INPUT -- 208 VAC  
       +/- 10%  
       48-63 HZ  
       3 PHASE  
 A - STRAIN RELIEF FOR .70" - .98" DIA. CORD OR INSULATED WIRE BUNDLE. (SUPPLIED)  
 PROPER INSULATION/STRAIN RELIEF MUST BE MAINTAINED  
 THROUGH AC TERMINAL COVER FOR SAFE OPERATION!

② - FAN GUARD PROVIDED ON >6KV UNITS, AIR HOLES ON ≤6KV UNITS.

## DRIVER ASSEMBLY

- |    |   |                         |      |   |                                                                                                     |
|----|---|-------------------------|------|---|-----------------------------------------------------------------------------------------------------|
| J1 | - | DC POWER INTERFACE      | J3   | - | INVERTER INTERFACE                                                                                  |
| J2 | - | AC POWER INTERFACE      | J4   | - | HIGH VOLTAGE INTERFACE                                                                              |
| E1 | - | LOAD RETURN GROUND STUD | JHV1 | - | HIGH VOLTAGE OUTPUT CONNECTOR<br>1-60KV AMPHENOL 83-1R OR EQUIVALENT<br>70-100KV MS3102A-18 (SHOWN) |


NET WEIGHT: 110 lbs. 41 kg.

HAZDUS DANGEROUS TO LIFE AND PROPERTIES SEE 2.	 THREAT IMAGE PROJECTION	FILE NO. 104104118-DWG	EXTENSION 104104118-DWG	 GLASSMAN HIGH VOLTAGE, INC. 742, BOX 317, HIGH PRAIRIE, ILL. 60140
DATE DEC 22 1981	APPROVALS DATE 1/1/82	DRAWN DATE 1/1/82	SPEC. DATE 1/1/82	TITLE OUTLINE & INSTALLATION SH SERIES SLAVE
DO NOT SCALE DRAWING	RELEASED 1/1/82	CHECKED 1/1/82	DATE 1/1/82	SERIAL 201404-018
SCALE 1" = 1'	SCALE 1" = 1'	SCALE 1" = 1'	SCALE 1" = 1'	SCALE 1" = 1'

---REQUIRED USER SUPPLIED CONNECTION  
TO GOOD EARTH GROUND



REV	BY	DESCRIPTION	DATE	APPROVED

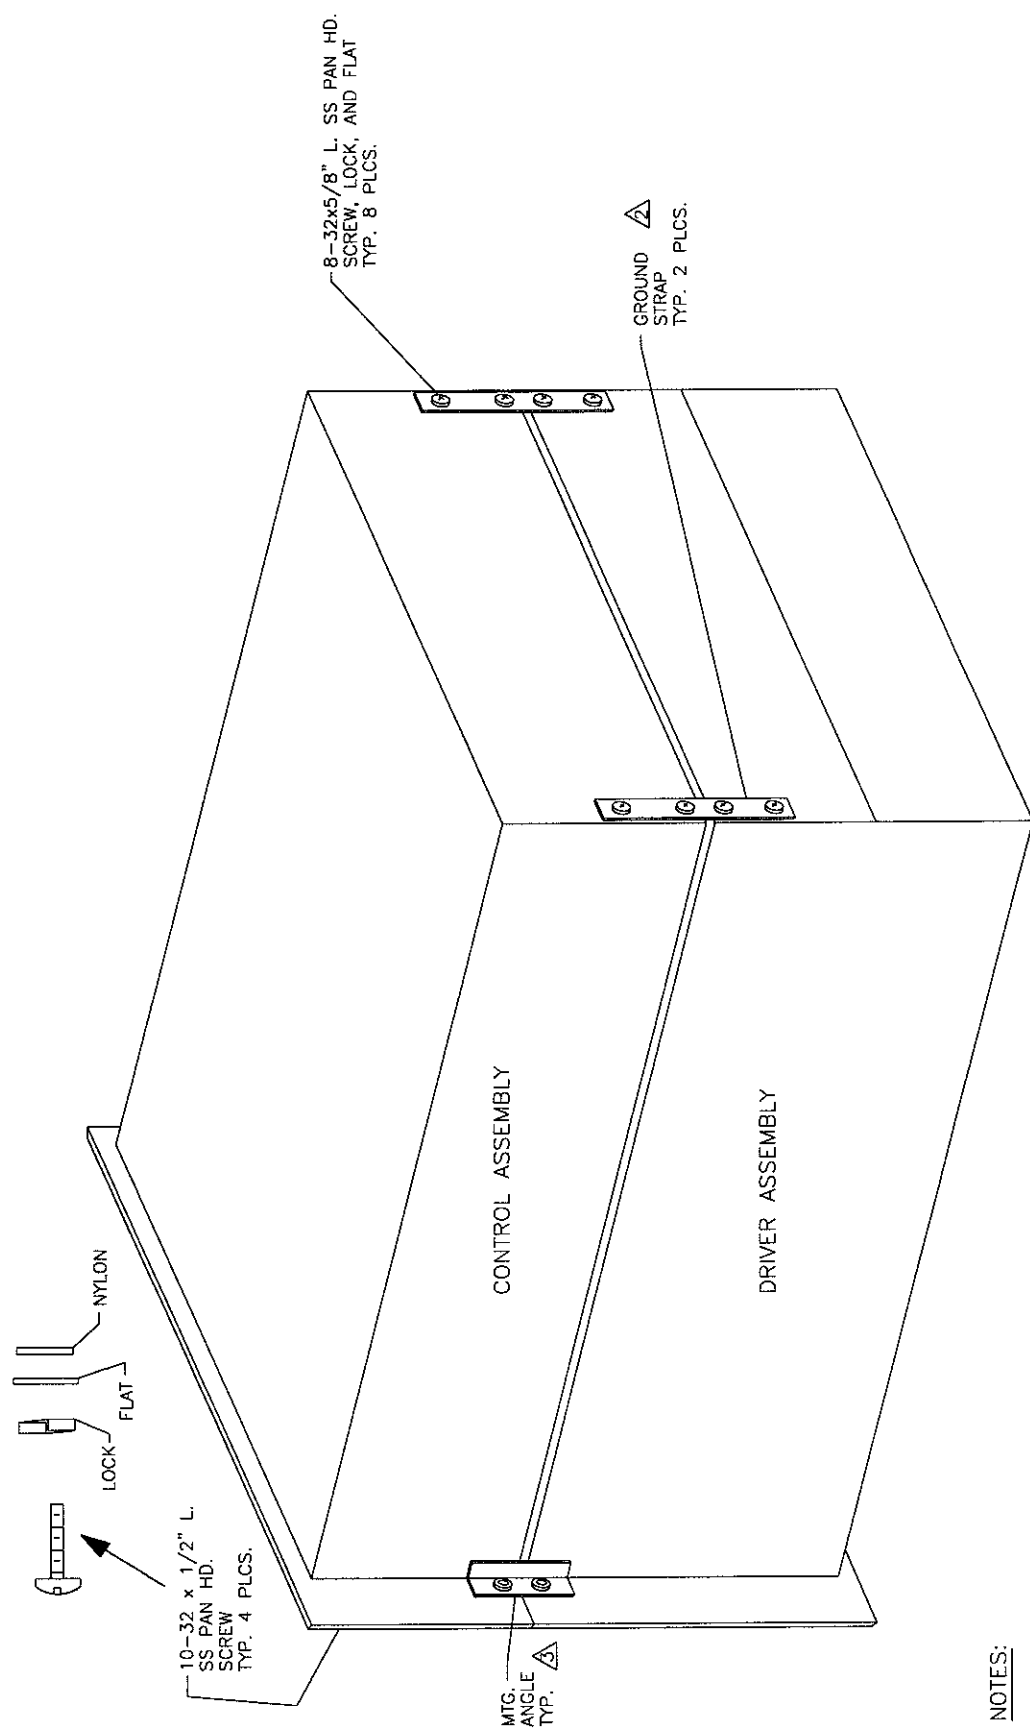

NOTES:


- 1 - FOR PROPER INSTALLATION IT IS RECOMMENDED TO MOUNT EQUIPMENT IN A RACK CABINET OR BENCH TOP ENCLOSURE.
- $\Delta$  - ATTACH GROUND STRAPS AS SHOWN AND SECURE WITH HARDWARE PROVIDED.
- $\Delta$  - FOR BENCH TOP OPERATION WITHOUT AN ENCLOSURE, ATTACH MOUNTING ANGLES AS SHOWN.

GLASSMAN HIGH VOLTAGE, INC. 2011A/04018-018 1000 1ST AVE. S.W. ALBUQUERQUE, NM 87102-1000	
FILE NO. 2011A/04018-018 APPROVALS DESIGNED BY CHECKED BY DRAWN BY DATE	TITLE OUTLINE & INSTALLATION SH SERIES SLAVE D 201404-018 NR SCALE NONE SHEET 3 OF 3

IN (MM)





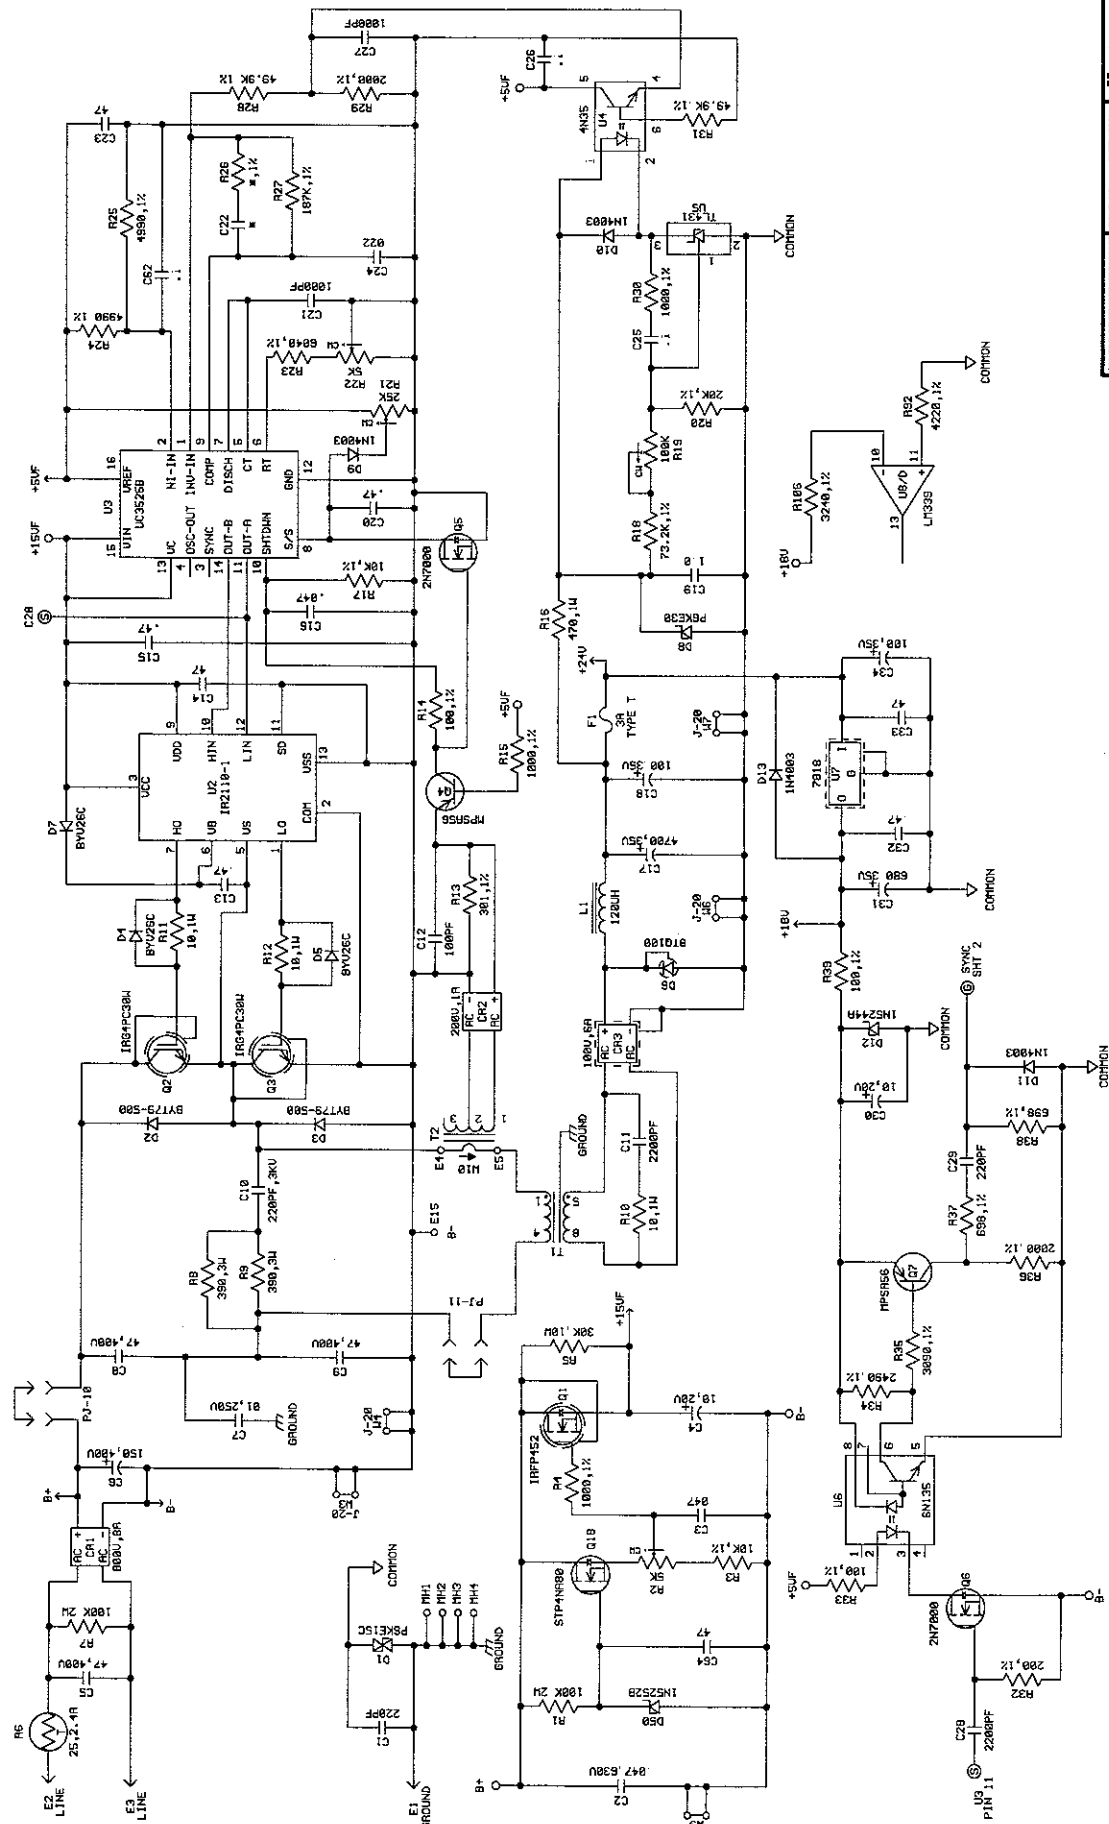


IN THE CIRCUIT COURT OF THE FIRST JUDICIAL CIRCUIT IN AND FOR THE COUNTY OF DADE, FLORIDA

1. UNLESS OTHERWISE SPECIFIED:
  - a) ALL CAPACITORS ARE IN  $\mu\text{F}$
  - b) ALL POTENTIOMETERS ARE  $1/2\text{W}$ , 10K
2. VALUE AND/OR INSTALLATION SELECTED PER MODEL.
3. G.H.V. RESERVES THE RIGHT TO SUBSTITUTE PARTS WITH THOSE OF SIMILAR OR BETTER PERFORMANCE.

[illegible]




REV	BY	DESCRIPTION	DATE	APPROVED

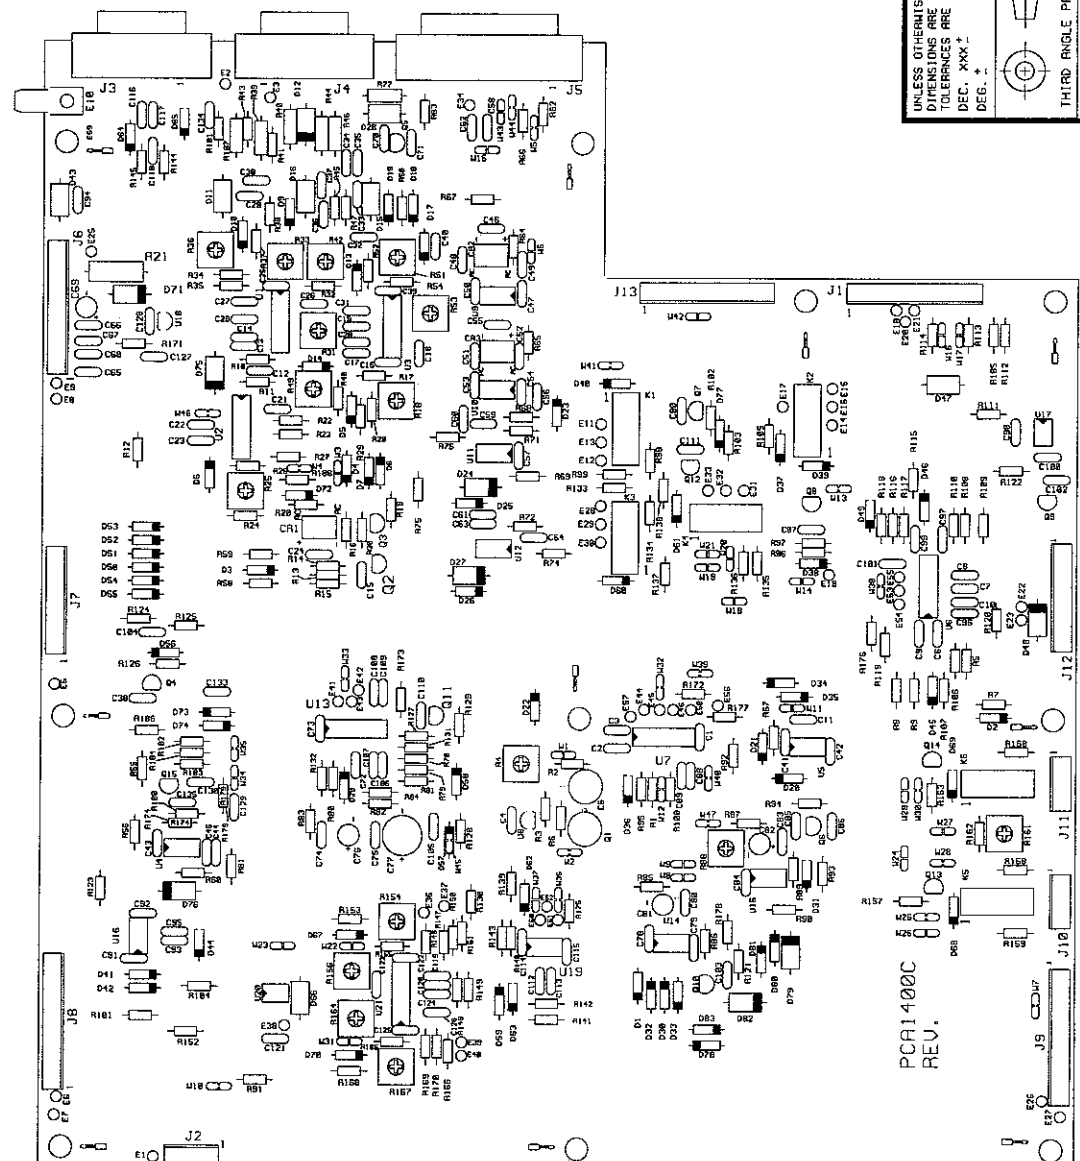


REDUCED ONLY

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: DEC. XXX ± DEC. ±		FILE NO. EXTENSION PCA1400095H.PCB		GLASSMAN HIGH VOLTAGE, INC. P.O. BOX 317, HIGH BRIDGE, N.J. 08829 (908) 639-3883 FAX (908) 639-3788	
APPROVALS	DATE	TITLE	PARTS PLACEMENT		
DRAWN TJM	07/08/03	ACB-SH-i (PCA1400C)	REV. NR		
CHECKED <i>fw</i>	07/06/03	DWG. NO. B	PCA1400-009		
RELEASED		SCALE NONE	SHEET 1 OF 1		
THIRD ANGLE PROJECTION		DO NOT SCALE DRAWING			




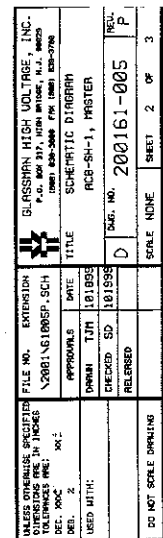

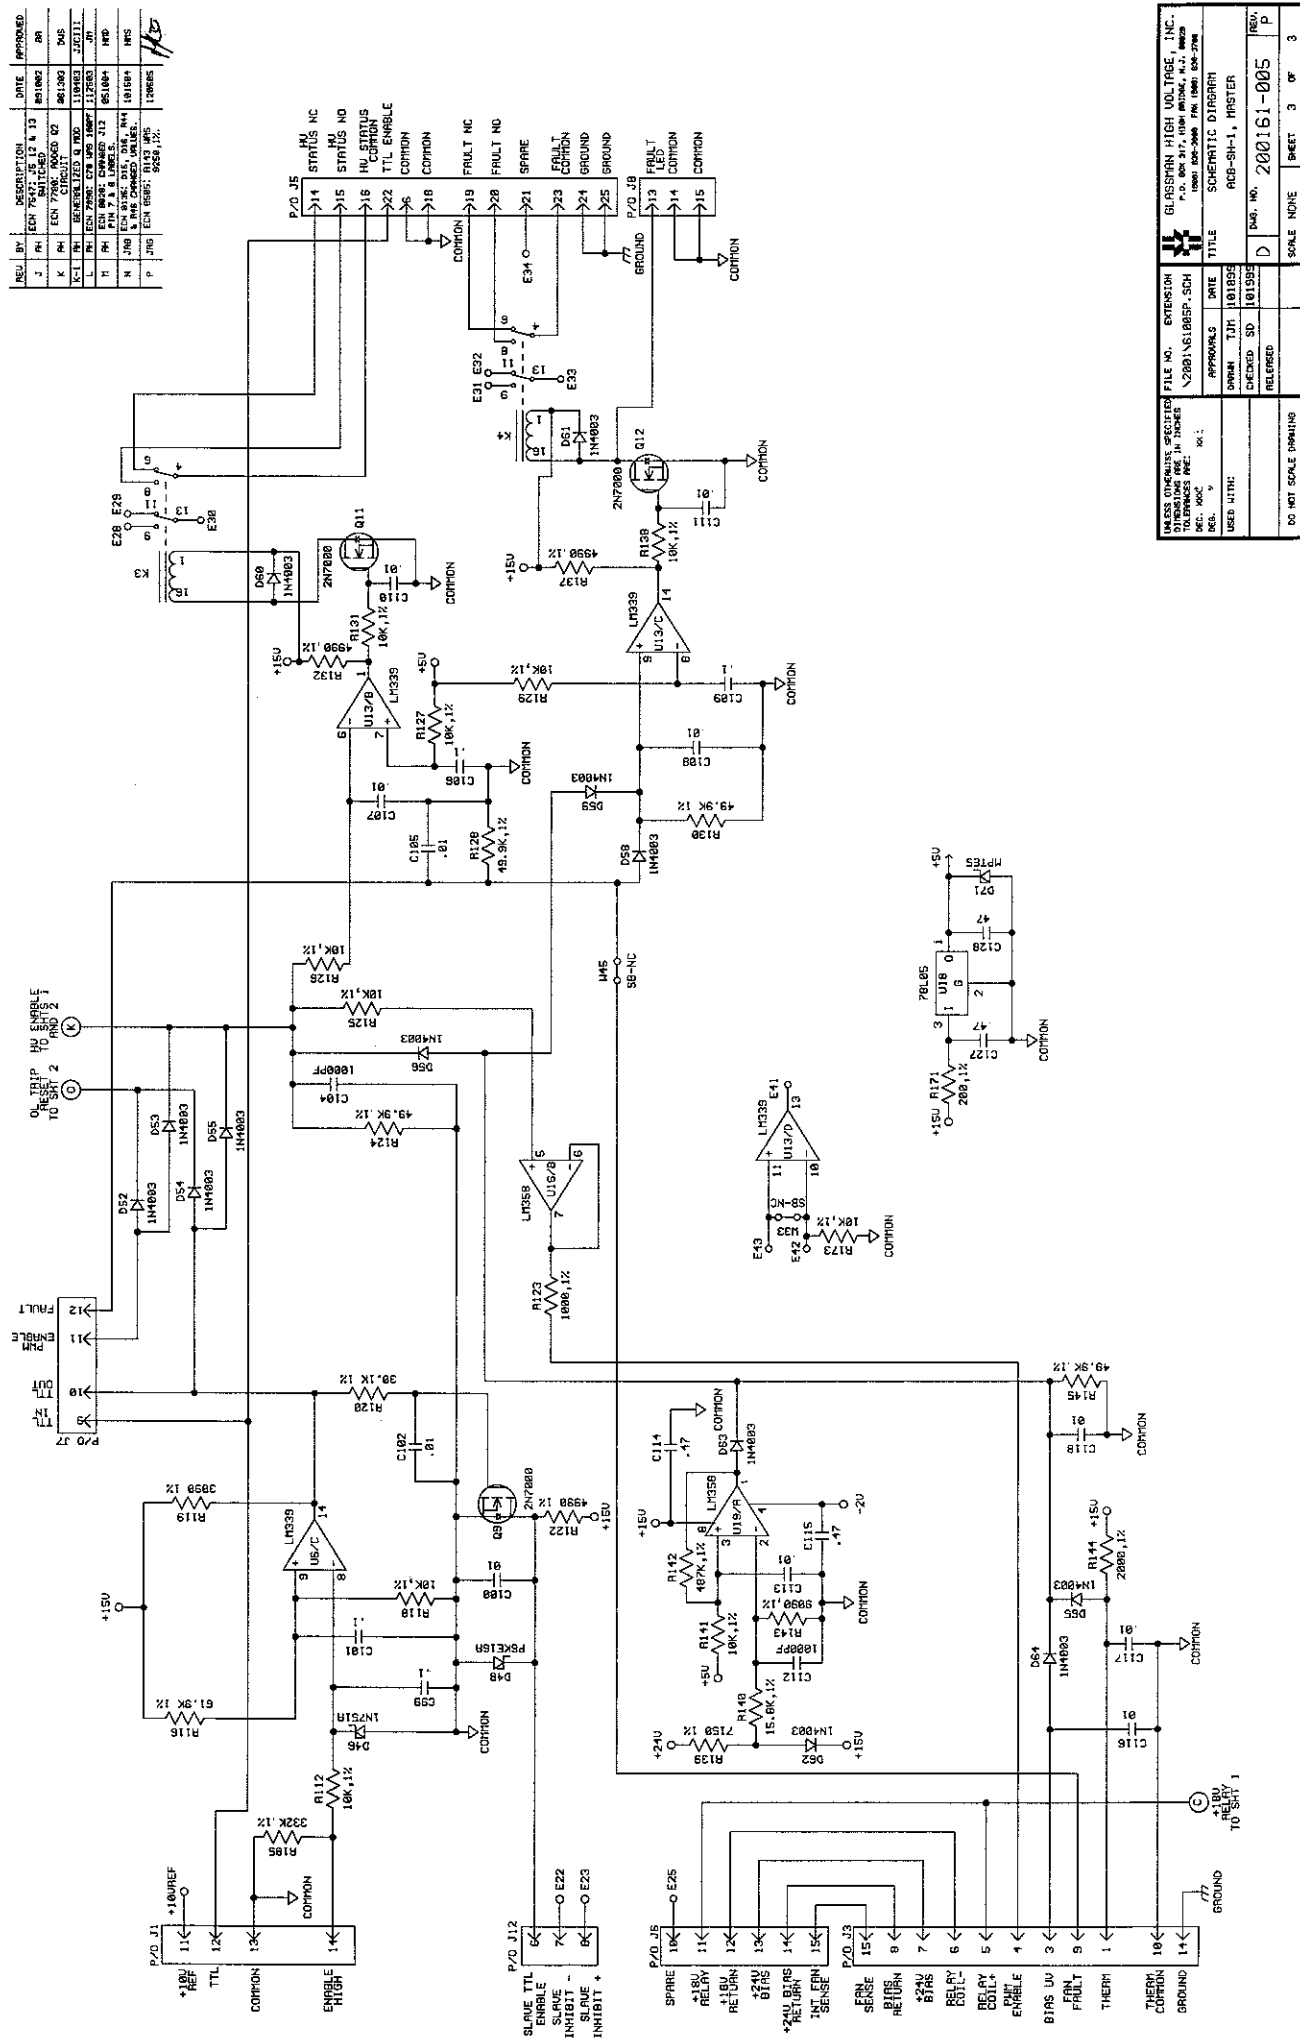
[illegible]

REV	BY	DESCRIPTION	DATE	APPROVED
A	TJM	ECN 6373: ADDED R135 & REMOVED C46 & C58	11/28/88	JTC
B	JRG	ECN 8623: ADDED W6	12/19/85	HK

W6 (FARSIDE)

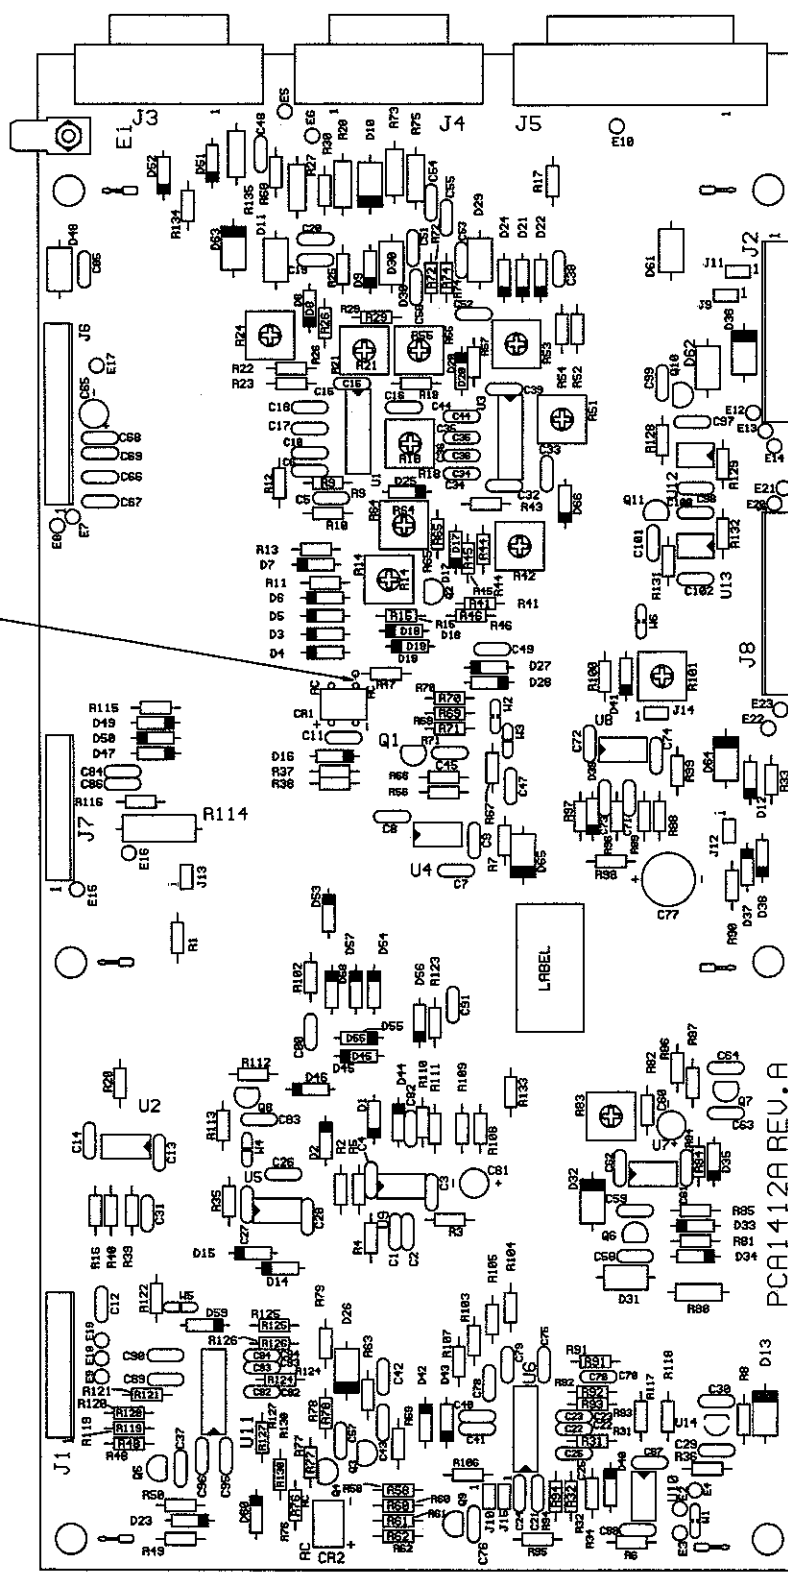


PCA1412A REV. A

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE : DEC. .XXX + DEC. . - DES. +		FILE NO.		EXTENSION		 GLASSMAN HIGH VOLTAGE, INC. P.O. BOX 317, HIGH BRIDGE, N.J. 08025 (609) 638-3886 FAX (609) 638-3786			
		APPROVALS		DATE		TITLE			
		DRAIN JHK		06/28/88		PARTS PLACEMENT			
		CHECKED JTC		06/28/88		ACB-SH-SLAVE			
		RELEASED				Dwg. No.		PCA1412-004	
						B		REV. B	
THIRD ANGLE PROJECTION						SCALE		NONE	
DO NOT SCALE DRAWING						SHEET		1 OF 1	



REV	BY	DESCRIPTION	DATE	APPROVED
1	MM	ECN 7552, REV. 121892	8/1	MM
2	MM	ECN 7552, REV. 121892	8/1	MM
3	MM	ECN 7552, REV. 121892	8/1	MM
4	MM	ECN 7552, REV. 121892	8/1	MM
5	MM	ECN 7552, REV. 121892	8/1	MM

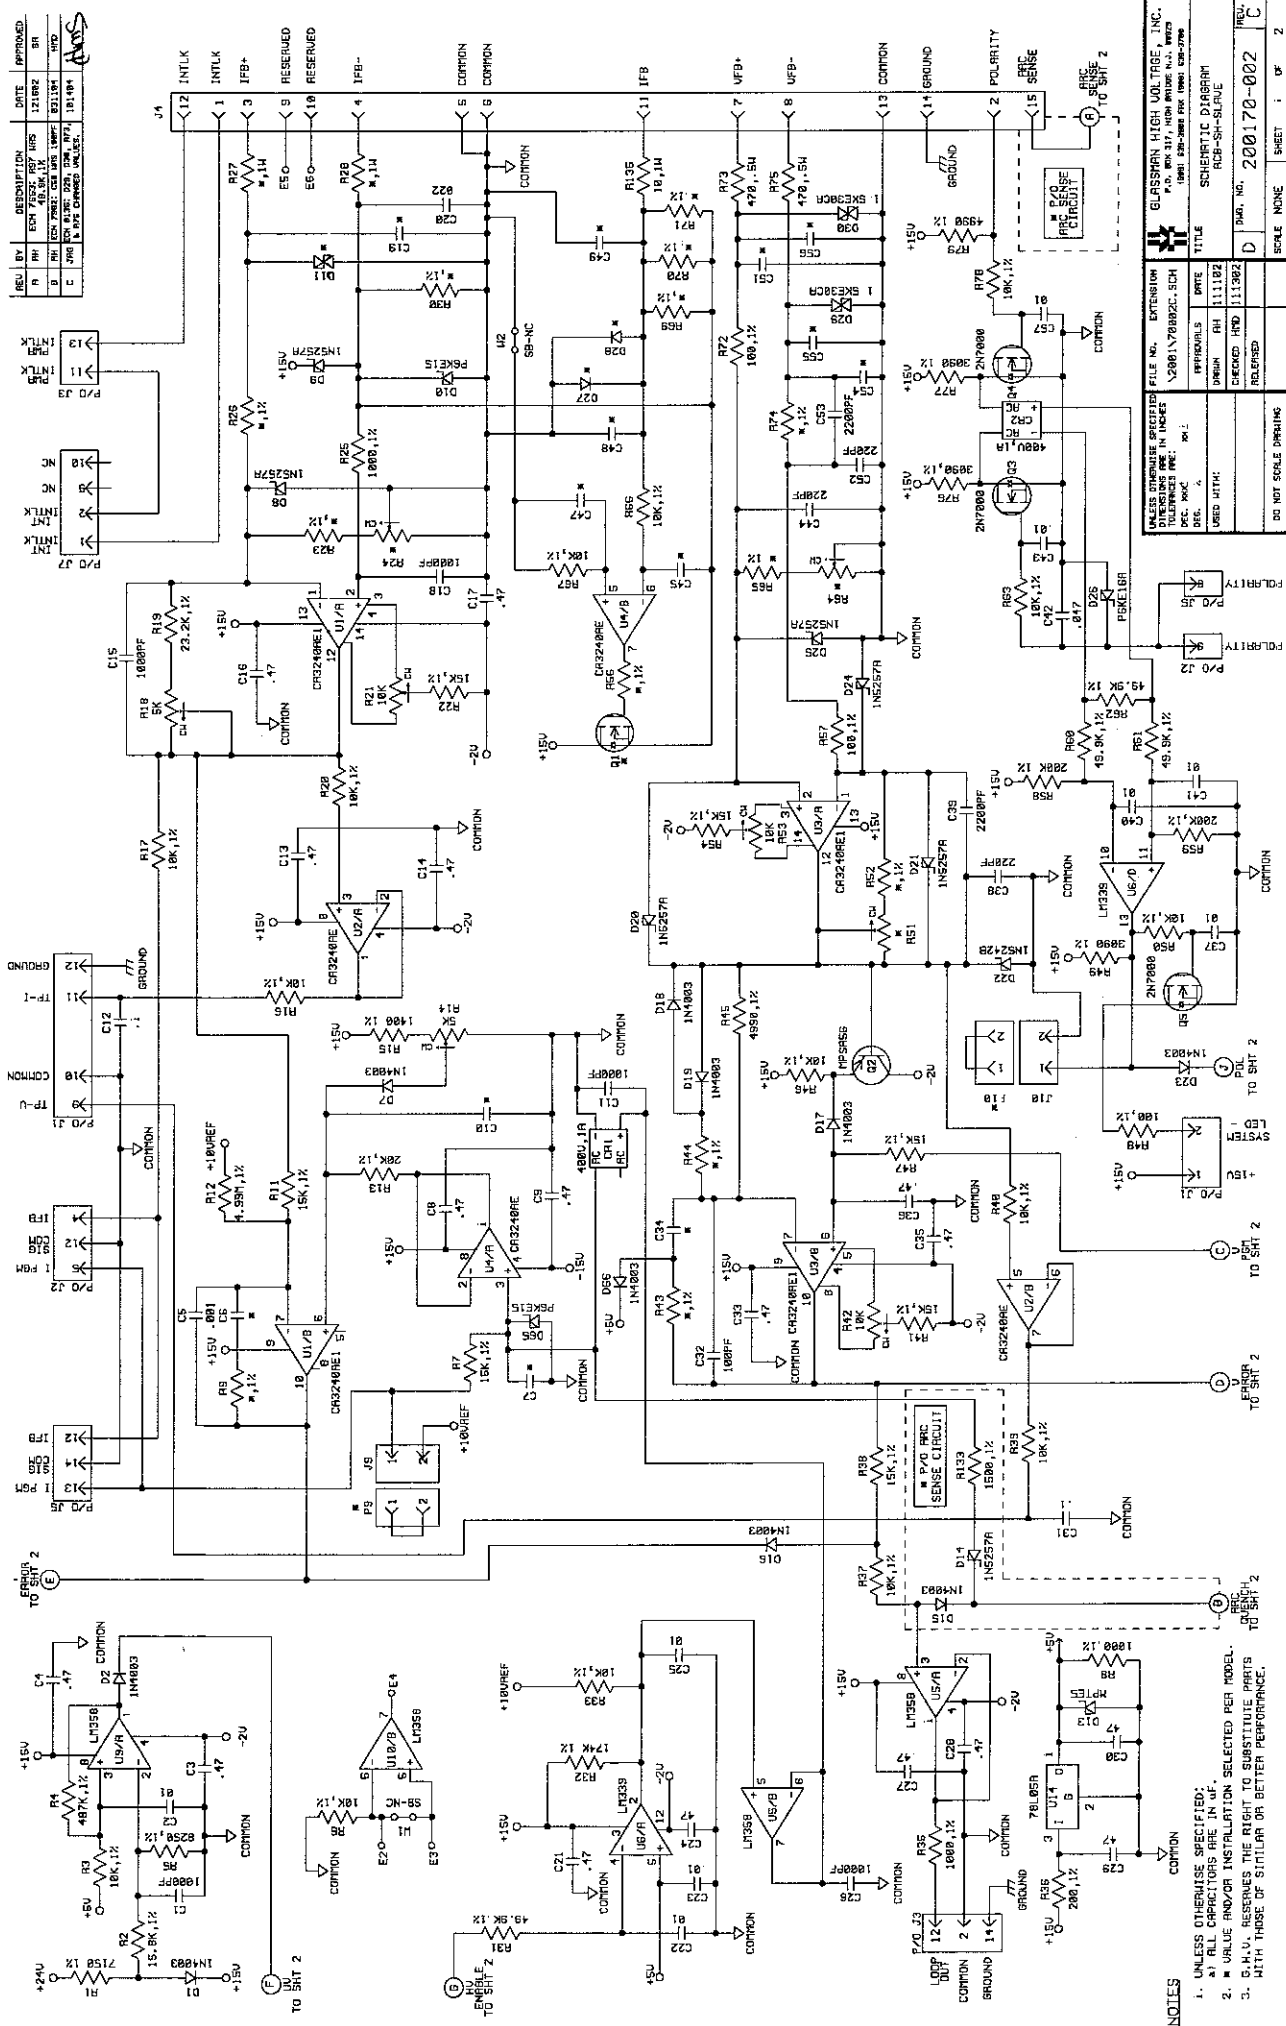

GLS-5000 HIGH VOLTAGE, INC.	FILE NO.	EXTENSION	DATE	REVISION
12001V7882C, SCH	12001V7882C, SCH	12001V7882C, SCH	12001V7882C, SCH	12001V7882C, SCH
12001V7882C, SCH	12001V7882C, SCH	12001V7882C, SCH	12001V7882C, SCH	12001V7882C, SCH
12001V7882C, SCH	12001V7882C, SCH	12001V7882C, SCH	12001V7882C, SCH	12001V7882C, SCH
12001V7882C, SCH	12001V7882C, SCH	12001V7882C, SCH	12001V7882C, SCH	12001V7882C, SCH

UNLESS OTHERWISE SPECIFIED:

- ALL CAPACITORS ARE IN  $\mu F$ .
- ALL VALUES IN INCHES.
- G.M.V. RESERVES THE RIGHT TO SUBSTITUTE PARTS WITH THOSE OF SIMILAR OR BETTER PERFORMANCE.

NOTES

DO NOT SCALE DRAWING

SCALE: NONE

SHEET: 1 OF 2

DATE: 11/11/82

DESIGNED BY: MM

CHECKED BY: MM

RELEASED BY: MM


PROJECT: 12001V7882C, SCH

REV: 1

200170-002




REV	BY	DESCRIPTION	DATE	APPROVED

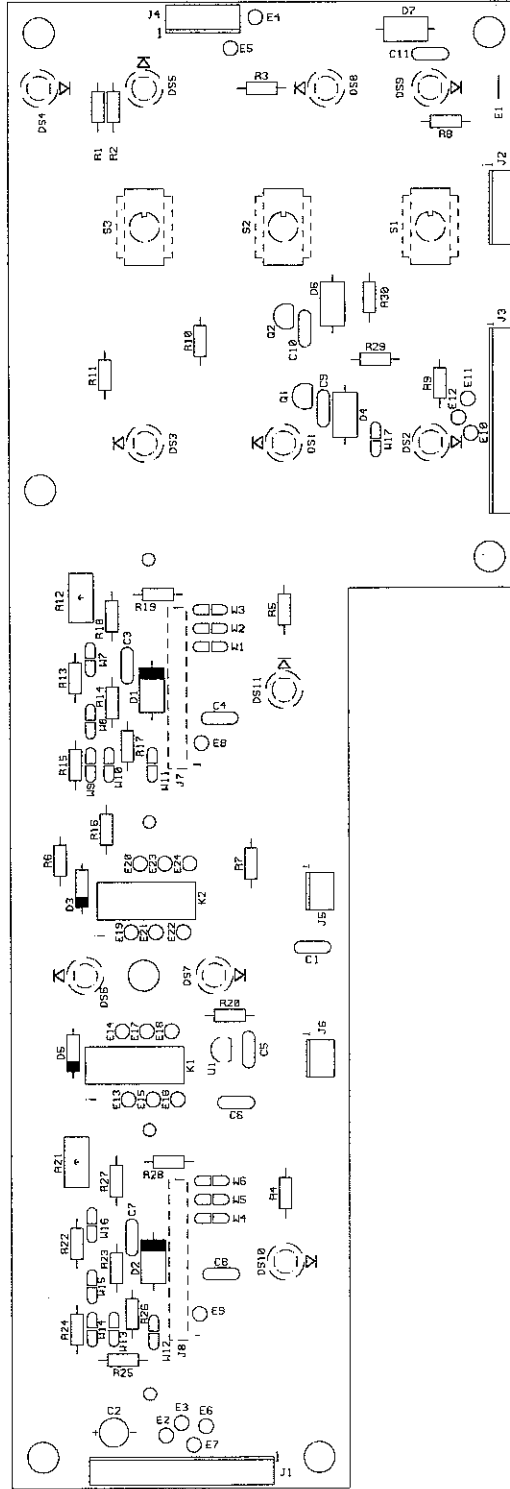

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE : XX + DEC. -XX -		FILE NO. EXTENSION PCA1402002H.PCB		GLASSMAN HIGH VOLTAGE INC P.O. BOX 551, WHITEHOUSE STATION, N.J. 08889 (908) 534-5807 FAX (908) 534-5872	
THIRD ANGLE PROJECTION		APPROVALS		TITLE	
DO NOT SCALE DRAWING		DATE		PARTS PLACEMENT: DWG.	
SSF		TJH		ADM-SH-01	
RELEASED		CHECKED		DWG. NO.	
		03/23/99		PCA1402-002	
				REV.	
				NR	
				SCALE NONE	
				SHEET 1 OF 1	


REV.	DATE	DESCRIPTION
1	10/1/68	INITIAL DESIGN
2	10/1/68	REVISION 1
3	10/1/68	REVISION 2
4	10/1/68	REVISION 3
5	10/1/68	REVISION 4
6	10/1/68	REVISION 5
7	10/1/68	REVISION 6
8	10/1/68	REVISION 7
9	10/1/68	REVISION 8
10	10/1/68	REVISION 9
11	10/1/68	REVISION 10
12	10/1/68	REVISION 11
13	10/1/68	REVISION 12
14	10/1/68	REVISION 13
15	10/1/68	REVISION 14
16	10/1/68	REVISION 15
17	10/1/68	REVISION 16
18	10/1/68	REVISION 17
19	10/1/68	REVISION 18
20	10/1/68	REVISION 19
21	10/1/68	REVISION 20
22	10/1/68	REVISION 21
23	10/1/68	REVISION 22
24	10/1/68	REVISION 23
25	10/1/68	REVISION 24
26	10/1/68	REVISION 25
27	10/1/68	REVISION 26
28	10/1/68	REVISION 27
29	10/1/68	REVISION 28
30	10/1/68	REVISION 29
31	10/1/68	REVISION 30
32	10/1/68	REVISION 31
33	10/1/68	REVISION 32
34	10/1/68	REVISION 33
35	10/1/68	REVISION 34
36	10/1/68	REVISION 35
37	10/1/68	REVISION 36
38	10/1/68	REVISION 37
39	10/1/68	REVISION 38
40	10/1/68	REVISION 39
41	10/1/68	REVISION 40
42	10/1/68	REVISION 41
43	10/1/68	REVISION 42
44	10/1/68	REVISION 43
45	10/1/68	REVISION 44
46	10/1/68	REVISION 45
47	10/1/68	REVISION 46
48	10/1/68	REVISION 47
49	10/1/68	REVISION 48
50	10/1/68	REVISION 49
51	10/1/68	REVISION 50
52	10/1/68	REVISION 51
53	10/1/68	REVISION 52
54	10/1/68	REVISION 53
55	10/1/68	REVISION 54
56	10/1/68	REVISION 55
57	10/1/68	REVISION 56
58	10/1/68	REVISION 57
59	10/1/68	REVISION 58
60	10/1/68	REVISION 59
61	10/1/68	REVISION 60
62	10/1/68	REVISION 61
63	10/1/68	REVISION 62
64	10/1/68	REVISION 63
65	10/1/68	REVISION 64
66	10/1/68	REVISION 65
67	10/1/68	REVISION 66
68	10/1/68	REVISION 67
69	10/1/68	REVISION 68
70	10/1/68	REVISION 69
71	10/1/68	REVISION 70
72	10/1/68	REVISION 71
73	10/1/68	REVISION 72
74	10/1/68	REVISION 73
75	10/1/68	REVISION 74
76	10/1/68	REVISION 75
77	10/1/68	REVISION 76
78	10/1/68	REVISION 77
79	10/1/68	REVISION 78
80	10/1/68	REVISION 79
81	10/1/68	REVISION 80
82	10/1/68	REVISION 81
83	10/1/68	REVISION 82
84	10/1/68	REVISION 83
85	10/1/68	REVISION 84
86	10/1/68	REVISION 85
87	10/1/68	REVISION 86
88	10/1/68	REVISION 87
89	10/1/68	REVISION 88
90	10/1/68	REVISION 89
91	10/1/68	REVISION 90
92	10/1/68	REVISION 91
93	10/1/68	REVISION 92
94	10/1/68	REVISION 93
95	10/1/68	REVISION 94
96	10/1/68	REVISION 95
97	10/1/68	REVISION 96
98	10/1/68	REVISION 97
99	10/1/68	REVISION 98
100	10/1/68	REVISION 99
101	10/1/68	REVISION 100
102	10/1/68	REVISION 101
103	10/1/68	REVISION 102
104	10/1/68	REVISION 103
105	10/1/68	REVISION 104
106	10/1/68	REVISION 105
107	10/1/68	REVISION 106
108	10/1/68	REVISION 107
109	10/1/68	REVISION 108
110	10/1/68	REVISION 109
111	10/1/68	REVISION 110
112	10/1/68	REVISION 111
113	10/1/68	REVISION 112
114	10/1/68	REVISION 113
115	10/1/68	REVISION 114
116	10/1/68	REVISION 115
117	10/1/68	REVISION 116
118	10/1/68	REVISION 117
119	10/1/68	REVISION 118
120	10/1/68	REVISION 119
121	10/1/68	REVISION 120
122	10/1/68	REVISION 121
123	10/1/68	REVISION 122
124	10/1/68	REVISION 123
125	10/1/68	REVISION 124
126	10/1/68	REVISION 125
127	10/1/68	REVISION 126
128	10/1/68	REVISION 127
129	10/1/68	REVISION 128
130	10/1/68	REVISION 129
131	10/1/68	REVISION 130
132	10/1/68	REVISION 131
133	10/1/68	REVISION 132
134	10/1/68	REVISION 133
135	10/1/68	REVISION 134
136	10/1/68	REVISION 135
137	10/1/68	REVISION 136
138	10/1/68	REVISION 137
139	10/1/68	REVISION 138
140	10/1/68	REVISION 139
141	10/1/68	REVISION 140
142	10/1/68	REVISION 141
143	10/1/68	REVISION 142
144	10/1/68	REVISION 143
145	10/1/68	REVISION 144
146	10/1/68	REVISION 145
147	10/1/68	REVISION 146
148	10/1/68	REVISION 147
149	10/1/68	REVISION 148
150	10/1/68	REVISION 149
151	10/1/68	REVISION 150
152	10/1/68	REVISION 151
153	10/1/68	REVISION 152
154	10/1/68	REVISION 153
155	10/1/68	REVISION 154
156	10/1/68	REVISION 155
157	10/1/68	REVISION 156
158	10/1/68	REVISION 157
159	10/1/68	REVISION 158
160	10/1/68	REVISION 159
161	10/1/68	REVISION 160
162	10/1/68	REVISION 161
163	10/1/68	REVISION 162
164	10/1/68	REVISION 163
165	10/1/68	REVISION 164
166	10/1/68	REVISION 165
167	10/1/68	REVISION 166
168	10/1/68	REVISION 167
169	10/1/68	REVISION 168
170	10/1/68	REVISION 169
171	10/1/68	REVISION 170
172	10/1/68	REVISION 171
173	10/1/68	REVISION 172
174	10/1/68	REVISION 173
175	10/1/68	REVISION 174
176	10/1/68	REVISION 175
177	10/1/68	REVISION 176
178	10/1/68	REVISION 177
179	10/1/68	REVISION 178
180	10/1/68	REVISION 179
181	10/1/68	REVISION 180
182	10/1/68	REVISION 181
183	10/1/68	REVISION 182
184	10/1/68	REVISION 183
185	10/1/68	REVISION 184
186	10/1/68	REVISION 185
187	10/1/68	REVISION 186
188	10/1/68	REVISION 187
189	10/1/68	REVISION 188
190	10/1/68	REVISION 189
191	10/1/68	REVISION 190
192	10/1/68	REVISION 191
193	10/1/68	REVISION 192
194	10/1/68	REVISION 193
195	10/1/68	REVISION 194
196	10/1/68	REVISION 195
197	10/1/68	REVISION 196
198	10/1/68	REVISION 197
199	10/1/68	REVISION 198
200	10/1/68	REVISION 199
201	10/1/68	REVISION 200
202	10/1/68	REVISION 201
203	10/1/68	REVISION 202
204	10/1/68	REVISION 203
205	10/1/68	REVISION 204
206	10/1/68	REVISION 205
207	10/1/68	REVISION 206
208	10/1/68	REVISION 207
209	10/1/68	REVISION 208
210	10/1/68	REVISION 209
211	10/1/68	REVISION 210
212	10/1/68	REVISION 211
213	10/1/68	REVISION 212
214	10/1/68	REVISION 213
215	10/1/68	REVISION 214
216	10/1/68	REVISION 215
217	10/1/68	REVISION 216
218	10/1/68	REVISION 217
219	10/1/68	REVISION 218
220	10/1/68	REVISION 219
221	10/1/68	REVISION 220
222	10/1/68	REVISION 221
223	10/1/68	REVISION 222
224	10/1/68	REVISION 223
225	10/1/68	REVISION 224
226	10/1/68	REVISION 225
227	10/1/68	REVISION 226
228	10/1/68	REVISION 227
229	10/1/68	REVISION 228
230	10/1/68	REVISION 229
231	10/1/68	REVISION 230
232	10/1/68	REVISION 231
233	10/1/68	REVISION 232
234	10/1/68	REVISION 233
235	10/1/68	REVISION 234
236	10/1/68	REVISION 235
237	10/1/68	REVISION 236
238	10/1/68	REVISION 237
239	10/1/68	REVISION 238
240	10/1/68	REVISION 239
241	10/1/68	REVISION 240
242	10/1/68	REVISION 241
243	10/1/68	REVISION 242
244	10/1/68	REVISION 243
245	10/1/68	REVISION 244
246	10/1/68	REVISION 245
247	10/1/68	REVISION 246
248	10/1/68	REVISION 247
249	10/1/68	REVISION 248
250	10/1/68	REVISION 249
251	10/1/68	REVISION 250
252	10/1/68	REVISION 251
253	10/1/68	REVISION 252
254	10/1/68	REVISION 253
255	10/1/68	REVISION 254
256	10/1/68	REVISION 255
257	10/1/68	REVISION 256
258	10/1/68	REVISION 257
259	10/1/68	REVISION 258
260	10/1/68	REVISION 259
261	10/1/68	REVISION 260
262	10/1/68	REVISION 261
263	10/1/68	REVISION 262
264	10/1/68	REVISION 263
265	10/1/68	REVISION 264
266	10/1/68	REVISION 265
267	10/1/68	REVISION 266
268	10/1/68	REVISION 267
269	10/1/68	REVISION 268
270	10/1/68	REVISION 269
271	10/1/68	REVISION 270
272	10/1/68	REVISION 271
273	10/1/68	REVISION 272
274	10/1/68	REVISION 273
275	10/1/68	REVISION 274
276	10/1/68	REVISION 275
277	10/1/68	REVISION 276
278	10/1/68	REVISION 277
279	10/1/68	REVISION 278
280	10/1/68	REVISION 279
281	10/1/68	REVISION 280
282	10/1/68	REVISION 281
283	10/1/68	REVISION 282
284	10/1/68	REVISION 283
285	10/1/68	REVISION 284
286	10/1/68	REVISION 285
287	10/1/68	REVISION 286
288	10/1/68	REVISION 287
289	10/1/68	REVISION 288
290	10/1/68	REVISION 289
291	10/1/68	REVISION 290
292	10/1/68	REVISION 291
293	10/1/68	REVISION 292
294	10/1/68	REVISION 293
295	10/1/68	REVISION 294
296	10/1/68	REVISION 295
297	10/1/68	REVISION 296
298	10/1/68	REVISION 297
299	10/1/68	REVISION 298
300	10/1/68	REVISION 299
301	10/1/68	REVISION 300
302	10/1/68	REVISION 301
303	10/1/68	REVISION 302
304	10/1/68	REVISION 303
305	10/1/68	REVISION 304
306	10/1/68	REVISION 305
307	10/1/68	REVISION 306
308	10/1/68	REVISION 307
309	10/1/68	REVISION 308
310	10/1/68	REVISION 309
311	10/1/68	REVISION 310
312	10/1/68	REVISION 311
313	10/1/68	REVISION 312
314	10/1/68	REVISION 313
315	10/1/68	REVISION 314
316	10/1/68	REVISION 315
317	10/1/68	REVISION 316
318	10/1/68	REVISION 317
319	10/1/68	REVISION 318
320	10/1/68	REVISION 319
321	10/1/68	REVISION 320
322	10/1/68	REVISION 321
323	10/1/68	REVISION 322
324	10/1/68	REVISION 323
325	10/1/68	REVISION 324
326	10/1/68	REVISION 325
327	10/1/68	REVISION 326
328	10/1/68	REVISION 327
329	10/1/68	REVISION 328
330	10/1/68	REVISION 329
331	10/1/68	REVISION 330
332	10/1/68	REVISION 331
333	10/1/68	REVISION 332
334	10/1/68	REVISION 333
335	10/1/68	REVISION 334
336	10/1/68	REVISION 335
337	10/1/68	REVISION 336
338	10/1/68	REVISION 337
339	10/1/68	REVISION 338
34		

 



INDEXED SERIALIZED FILED MAR 27 1968 FBI - NEW YORK	FILE NO. EXTENSION 100-155009A, SCH 200155-009	GLASSMAN HIGH VOL. TRASE, INC. P.O. BOX 374, HIGH RIDING, N.J. 08027 TEL. 609-680-7000 FAX. 609-680-7700
SEARCHED SERIALIZED INDEXED FILED MAR 27 1968 FBI - NEW YORK	TITLE SHERIFF'S DIGNITY 1-1150U	D. NO. 200155-009 1-1150U REV. H
DO NOT WRITE P-1041108	APPROVALS SPECIAL AGENT CHECKED HTD RELEASED	SCALE NONE SHEET OF 1

# NOTES

1. W.H.V. RESERVES THE RIGHT TO SUBSTITUTE PARTS WITH THOSE OF SIMILAR OR BETTER PERFORMANCE.


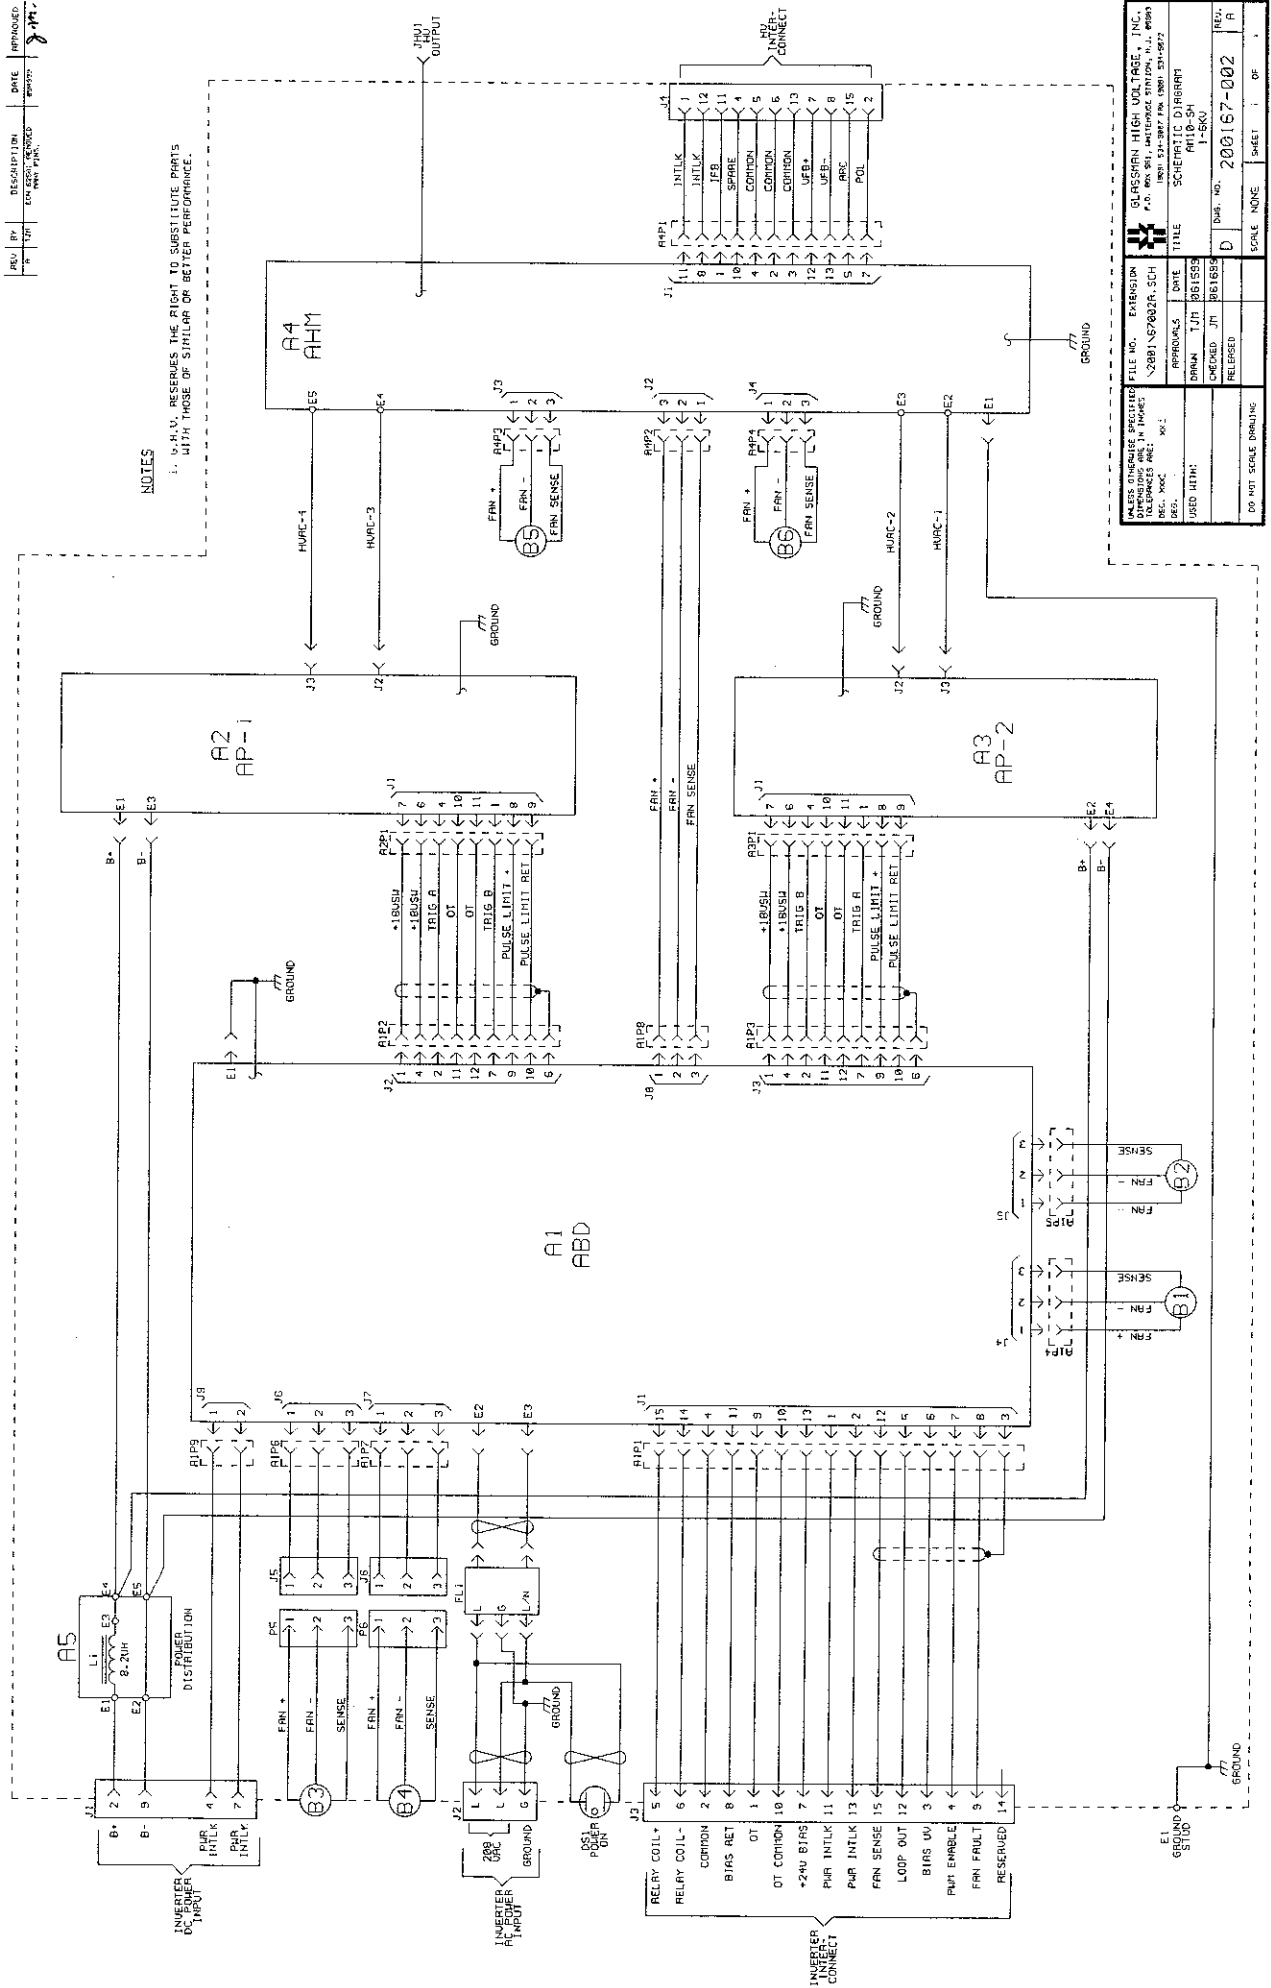


REV	BY	DESCRIPTION	DATE	APPROVED

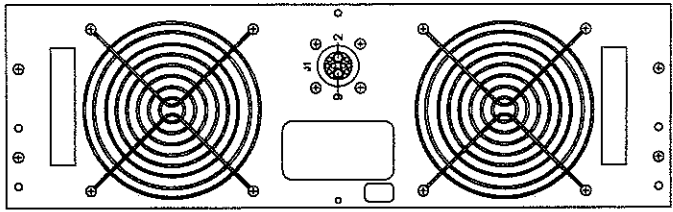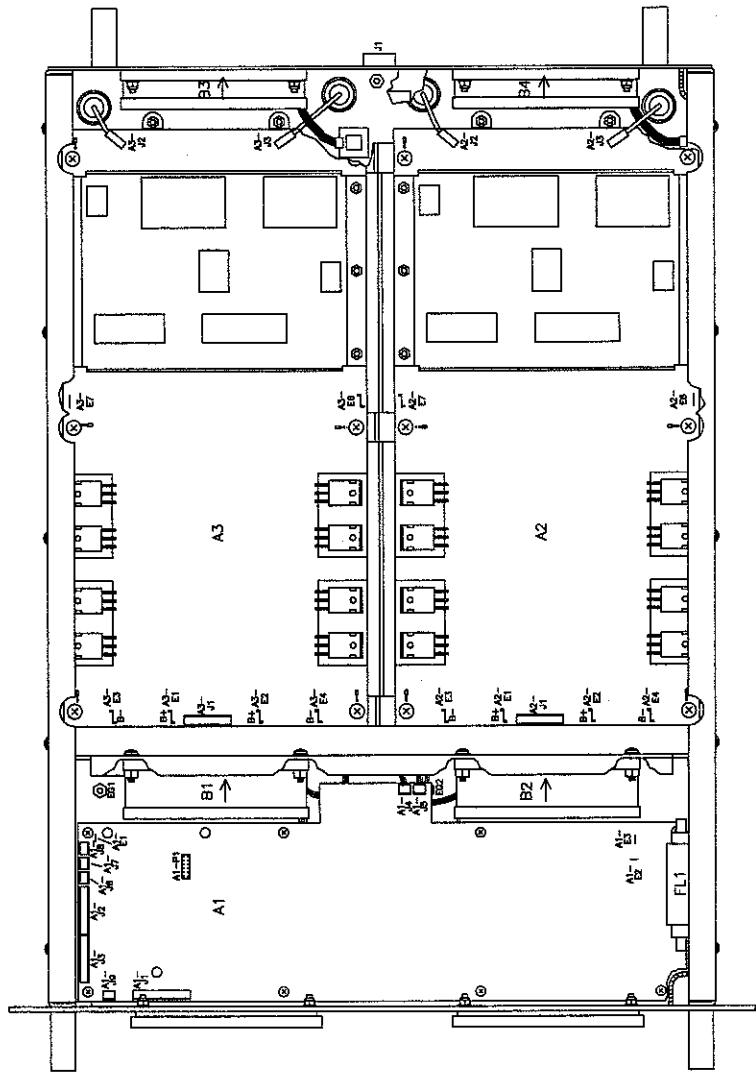


<b>GLASSMAN HIGH VOLTAGE, INC.</b> 745 W. 317th Street Seattle, WA 98148-3100 TEL: 206-835-1100		<b>FILE NO.</b> DTD0000 \2014\03028-DWG	<b>DATE</b> 10/06/05	<b>REV</b> NR
<b>REVISIONS</b> REVISIONS ARE: 1. 10/06/05		<b>APPROVALS</b> DESIGNED BY: PMS CHECKED BY: PMS RELEASED	<b>FILE</b> PARTS PLACEMENT TOP	<b>REV</b> NR
<b>THIRD ANGLE PROJECTION</b> DO NOT SCALE DRAWING		<b>SCALE</b> 1" = 1"	<b>SHEET</b> 1 OF 2	<b>REV</b> NR

REV	BY	DESCRIPTION	DATE	APPROVED

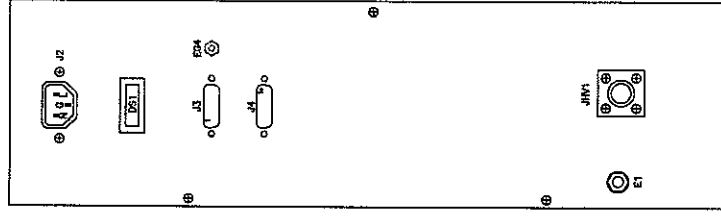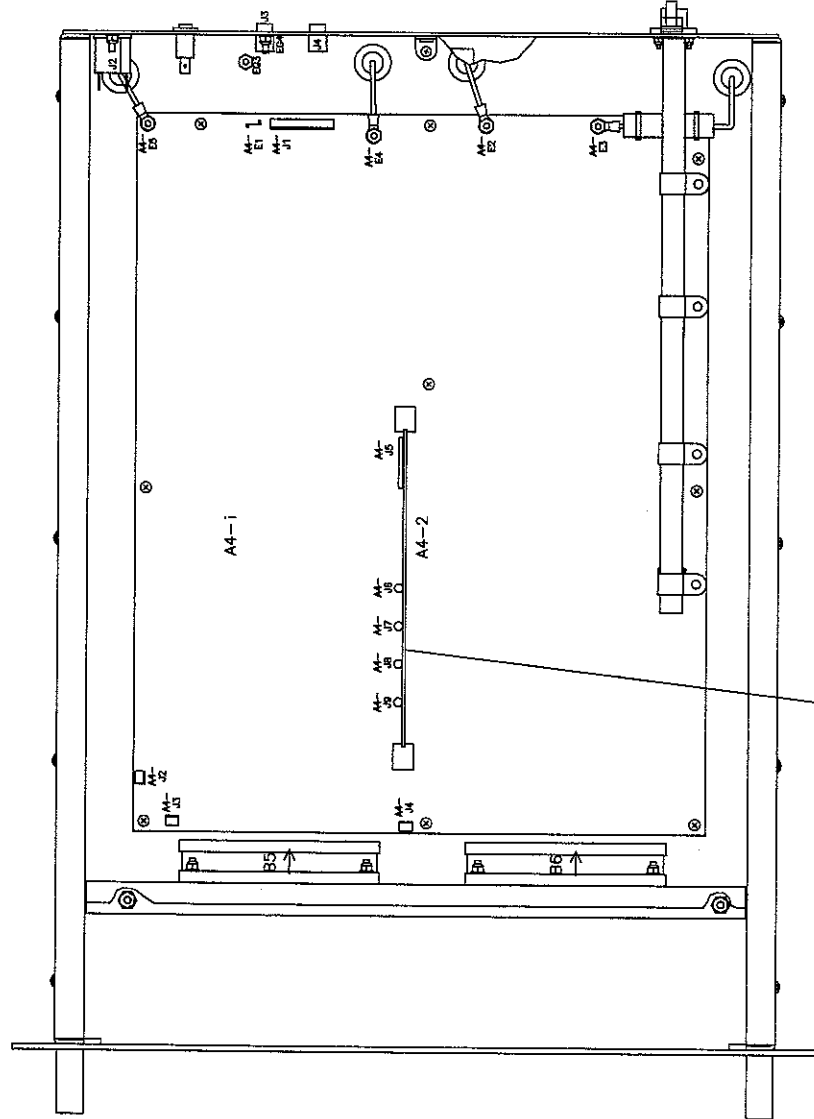

ALL DIMENSIONS UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES DECIMALS TO 0.001 FRACTIONS TO 1/32		THE NO. EXTENSION 2014-03029 - DWG		GLASSMAN HIGH VOLTAGE, INC. PA. REG. 377, HIGH VOLTAGE A.E. DESIG. PA. REG. 377, HIGH VOLTAGE A.E. DESIG. PA. REG. 377, HIGH VOLTAGE A.E. DESIG.	
APPROVAL JAC 100805		DATE 12/16/17		TITLE PARTS PLACEMENT	
CHECKED 12/16/17		RELEASED		BOTTOM AM10-SH, 1-6KV	
THIRD ANGLE PROJECTION		SCALE NAME 201403-029		REV. NR	
DO NOT SCALE DRAWING		SHEET 2 OF 2		201403-029	



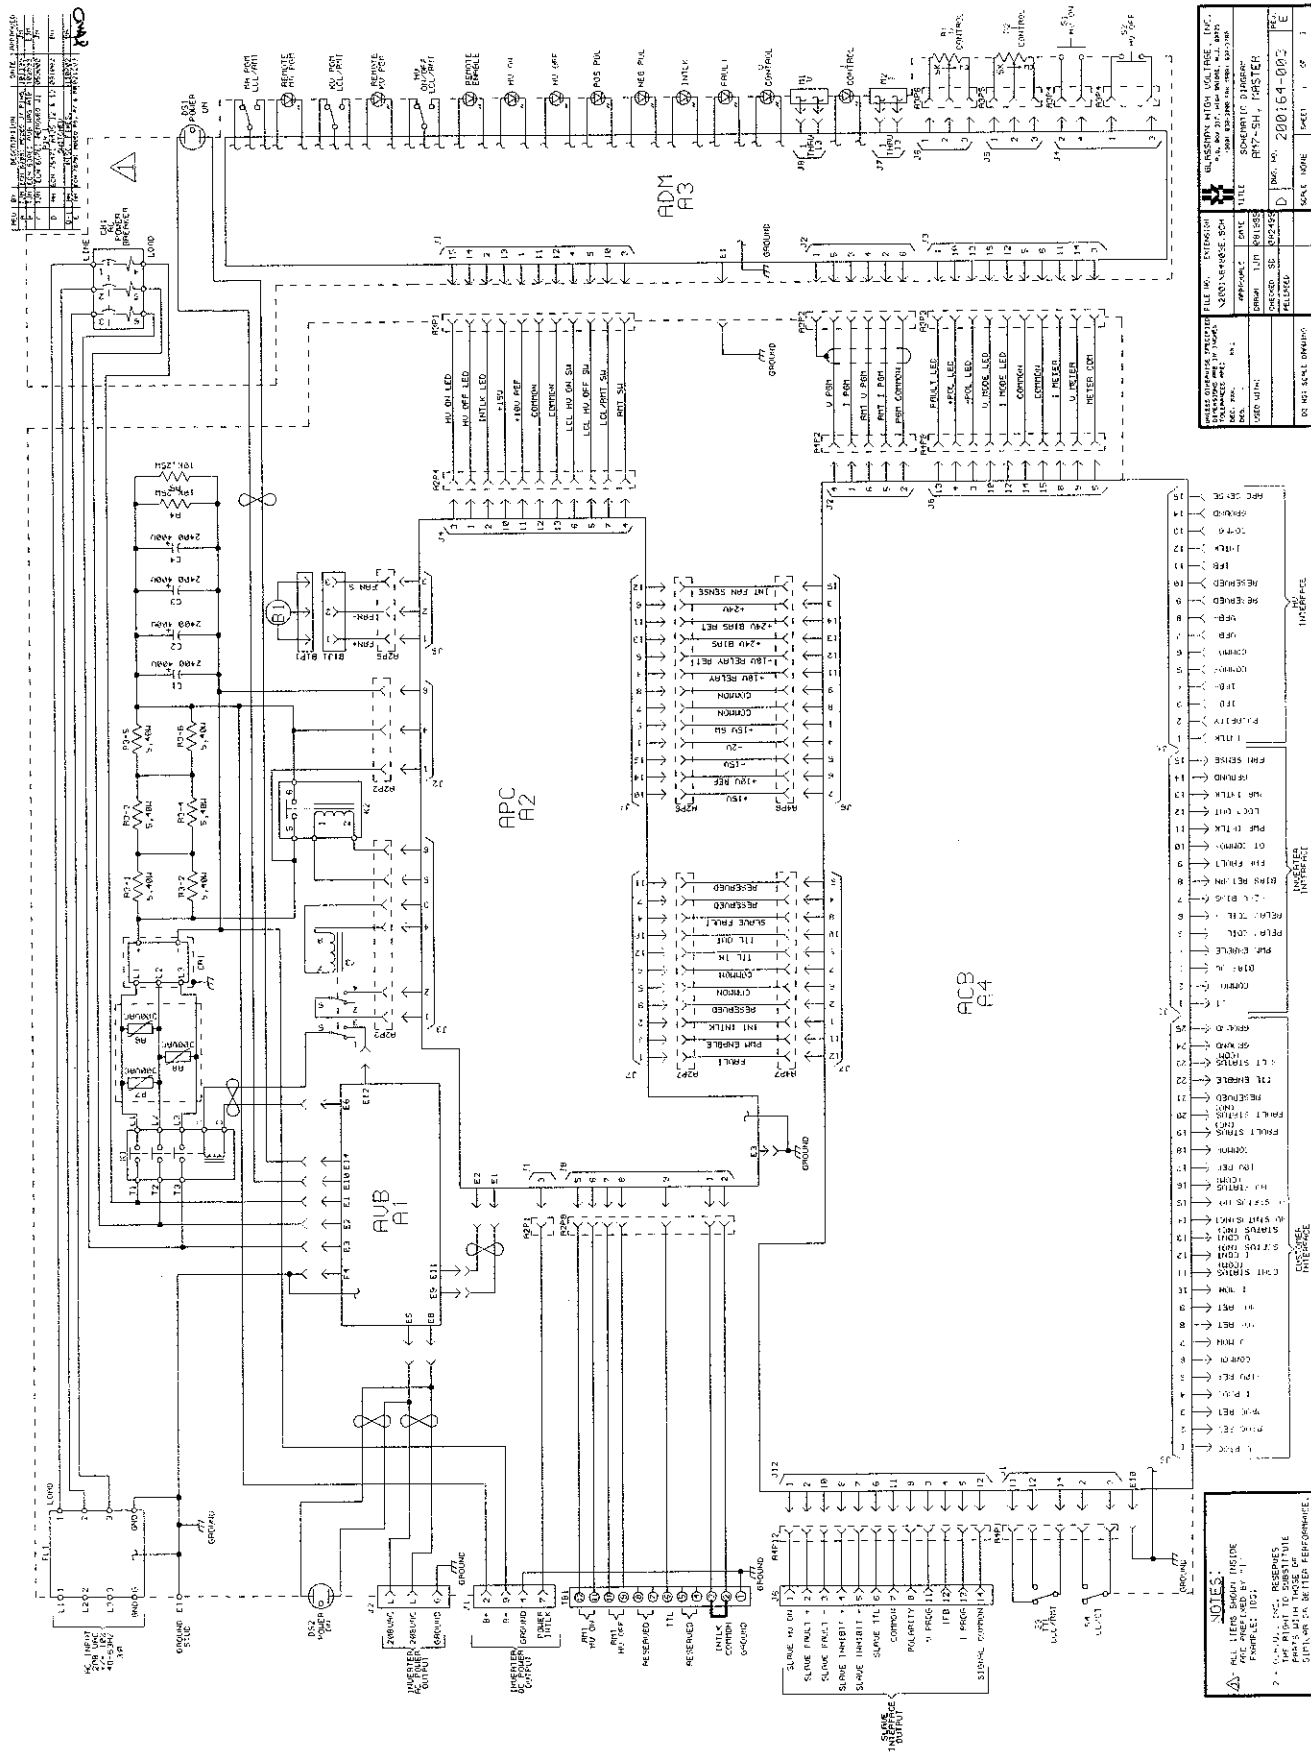

REVISIONS

REV.	DATE	DESCRIPTION
1	10/1/78	INITIAL DESIGN
2	10/15/78	REVISED FOR MANUFACTURING
3	11/1/78	REVISED FOR TESTING
4	11/15/78	REVISED FOR FINAL PRODUCTION

PROJECT INFORMATION

FILE NO.	EXTENSION	DATE	SCALE	SHEET	TOTAL
200164-002	E	10/1/78	1:1	1	1


DESIGNER: J. L. BAKER  
CHECKED: J. L. BAKER  
APPROVED: J. L. BAKER

**NOTES:**



- 1. ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.
- 2. TOLERANCES ARE AS FOLLOWS: FRACTIONS - 1/16, 1/32, 1/64, 1/8, 1/4, 1/2, 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45, 46, 47, 48, 49, 50, 51, 52, 53, 54, 55, 56, 57, 58, 59, 60, 61, 62, 63, 64, 65, 66, 67, 68, 69, 70, 71, 72, 73, 74, 75, 76, 77, 78, 79, 80, 81, 82, 83, 84, 85, 86, 87, 88, 89, 90, 91, 92, 93, 94, 95, 96, 97, 98, 99, 100.






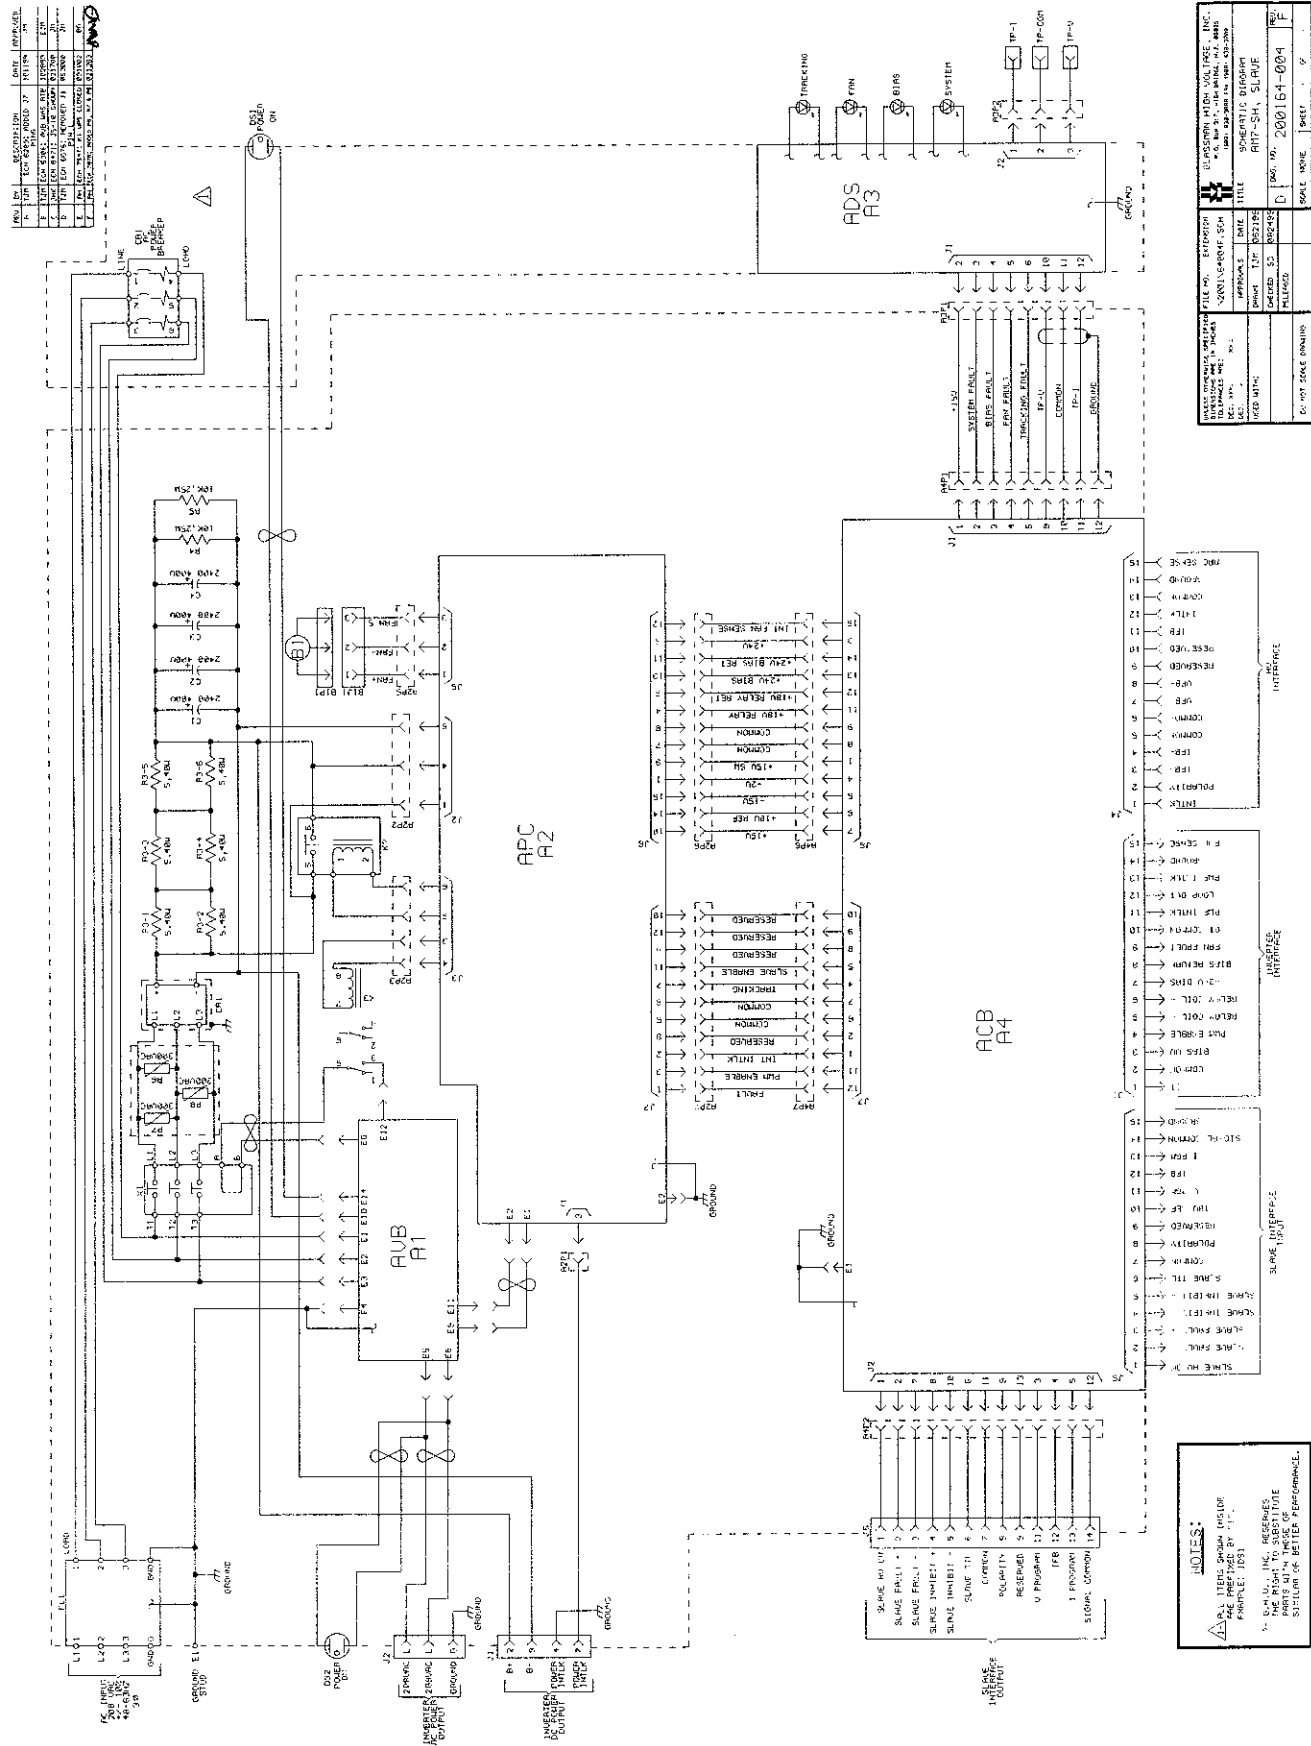

REV	BY	DESCRIPTION	DATE	APPROVED
A	TAB	ECN 100004D, JMC	10/18/99	JMC
B	TAB	ECN 100004D, JMC	07/11/00	JMC
C	AM	ECN 100004D, JMC	02/10/03	MMO
D	AM	ECN 100004D, JMC	01/08/04	JMC

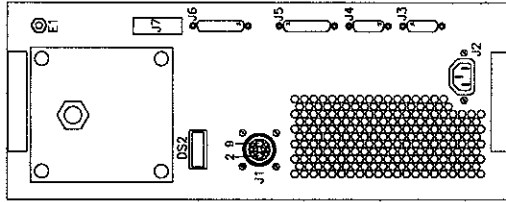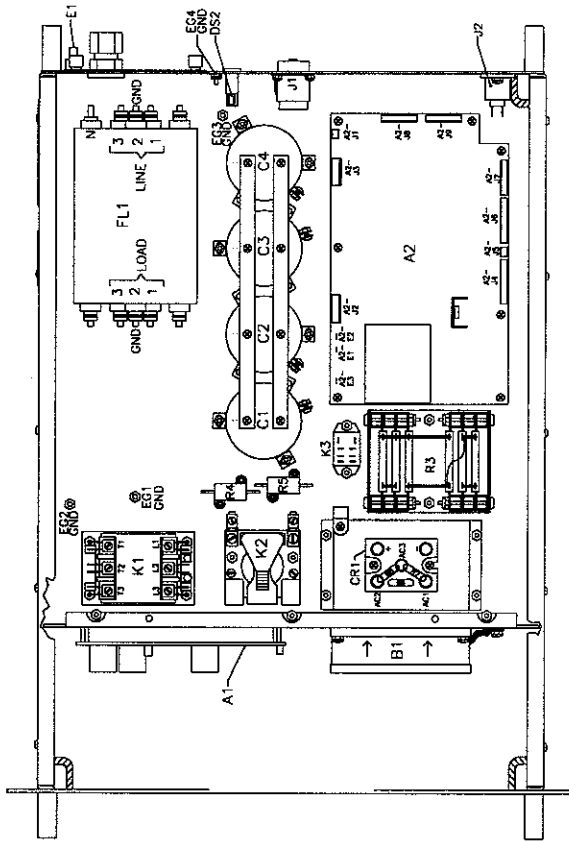


REAR OF  
POWER SUPPLY

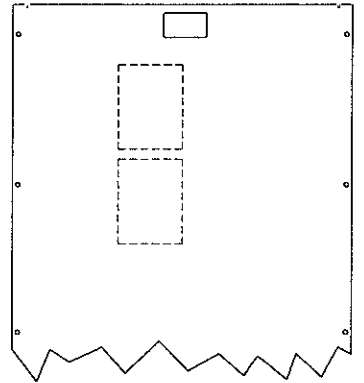


FILE NO.		EXHIBIT		GLASSMAN HIGH VOLTAGE, INC.	
2014\00004D.DWG		2014\00004D.DWG		P.O. BOX 315, HIGH VOLTAGE, AL 36689	
APPROVALS		DATE		TITLE	
DESIGNED BY	DATE	DESIGNED BY	DATE	PARTS PLACEMENT	
DESIGNED BY	DATE	DESIGNED BY	DATE	AM77-SH, SLAVE	
DESIGNED BY	DATE	DESIGNED BY	DATE	201400-004	
DESIGNED BY	DATE	DESIGNED BY	DATE	D	
DESIGNED BY	DATE	DESIGNED BY	DATE	SCALE	
DESIGNED BY	DATE	DESIGNED BY	DATE	NONE	
DESIGNED BY	DATE	DESIGNED BY	DATE	SHEET 1 OF 2	

REV	BY	DESCRIPTION	DATE	APPROVED


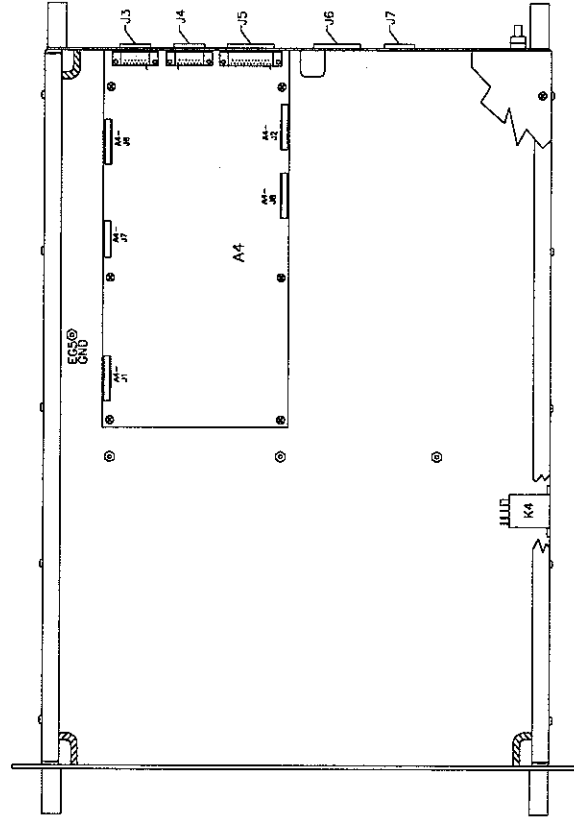


REAR OF  
POWER SUPPLY

 

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES DEC. 100 ± 0.005 DEC. 100 ± 0.005		FILE NO. EXERCISE NO. 2014000000.DWG		DATE 09/29/99		PARTS PLACEMENT AM7-SH, SLAVE		REV. D	
APPROVALS		DESIGNED BY JAC		CHECKED BY JAC		REVIEWED BY JAC		SCALE NONE	
THIRD ANGLE PROJECTION		DO NOT SCALE DIMENSIONS		SHEET 1 OF 2		GLASSMAN HIGH VOLTAGE, INC. P.O. BOX 317, NEW BRIDGE, N.J. 08053 (609) 636-3000 FAX (609) 636-3700		201400-004	

REV	BY	DESCRIPTION	DATE	APPROVED
REV-1	AM	UNITED ADDRESS	08/19/99	JAL

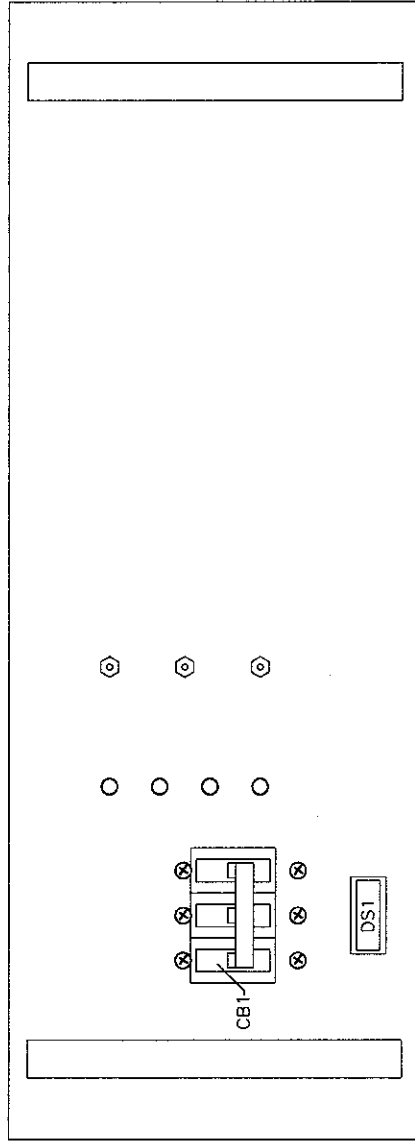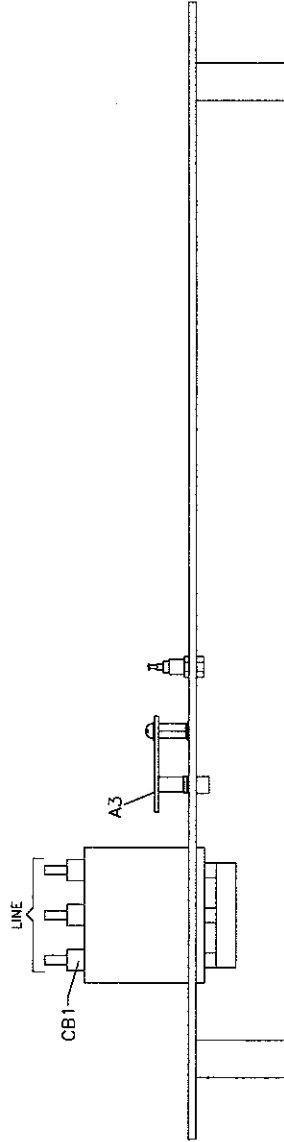

NOTES:


- 1 - ALL ITEMS SHOWN ARE PREFIXED BY "1"
- EXAMPLE: 1CB1

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES DECIMALS ARE TO 0.005 FRACTIONS ARE TO 1/32		FILE NO. 0100000-1 DMC APPROVALS DESIGNED BY JAL 08/19/99 CHECKED BY JMC 08/19/99 RELEASED		GLASSMAN HIGH VOLTAGE, INC. 1000 10th Street, Suite 100 San Jose, CA 95128 (408) 281-2000 FAX (408) 281-2001	
TITLE PARTS PLACEMENT		DATE 08/19/99		REV. 005	
Dwg. No. 201408-005		Scale NONE		Sheet 1 of 1	





REV.	BY	DATE	REVISION	NOTE	APPROVED
1	WJ	04/11/2011	1	REVISED TO INCLUDE 100% TESTING	WJ
2	WJ	04/11/2011	2	REVISED TO INCLUDE 100% TESTING	WJ

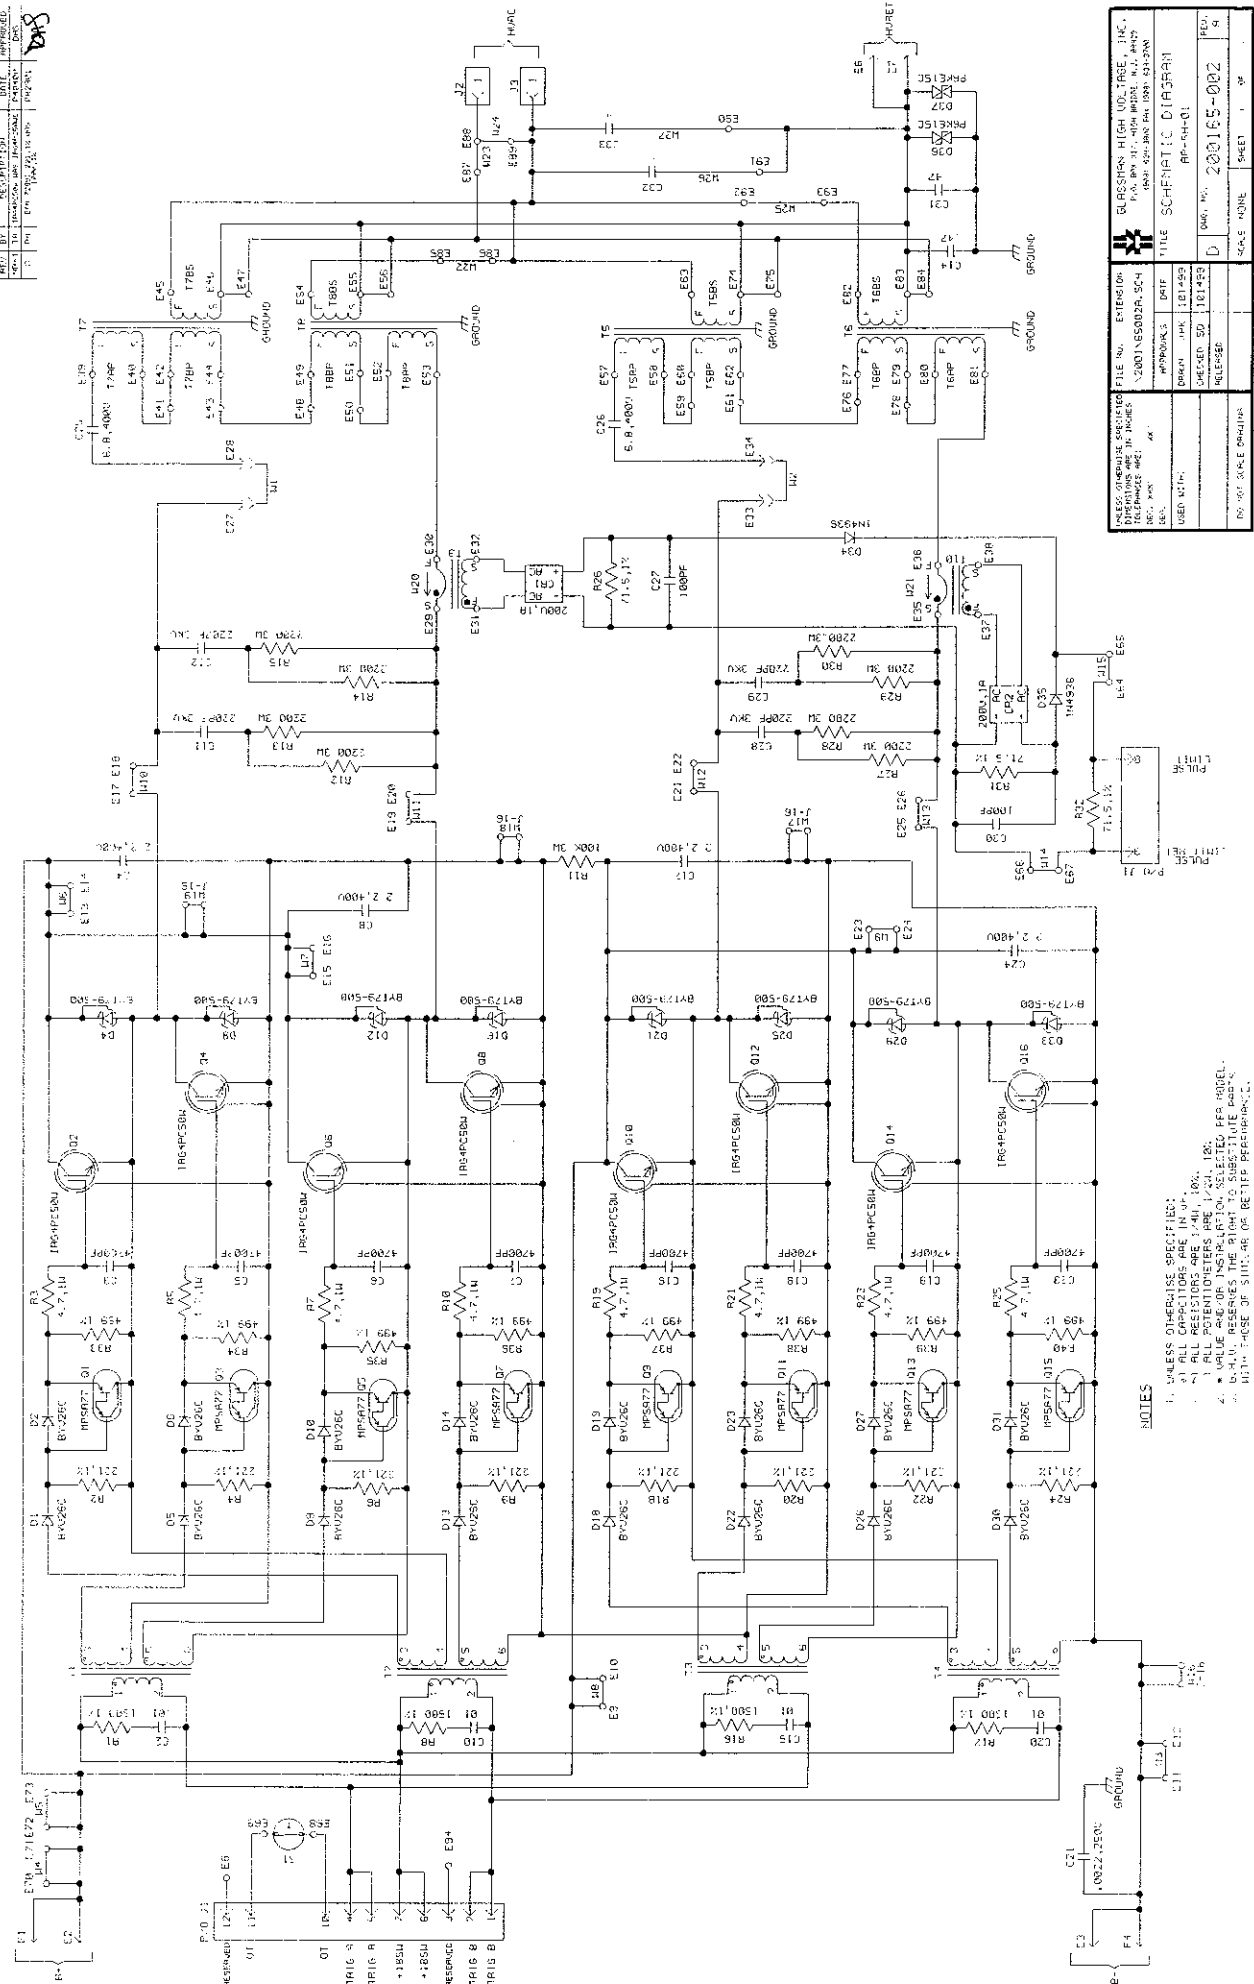

CLASSIFICATION	FILE NO.	STATION
CLASSEN HIGH VOLTAGE TRANSFORMER	1200155002A	SC4
DATE	BY	CHKD
04/11/2011	WJ	WJ
USED	NOT USED	RELEAS
YES	NO	NO
DATE	BY	CHKD
04/11/2011	WJ	WJ
USED	NOT USED	RELEAS
YES	NO	NO

# NOTES


1. VALUES OTHERWISE SPECIFIED:
2. ALL CAPACITORS ARE IN  $\mu$ F.
3. ALL RESISTORS ARE  $1/4W$ , 10%.
4. ALL POTENTIOMETERS ARE  $10K$ , 10%.
5. \* VALUE AND/OR INSULATION SELECTED PER MODEL.
6. \*\* IN THE CASE OF SILENT, OR BETTER PERFORMANCE.

REV	BY	DESCRIPTION	DATE	APPROVED

# AP-SH-1, </=6KV


This assembly is the same as AP-SH-1 (schematic # 200165-002), with the following schematic modifications:

1. C14, C31, D36, D37, E6 & E7 are removed.
2. HV secondaries T5BS, T6BS, T7BS & T8BS, along with their associated components, are rewired as shown below.

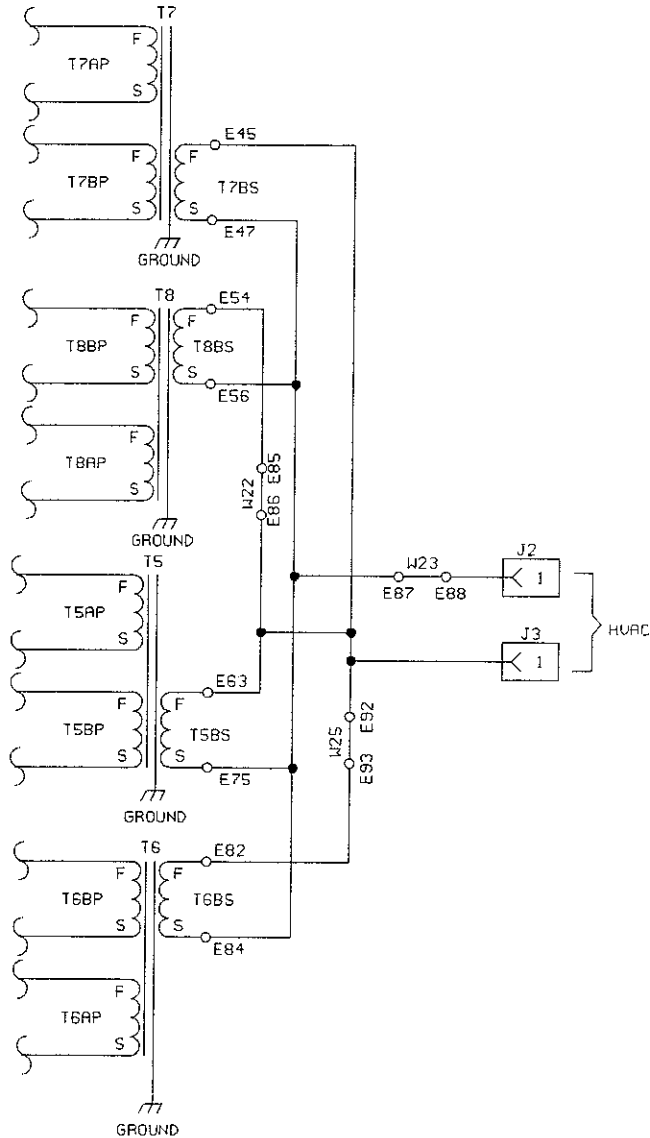


UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE: DEC XXX' XX' DEG. 2 USED WITH: DO NOT SCALE DRAWING	FILE NO. EXTENSION \2001\65002\101# SCH		GLASSMAN HIGH VOLTAGE, INC. P.O. BOX 551 WHITEHOUSE STATION, N.J. 08889 (509) 534-5007 FAX (509) 534-5672	
	APPROVALS	DATE		TITLE
	DRAWN TJM	112100		SCHEMATIC DIAGRAM AP-SH-1 </=6KV
	CHECKED <i>DS</i>	11/24/00		
	RELEASED			
DWG. NO. A 200165-002-101		REV. NR 1	SCALE NONE SHEET 1 OF 1	

REV	BY	DESCRIPTION	DATE	APPROVED

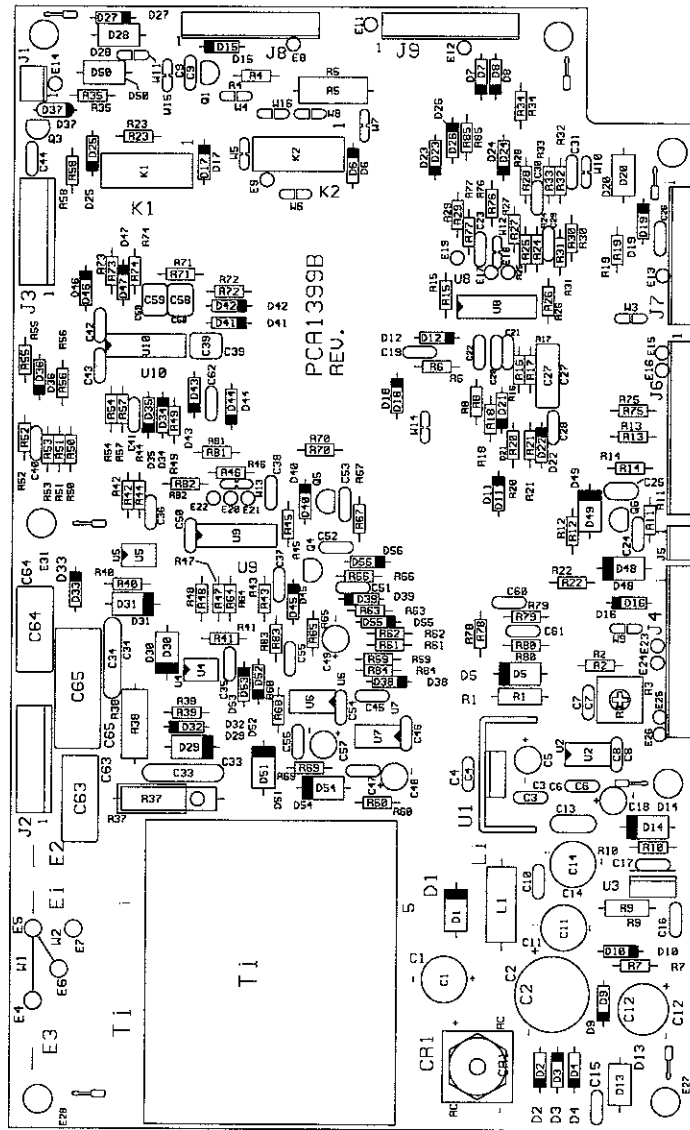


<b>GLASSMAN HIGH VOLTAGE, INC.</b> P.O. BOX 317, HIGH BRIDGE, N.J. 08823 (908) 536-3800 FAX (908) 536-3700		<b>TITLE</b> PARTS PLACEMENT APC-SH-01 (PCA1399B)	
<b>FILE NO.</b> APC1399027#-PCB		<b>REV.</b> PCA1399-007	
<b>APPROVALS</b> APPROVED DATE 07/10/03		<b>SCALE</b> NONE	
<b>THIRD ANGLE PROJECTION</b> DO NOT SCALE DRAWING		<b>SHEET</b> 1 OF 1	

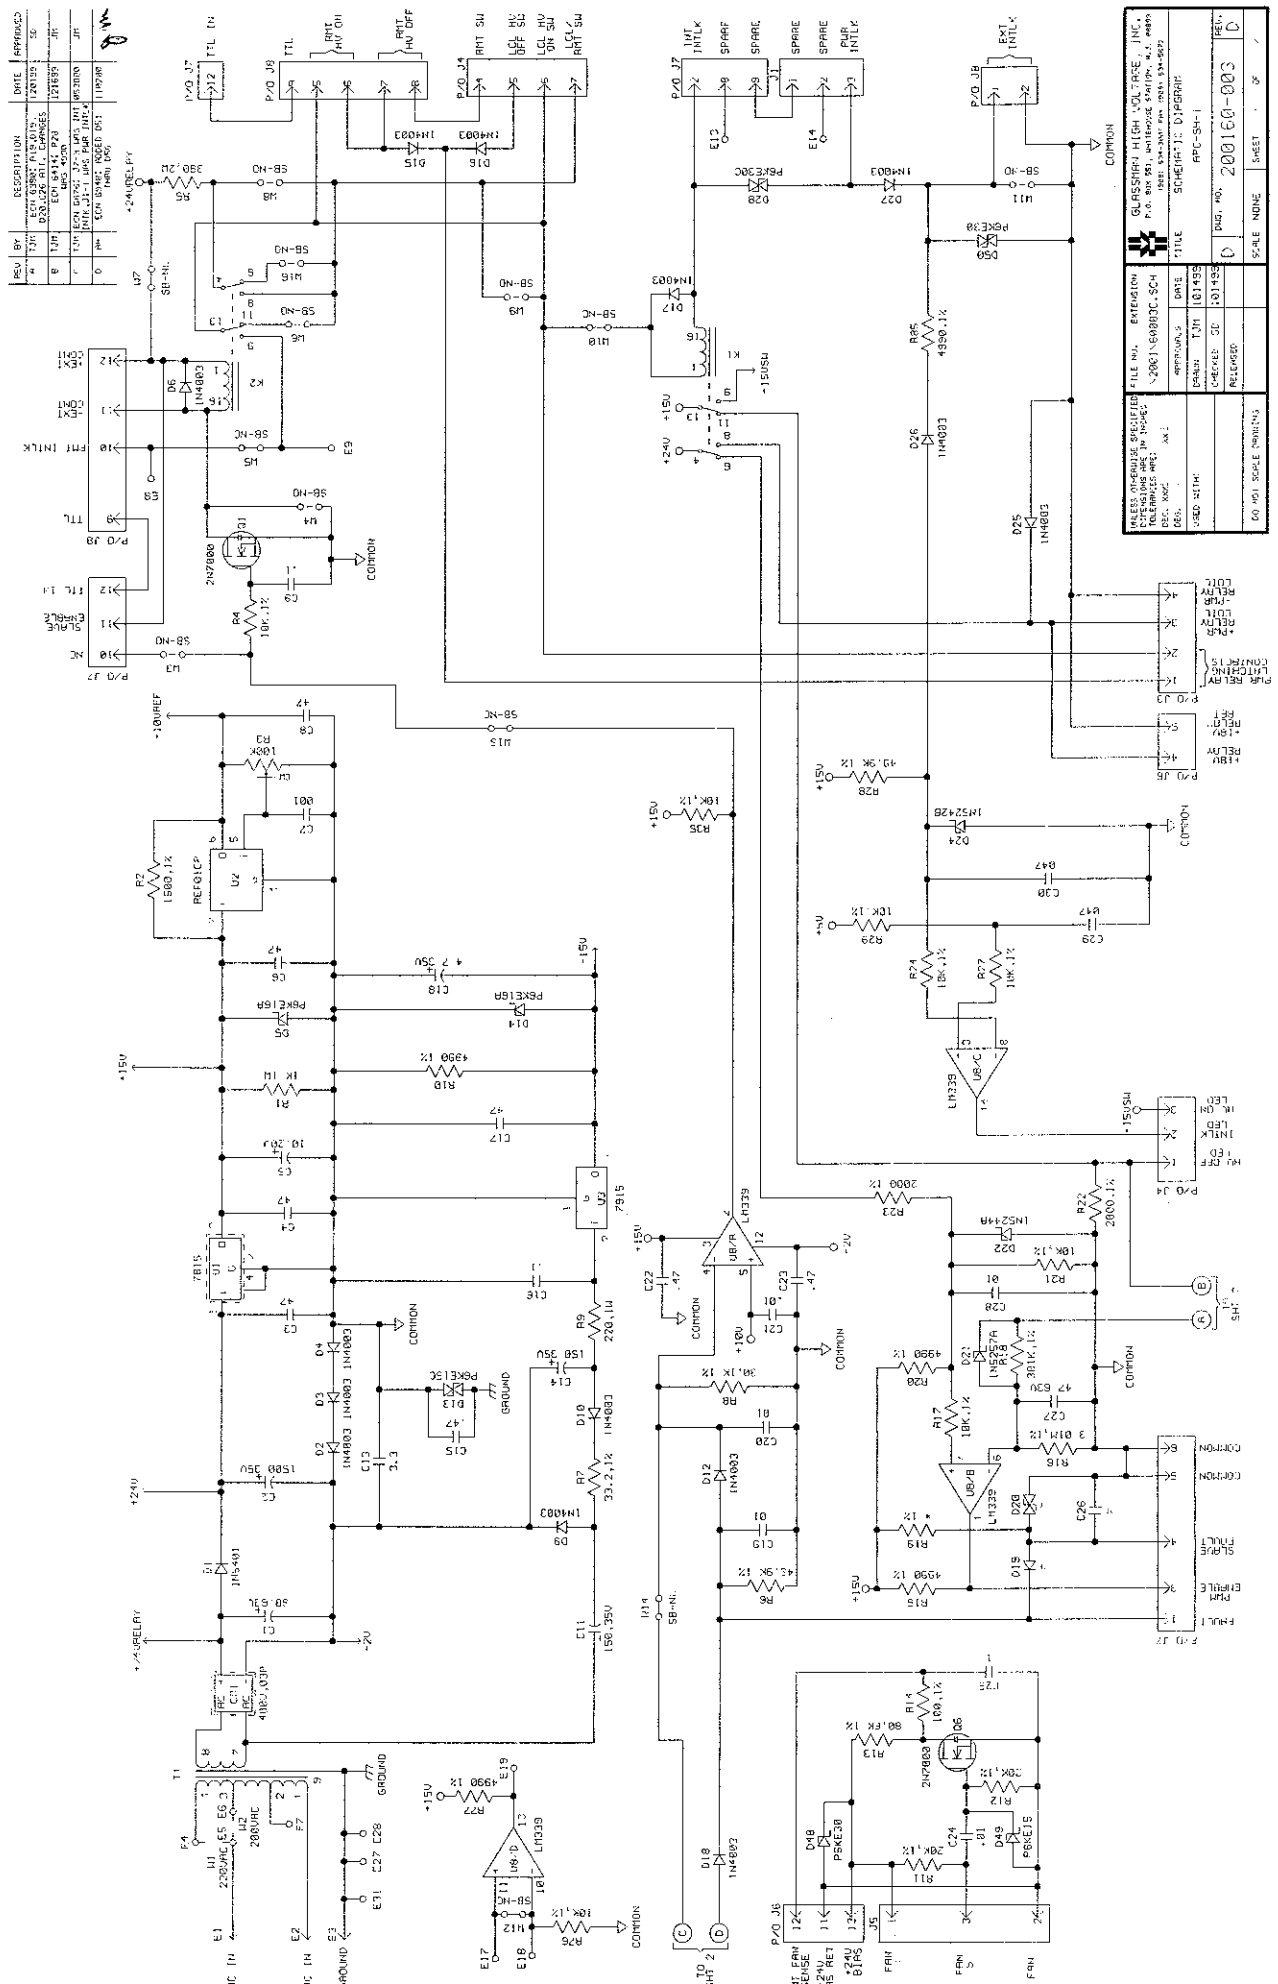



REV	BY	DESCRIPTION	DATE	APPROVED
1	JH	INITIAL DESIGN	05/08/00	JH
2	JH	REVISIONS	05/08/00	JH
3	JH	REVISIONS	05/08/00	JH

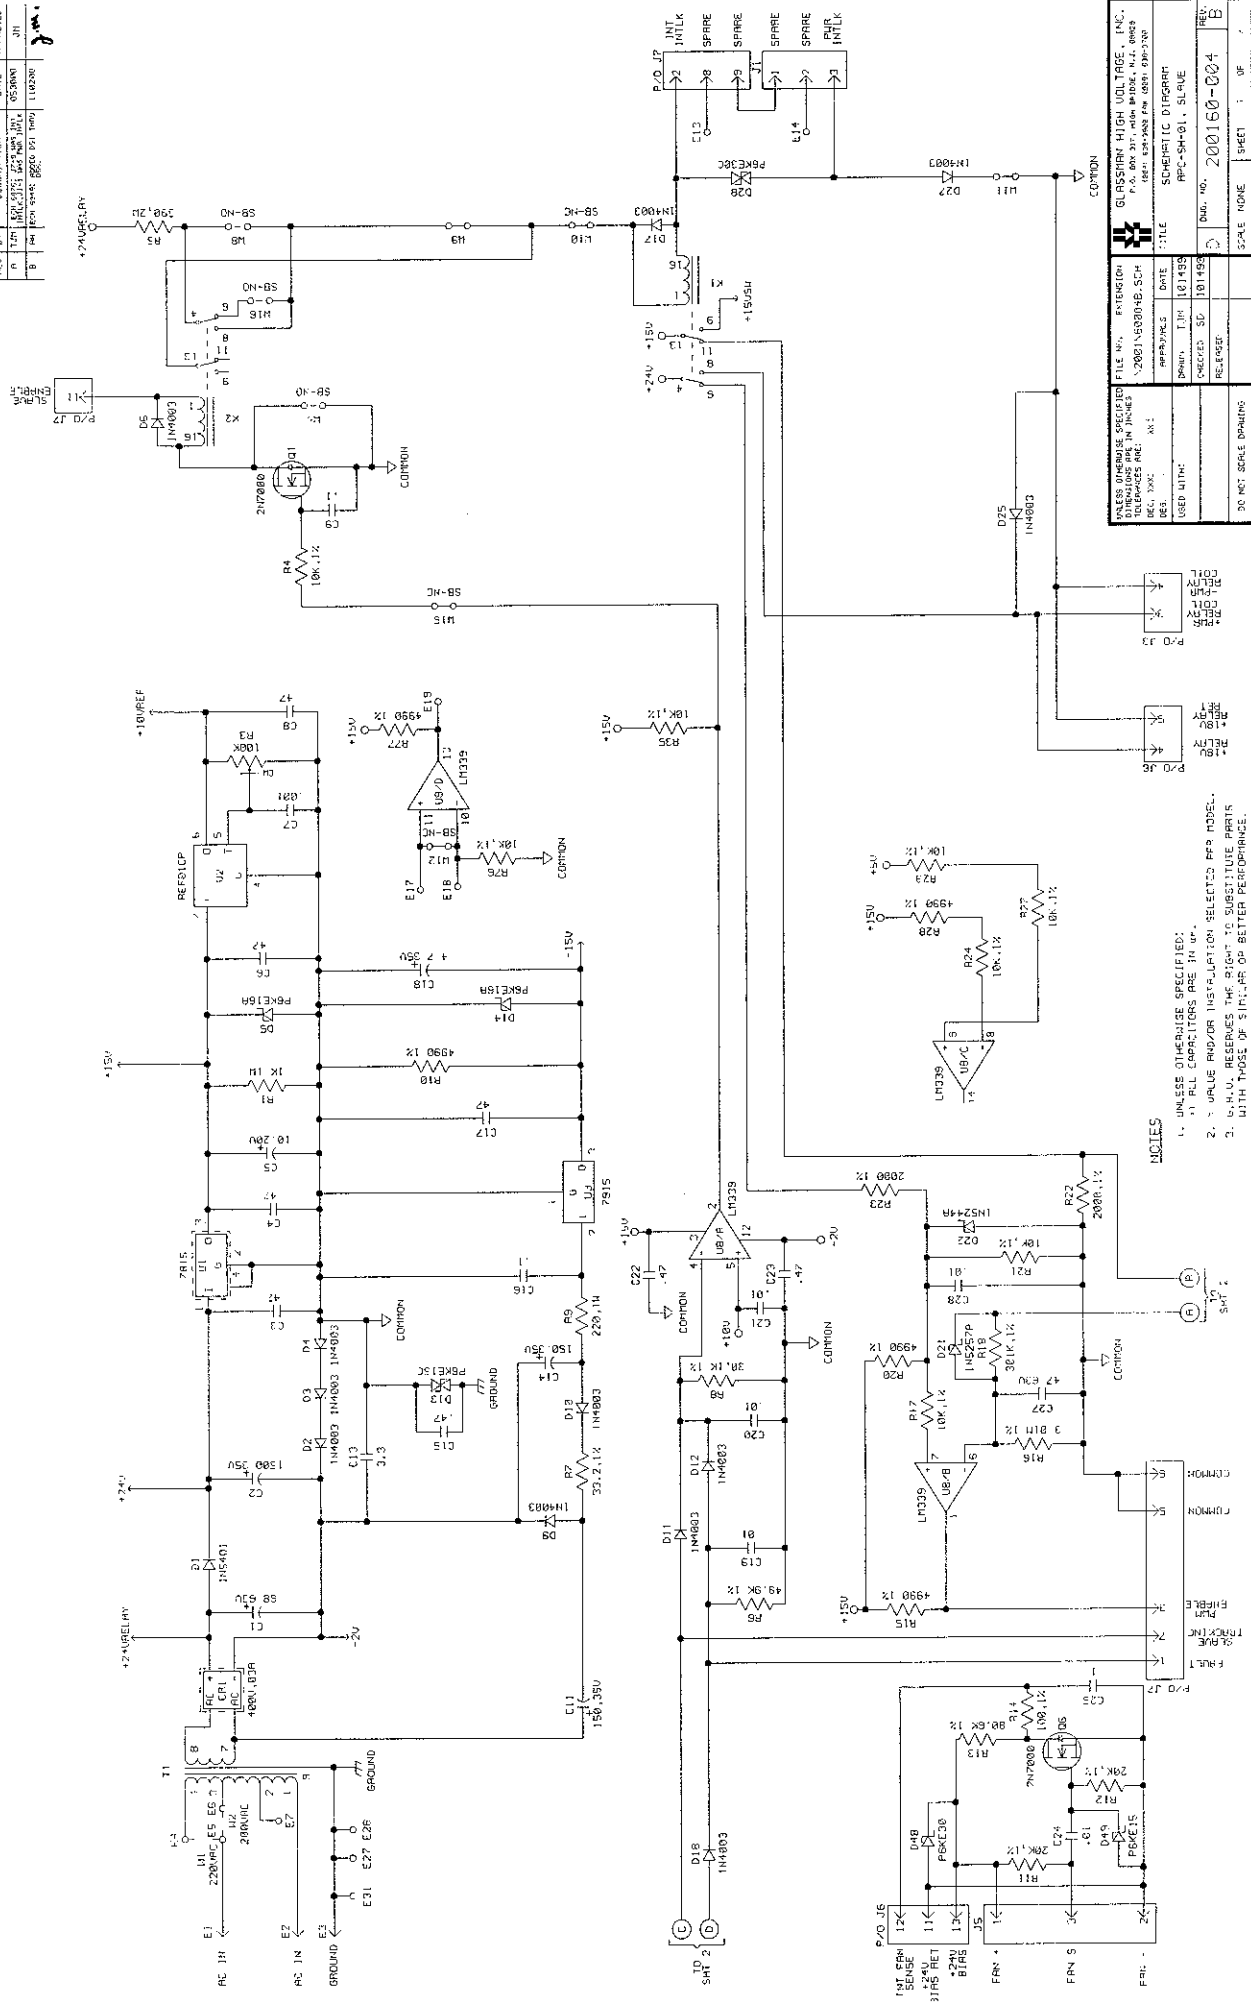


# NOTES

1. UNLESS OTHERWISE SPECIFIED:
2. 1. ALL CAPACITORS ARE IN  $\mu$ F.
3. 2. ALL VALUES ARE THE BEST TO SUBSTITUTE PARTS WITH THOSE OF SIMILAR OR BETTER PERFORMANCE.

FILE NO.	EXTENSION	DATE	SCALE	NO.	SHEET
20016004	20016004	05/08/00	1:1	1	1
20016004	20016004	05/08/00	1:1	1	1


FILE NO.	EXTENSION	DATE	SCALE	NO.	SHEET
20016004	20016004	05/08/00	1:1	1	1
20016004	20016004	05/08/00	1:1	1	1

REV	BY	DESCRIPTION	DATE	APPROVED
-----	----	-------------	------	----------

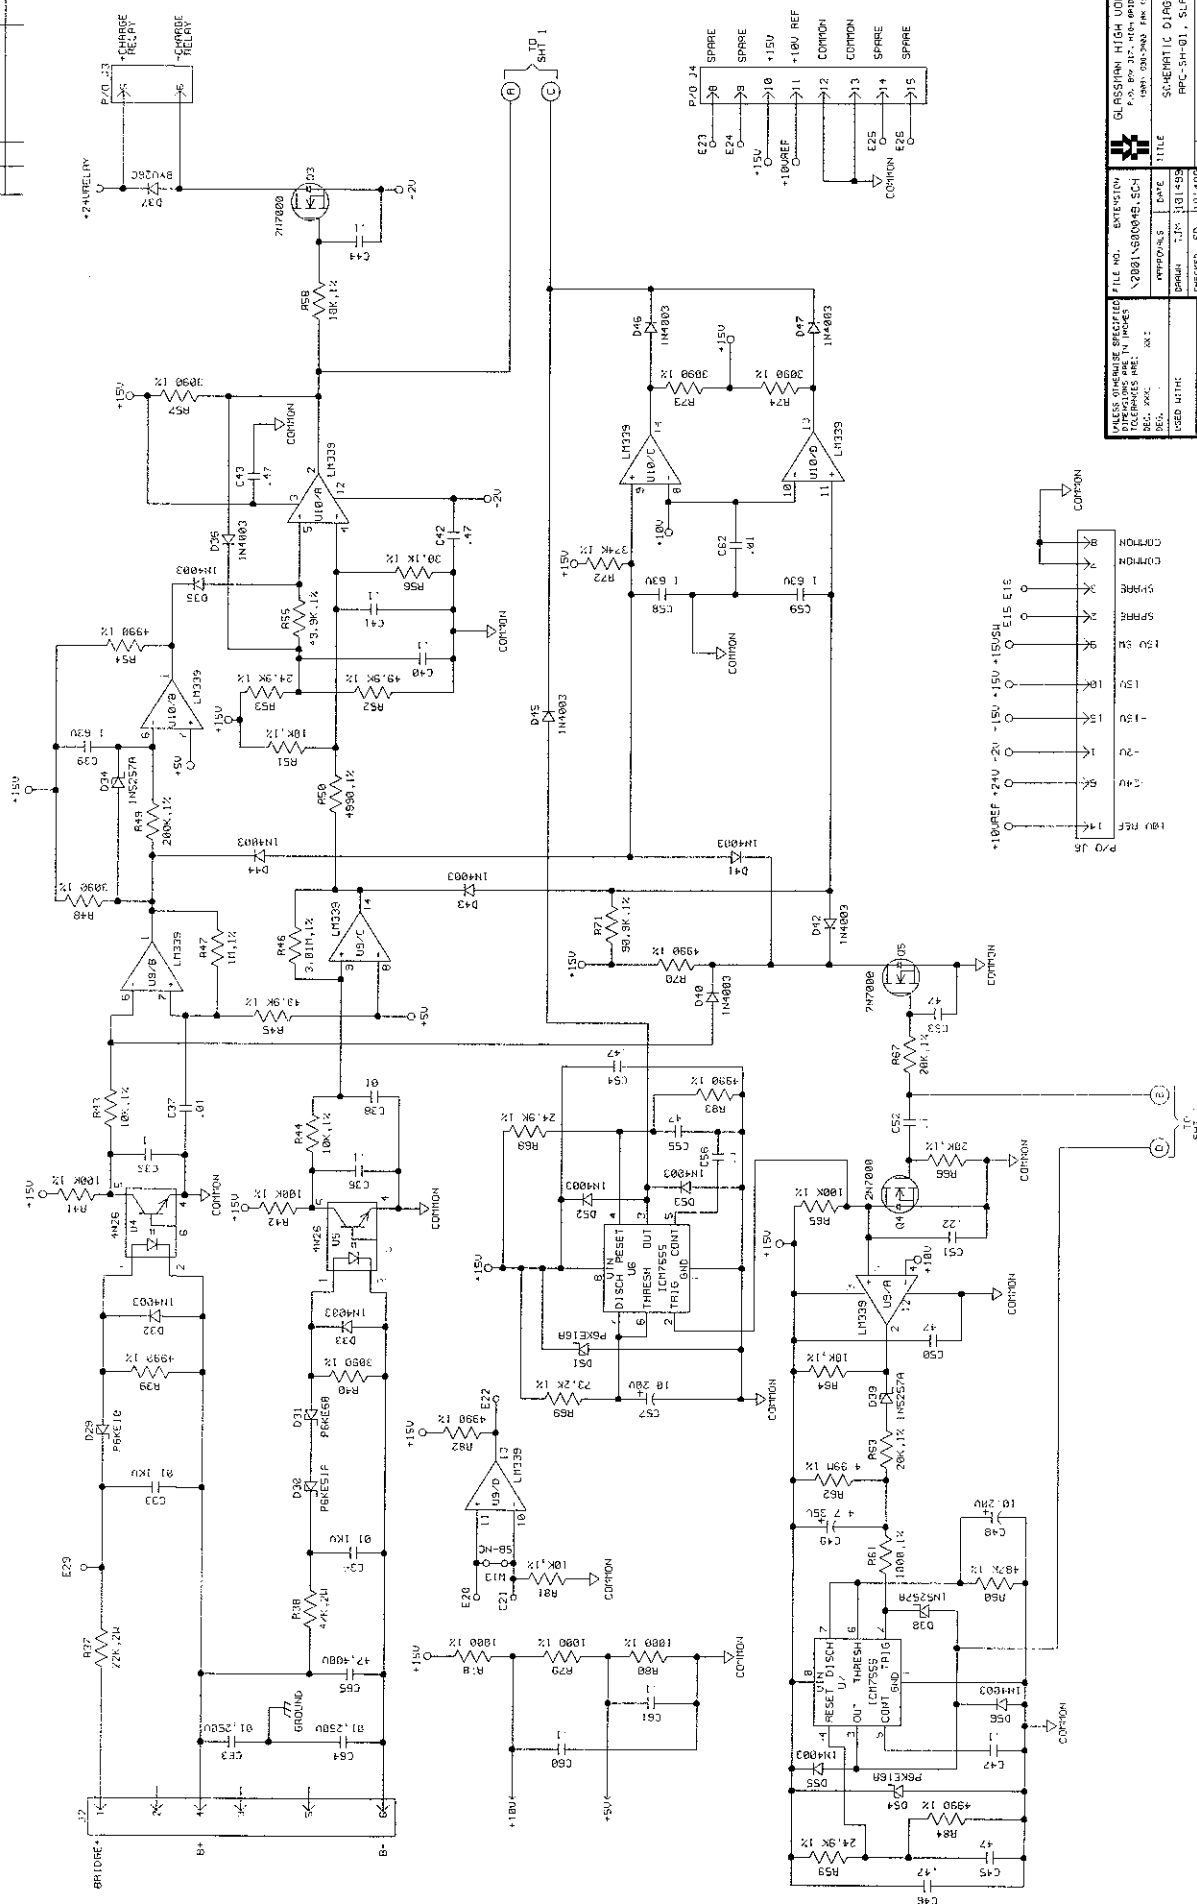

FILE NO. EXTENSION 9201-000009-504	GLASSING HIGH VOLTAGE, INC. 1000 W. 10TH AVE. ST. LOUIS, MO. 63103 (314) 521-5700 FAX (314) 521-5701
ORDER NO. 101495 DRAWN BY: JIM CHECKED BY: JIM RELEASED	SO-CENTRAL DIAGRAM RPPC-SH-01 - SLAVE Dwg. No. 200158-004 REV. B
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES DEC. 2001	SCALE: NONE SHEET 2


REV	BY	DESCRIPTION	DATE	APPROVED
A	TJM	ECN 6151: REMOVED ITEM 2.	061498	JMC
B	TJM	ECN 6306: AVB LMS ATB	102859	<i>clm</i>

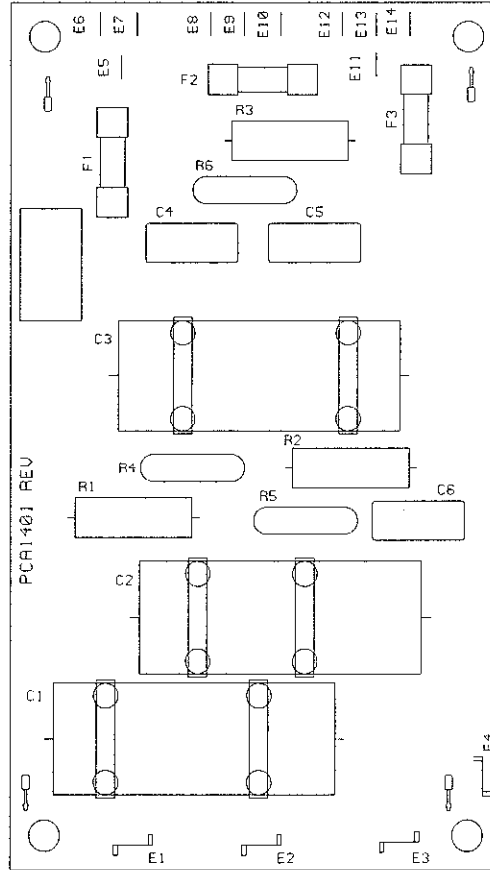

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE : DEC. .XXX + DEG. +		FILE NO. EXTENSION \PCA1\401002B.PCB		GLASSMAN HIGH VOLTAGE, INC. P.O. BOX 551, WHITEHOUSE STATION, N.J. 08883 (908) 534-8007 FAX (908) 534-5672	
APPROVALS DRAWN TJM CHECKED JMC RELEASED		DATE 031999 032399		TITLE PARTS PLACEMENT AVB-SH-01	
THIRD ANGLE PROJECTION DO NOT SCALE DRAWING		SCALE 1 TO 1		SHEET 1 OF 1	
DIM. NO. PCA1401-002		REV. B		DATE 10/28/99	



REV	BY	DESCRIPTION	DATE	APPROVED
A	TJM	ECN 6256; F3 WAS 1A.	080999	JM
B	TJM	ECN 6306; AUB WAS ATB.	102899	<i>CPM</i>

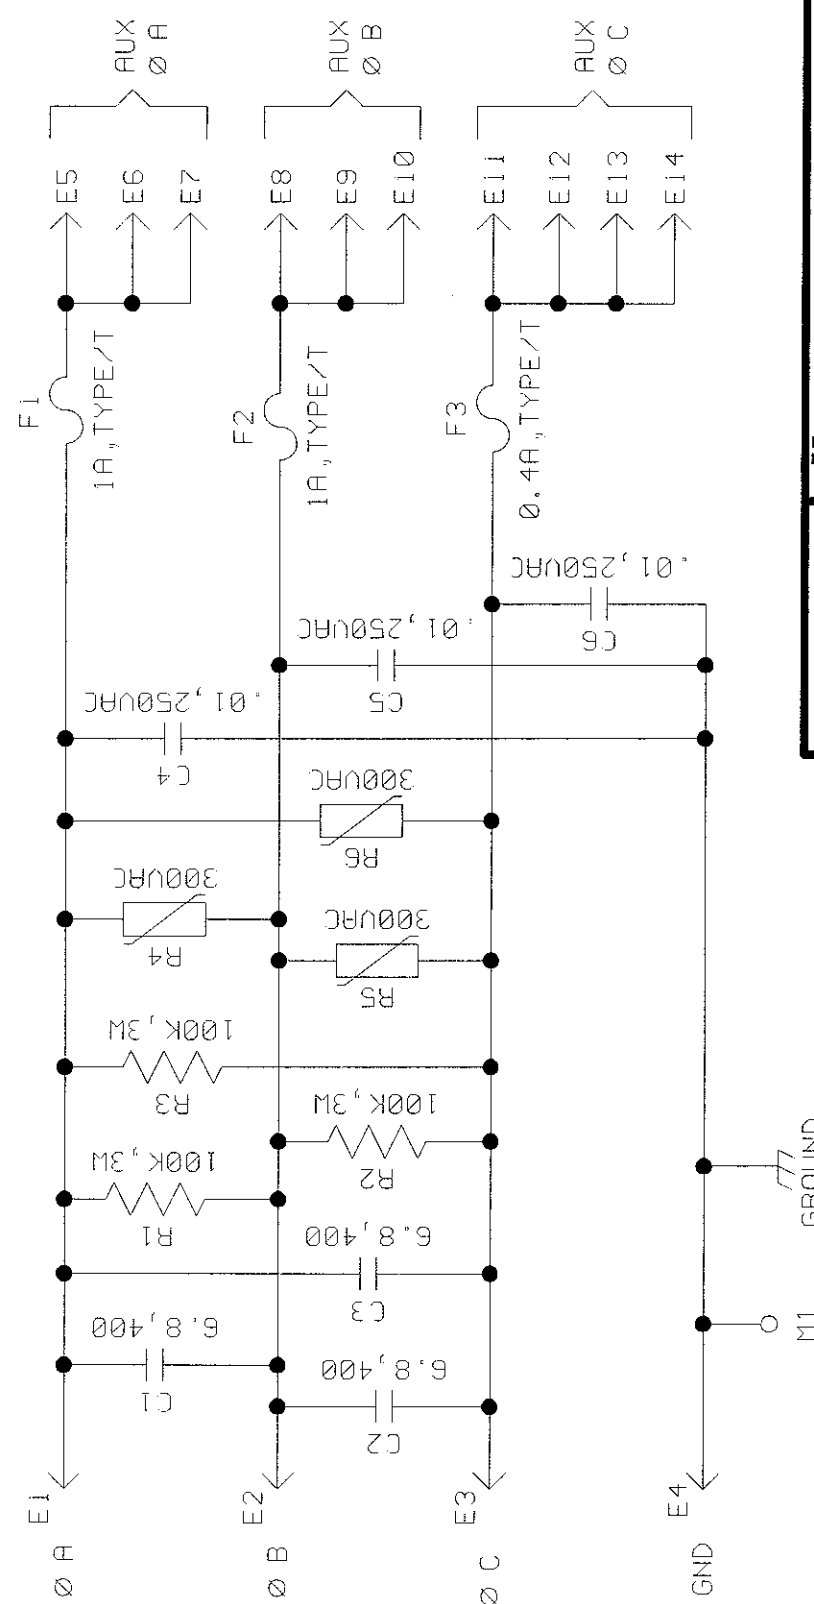


# NOTES


 
- UNLESS OTHERWISE SPECIFIED:  
a) ALL CAPACITORS ARE IN  $\mu\text{F}$ .
- \* VALUE AND/OR INSTALLATION SELECTED PER MODEL.
- G.H.U. RESERVES THE RIGHT TO SUBSTITUTE PARTS WITH THOSE OF SIMILAR OR BETTER PERFORMANCE.

FILE NO. EXTENSION		DATE	
\2001\63001B.SCH		042699	
APPROVAL	TJM	CHECKED	SD
RELEASED		RELEASED	
TITLE		SCHEMATIC DIAGRAM	
AUB-SH-01		REV.	
A		200163-001	
SCALE		NONE	
SHEET		OF	


GLASSMAN HIGH VOLTAGE, INC.  
P.O. BOX 551, WHITEHOUSE STATION, N.J. 08889  
(908) 534-9007 FAX (908) 534-5672

REV	BY	DESCRIPTION	DATE	APPROVED

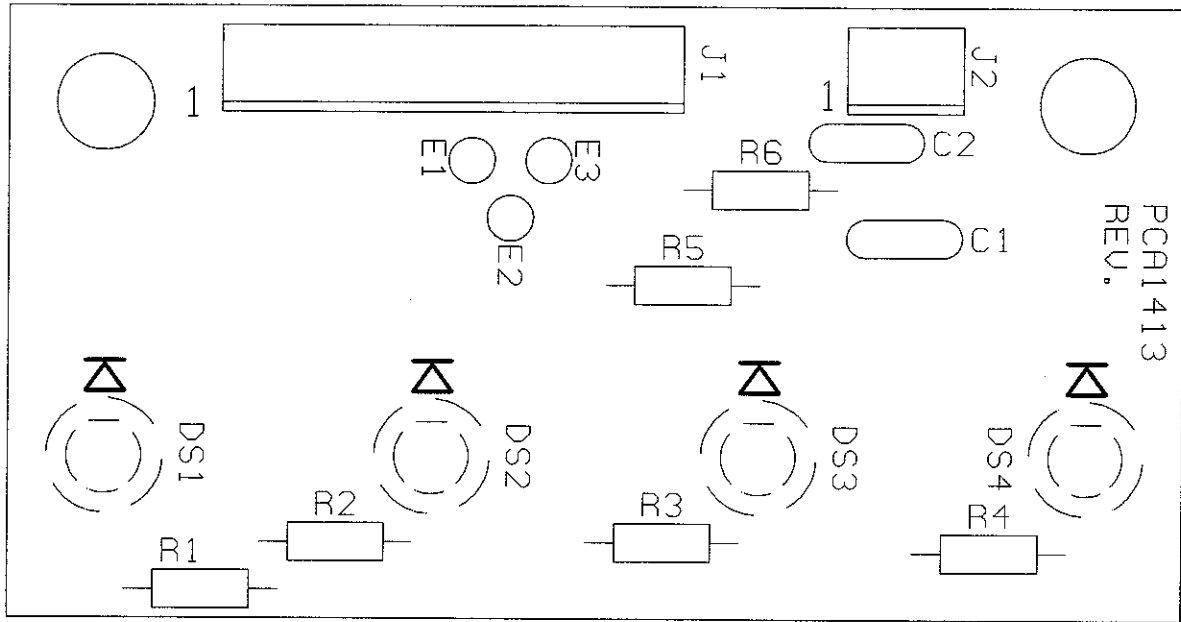

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES TOLERANCES ARE : DEC. XXX ±      XX ± DEG. ±	FILE NO. EXTENSION		 GLASSMAN HIGH VOLTAGE, INC. P.O. BOX 551, WHITEHOUSE STATION, N.J. 08889 (908) 534-9007 FAX (908) 534-5672
	PCA1\413002#.PCB		
	APPROVALS	DATE	
	TITLE PARTS PLACEMENT ADS-SH		
 THIRD ANGLE PROJECTION DO NOT SCALE DRAWING	DRAWN TA	081999	DWG. NO. PCA1413-002 REV. NR
	CHECKED Jue	091499	
	RELEASED		
SSF	SCALE NONE	SHEET 1 OF 1	

REV	BY	DESCRIPTION	APPROVED
A	JAG	ECN 8143: REMOVED R5 & R6.	101804 <i>OST</i>

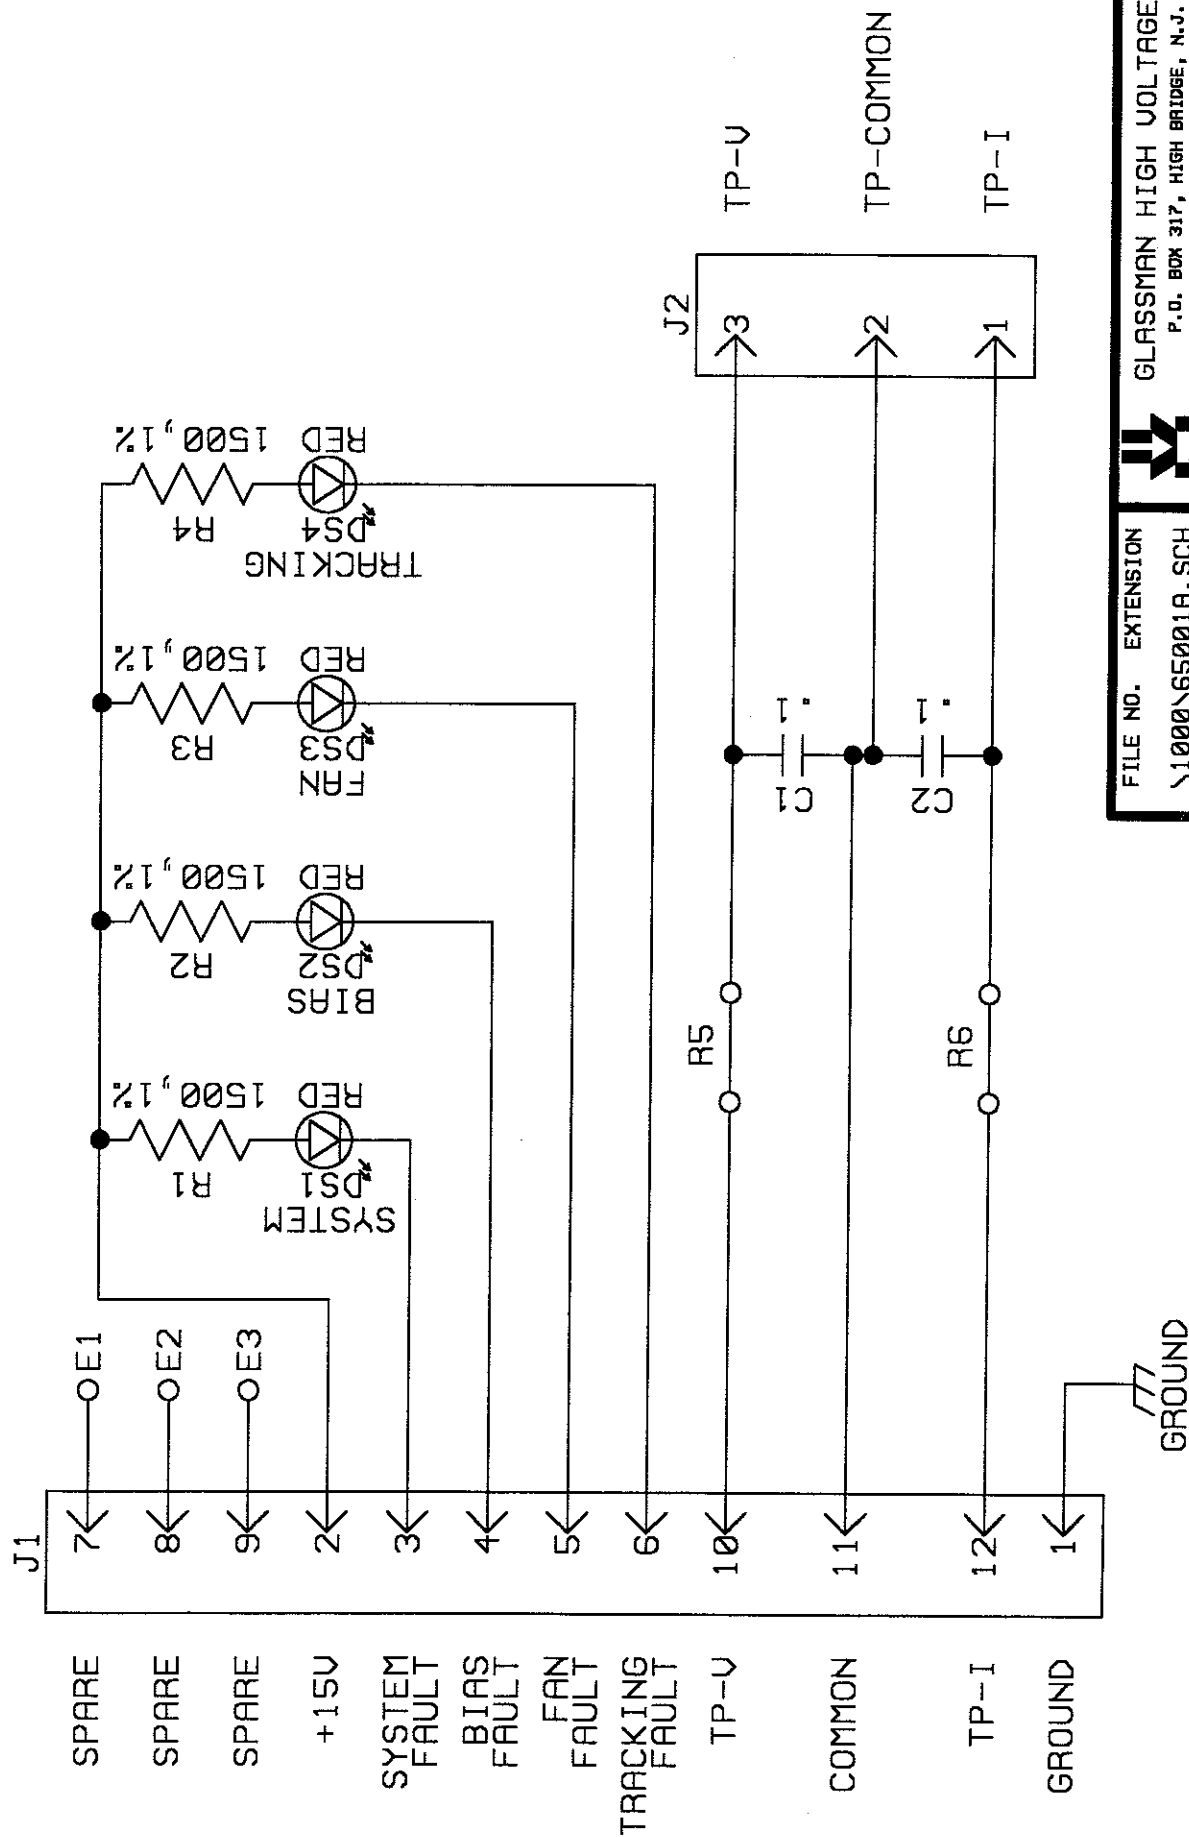

## NOTES

1. UNLESS OTHERWISE SPECIFIED ALL CAPACITORS ARE IN  $\mu F$ .
2. \* VALUE AND/OR INSTALLATION SELECTED PER MODEL.
3. G.H.V. RESERVES THE RIGHT TO SUBSTITUTE PARTS WITH THOSE OF SIMILAR OR BETTER PERFORMANCE.



GLASSMAN HIGH VOLTAGE, INC.  
P.O. BOX 317, HIGH BRIDGE, N.J. 08829  
(908) 638-3800 FAX (908) 638-3700

FILE NO. EXTENSION  
1000\65001A.SCH

APPROVAL	DATE
DRAWN TA	081999
CHECKED SD	091499
RELEASED	

TITLE  
SCHEMATIC DIAGRAM  
ADS-SH  
SLAVE

DWG. NO. 100065-001  
REV. A

SCALE NONE | SHEET 1 OF 1

**Glassman High Voltage, Inc.**  
Power Supply Test Data Sheet

Model PS/SH001R16.0

Serial No. N144732-01

- I. Preliminary Mechanical Inspection ✓
- II. Preliminary Electrical Check ✓
- A. Reference Voltage 10.00 V
- B. Maximum Output Voltage (No Load) +1.000 KV
- C. Maximum Output Current 16,000 mA
- D. Switching Frequency 40.0 KHz
- E. Stability ✓
- F. Dropout 180 VAC

III. Control Functions

- A. Voltage Program Linearity 10.00 v = 1.00 KV; 1.00 v = .100 KV; 0v = 0 KV
- B. ΔV: Voltage Program / Voltage Monitor 2.4 mV
- C. Voltage Program Remote ✓
- D. Current Program Linearity 10.00 v = 100.25%; 1.00 v = 9.87%; 0v = 0 %
- E. ΔV: Current Program / Current Monitor 7.8 mV
- F. Current Program Remote ✓
- G. Interlock ✓ HV Enable ✓
- H. KV Meter ✓ MA Meter ✓

IV.

Data	Line V	Line Current	B+	Output V	Output I		Ripple vp-p	
	VAC	IAC	VDC	KV	%	Total	Line freq.	RF
Full Load	208	56	280	1.00	95.2	1.4	0.9	0.5
No Load	208	6.0	295	1.00	0	0.48	0.28	0.20
Current Limit	208	52	280	.88	100.2	2.0	1.4	0.6
Short Circuit	208	8.4	295	0	100.4	0	0	0

V. Regulation: No Load – Full Load .18 v ✗ Line 187.228 VAC <.005%

VI. Burn – In 4 Hours

Technician Terry Hochmanburg Date 2/15/2006